

KTB7030 REV. 3 11/25/24 KTB7040 KTB7050 KTB7060


KTB7030 SQUARE PICNIC TABLE

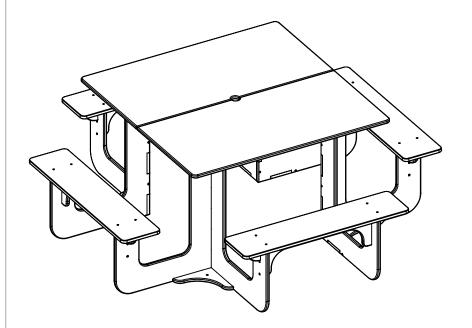


KTB7040 SQUARE WHEELCHAIR ACCESIBLE PICNIC TABLE

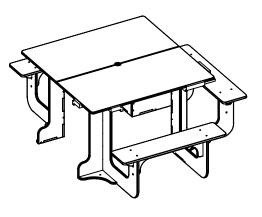



KTB7050 SQUIRCLE PICNIC TABLE

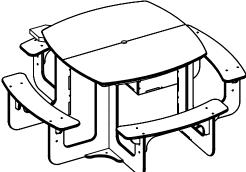


KTB7060 SQUIRCLE WHEELCHAIR ACCESIBLE PICNIC TABLE

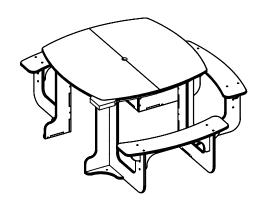

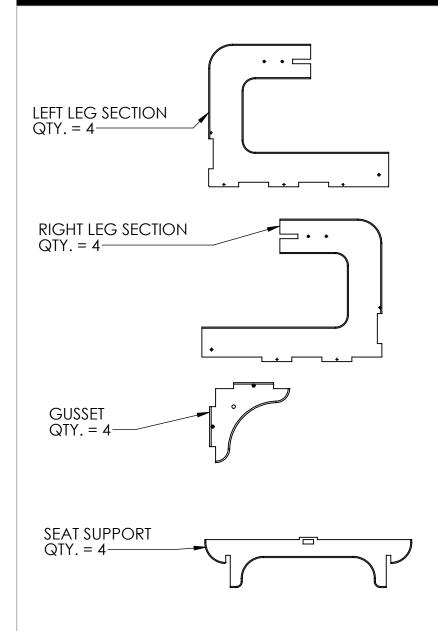

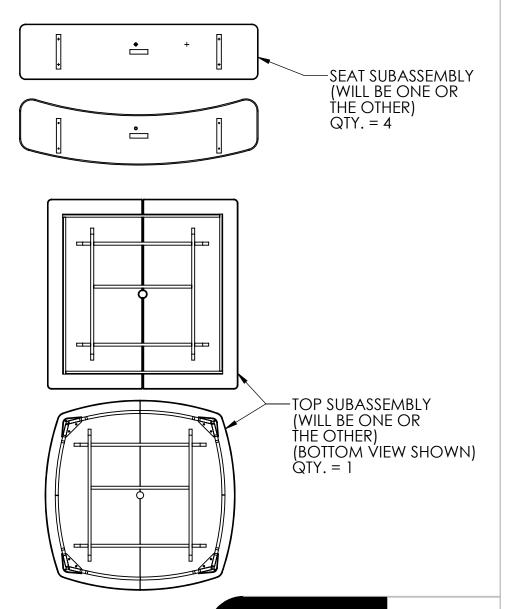

COMPONENTS REQUIRED FOR ASSEMBLY

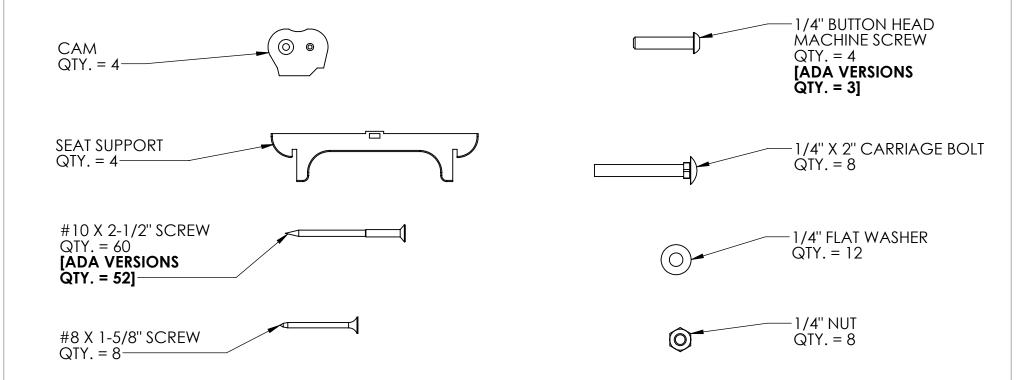



REQUIRED TOOLS (NOT INCLUDED)

1 - 7/16" WRENCH or SOCKET


- 1 POWER DRILL
- 1 RUBBER MALLET
- 1 #2 SQUARE DRIVE BIT


NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE TABLE IS ASSEMBLED

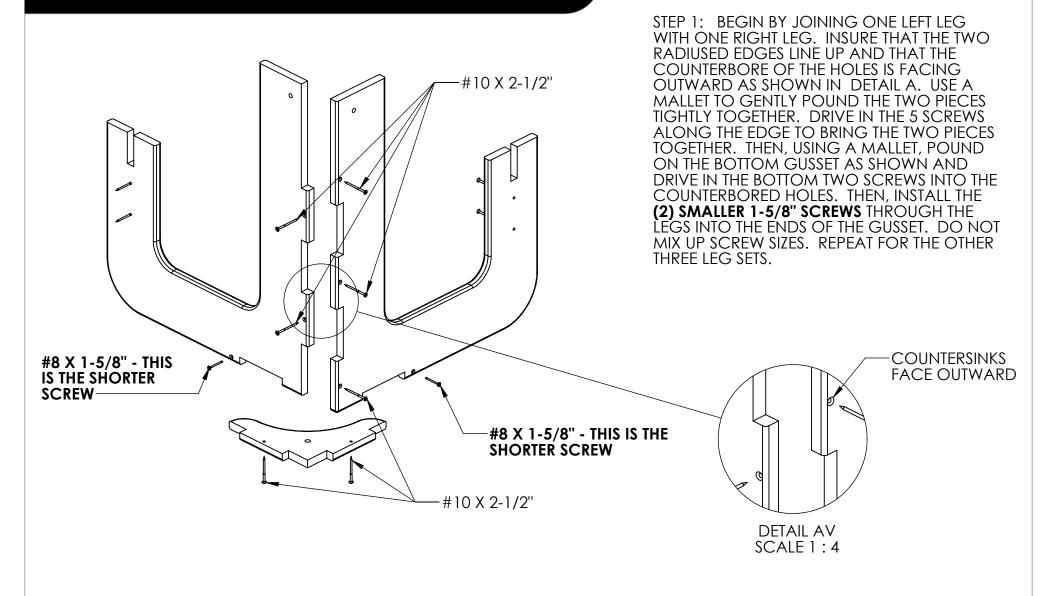

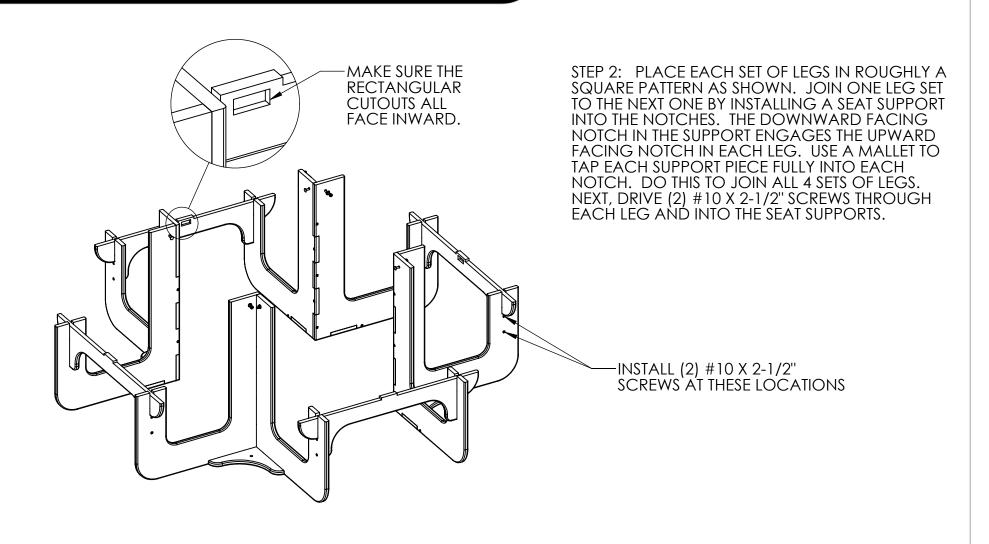



STEP 3: PLACE SEAT ON SMOOTH, FLAT SURFACE WITH RECTANGULAR POCKETS FACING UP. ATTACH (1) CAM INTO THE THREADED INSERT USING 1/4-20 X 1-1/4" BUTTONHEAD SCREW WITH 1/4" WASHER. RUN SCREW IN BUT DON'T FULLY TIGHTEN YET. REPEAT FOR THE OTHER (3) SEATS. IF ASSEMBLING A SQUIRCLE TABLE, SEATS WILL HAVE A CURVE TO THEM. IF ASSEMBLING A WHEELCHAIR ACCESIBLE TABLE, THERE WILL ONLY BE (3) SEATS TOTAL.

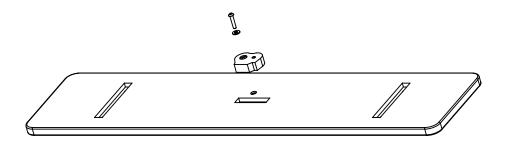

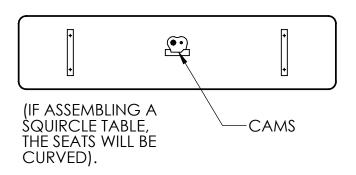



STEP 4: TAKE EACH SEAT AND SET IT ONTO THE TABS PROTRUDING UPWARD FROM THE SEAT SUPPORTS. INSURE THAT THE CAM ON THE BOTTOM OF EACH SEAT FACES INWARD. ROTATE EACH CAM CLOCKWISE SO IT LOCKS INTO EACH CUTOUT IN THE SEAT SUPPORTS. LOOSEN THE BUTTON HEAD SCREWS IF NECESSARY UNTIL EACH CAM IS FULLY ENGAGED. TIGHTEN EACH MACHINE SCREW SECURELY. THEN INSTALL (4) #10 X 2-1/2" THROUGH THE TOP OF EACH SEAT INTO THE LEGS. INSTALL JUST UNTIL FLUSH, WITHOUT OVERDRIVING THEM.

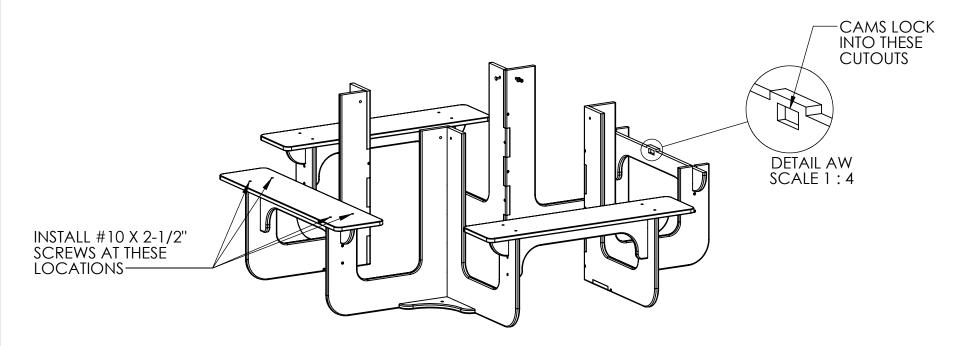


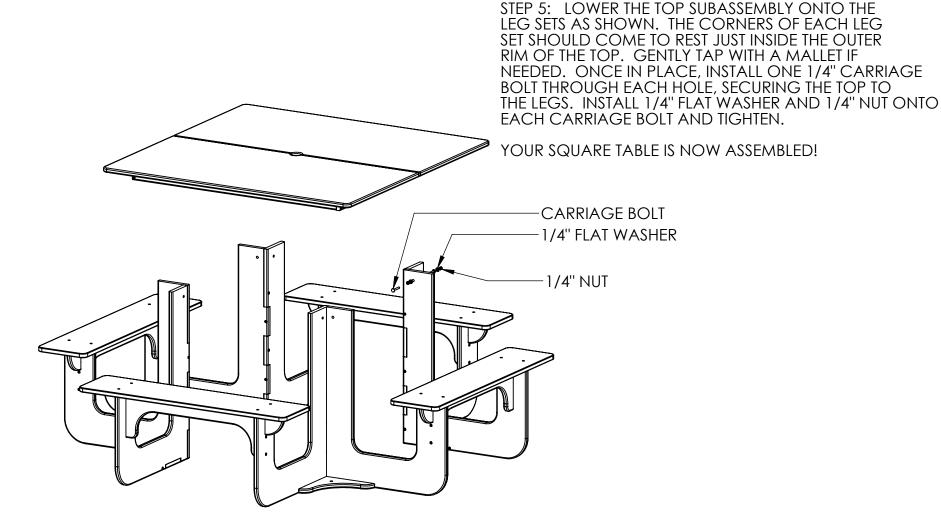


ALL DIMENSIONS ARE SHOWN IN INCHES

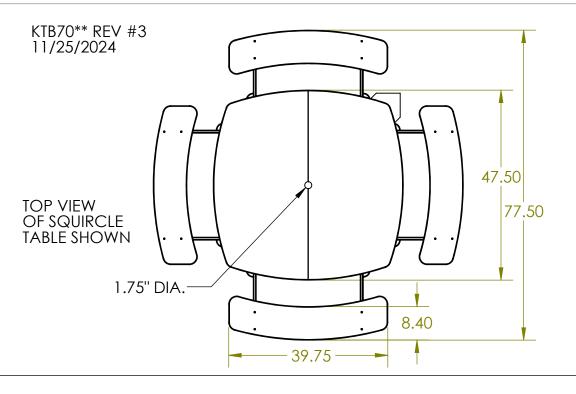


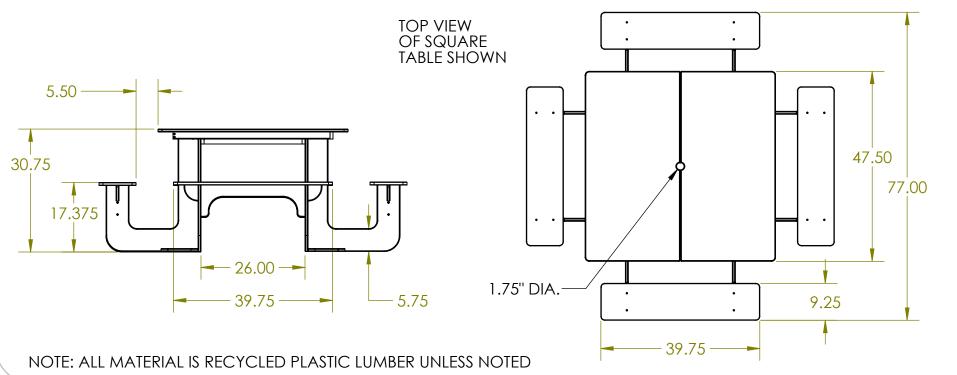

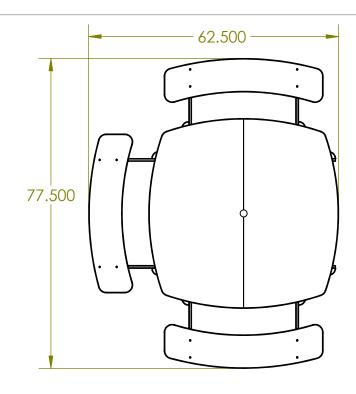

TOP VIEW
OF SQUIRCLE
WHEELCHAIR
ACCESIBLE
TABLE SHOWN

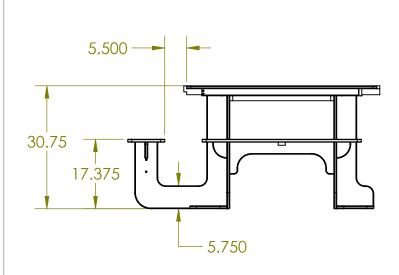

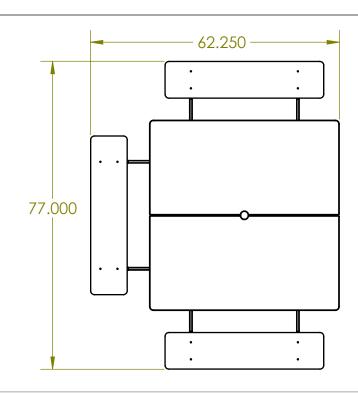

TOP VIEW
OF SQUARE
WHEELCHAIR
ACCESIBLE
TABLE SHOWN