


Assembly Instructions

4' Brown & Cedar Bench w/Powder-Coated Frame

Before assembly, be sure that all components are included.

Part List	Description	Qty.	Drawings
A	Right Armrest	1	
B	Left Armrest	1	
C	Backrest	1	
D	Seat	1	
E	Long Bolt	4	
F	Short Bolt	4	
G	Washer	4	
L	Allen Wrench	1	


Tool required: Allen Wrench (Provided)

- We suggest you thoroughly read and follow this simple step-by-step assembly instruction. Portions of the assembly may be easier with two people.
- Do not discard any of the packaging until you have checked that you have all the parts.
- Plastic polybags can be dangerous. Keep the bags away from babies and children to avoid danger of suffocation.
- Set out all parts on a clear, flat and level surface.
- Assemble all parts loosely before tightening any bolts or fixing.

- Check and ensure that all bolts are fully tightened when finishing assembling, but **DO NOT** over tighten.

Assembly Steps:

Step # 1: Attach Seat Panel (D) to the Left Armrest (B) and Right Armrest (A) by using Long Bolts (E). **Hand tighten!**

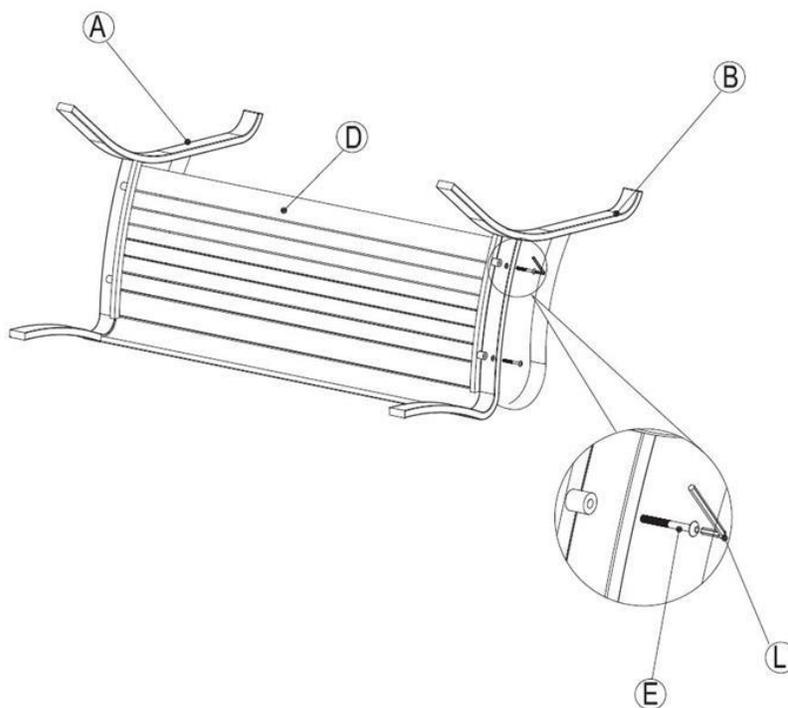

Step # 2: Attach the Backrest (C) to the Left Armrest (B) and Right Armrest (A) by using Short Bolts (F) and Washers (G). **Hand tighten!** Adjust the bench to a level position and tighten all the Bolts with Allen Wrench (H).

