




BIKE LOCKER INSTALLATION MANUAL

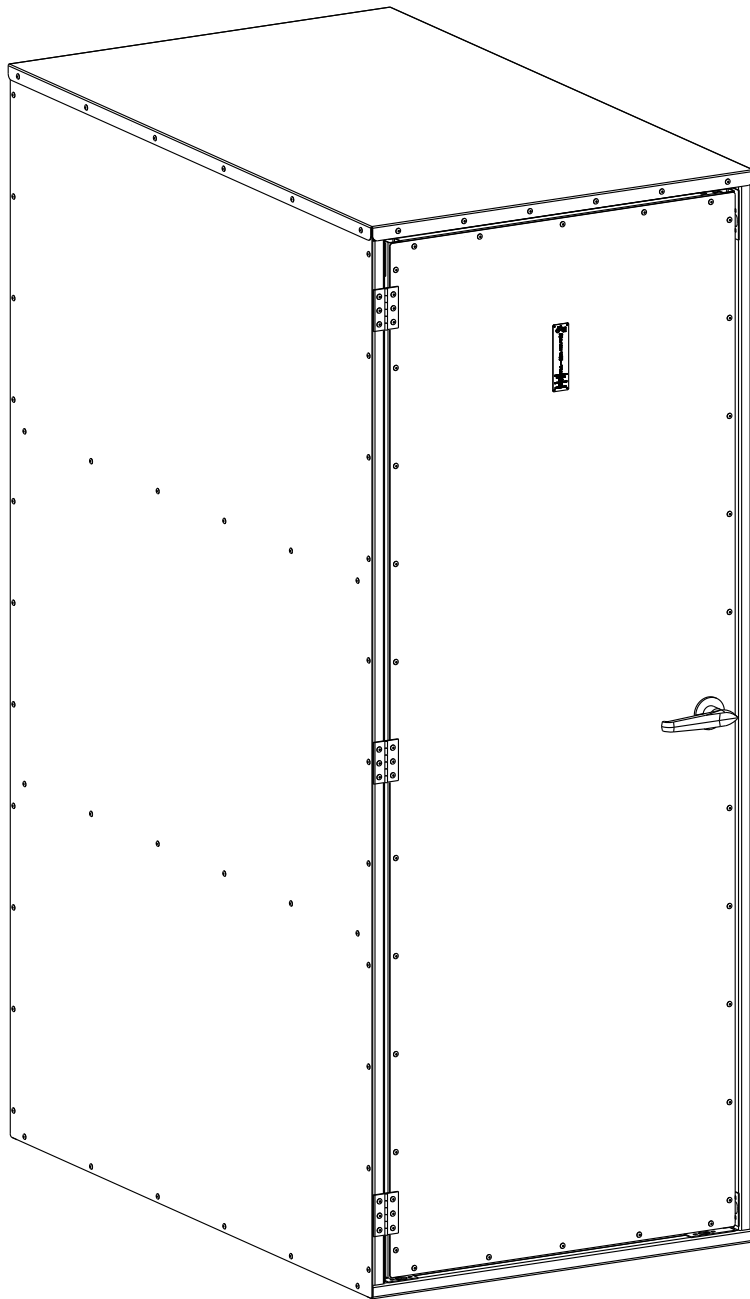


Existing

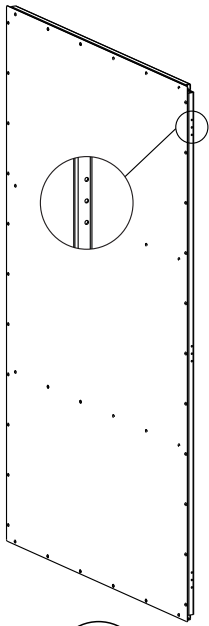


A

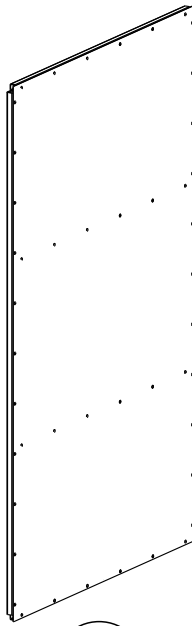


B




C

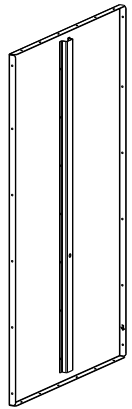


D




E




F




G




H

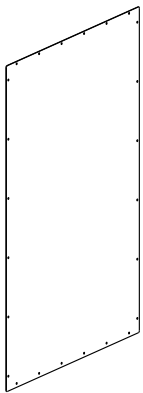


I

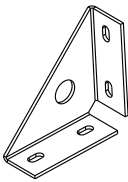


J

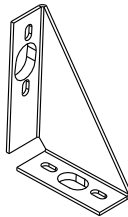


K

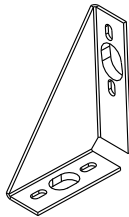

L

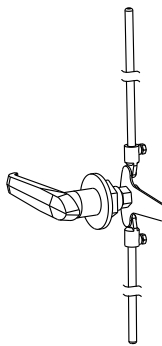

M




N



O



P



Q




R


Materials

Number	Description	Quantity
A	END PANEL ASSM A	1
B	END PANEL ASSM B	1
C	DOOR PANEL ASSM	1
D	TOP PANEL ASSM	1
E	BEAM TUBE A	1
F	BEAM TUBE B	1
G	BEAM TUBE C	2
H	BEAM TUBE D	1
I	BACK PANEL	2
J	CORNER STIFFENER	10
K	DOOR STOPPER A	2
L	DOOR STOPPER B	2
M	HANDLE	1
N	HOOK A	2
O	HOOK B	1
P	4.8*10mm RIVET	131
Q	DYNABOLT 12mm(M10)*60mm GAL	4
R	M12 PERCUSSION DRILL HAMMER	1


Requirement

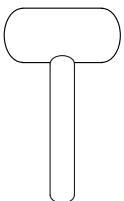


hammer×1

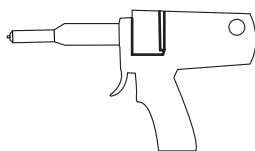

rivet gun×1

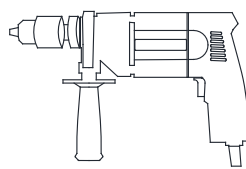

masonry drill×1




shifting spanner×1




worker×2

Step 1

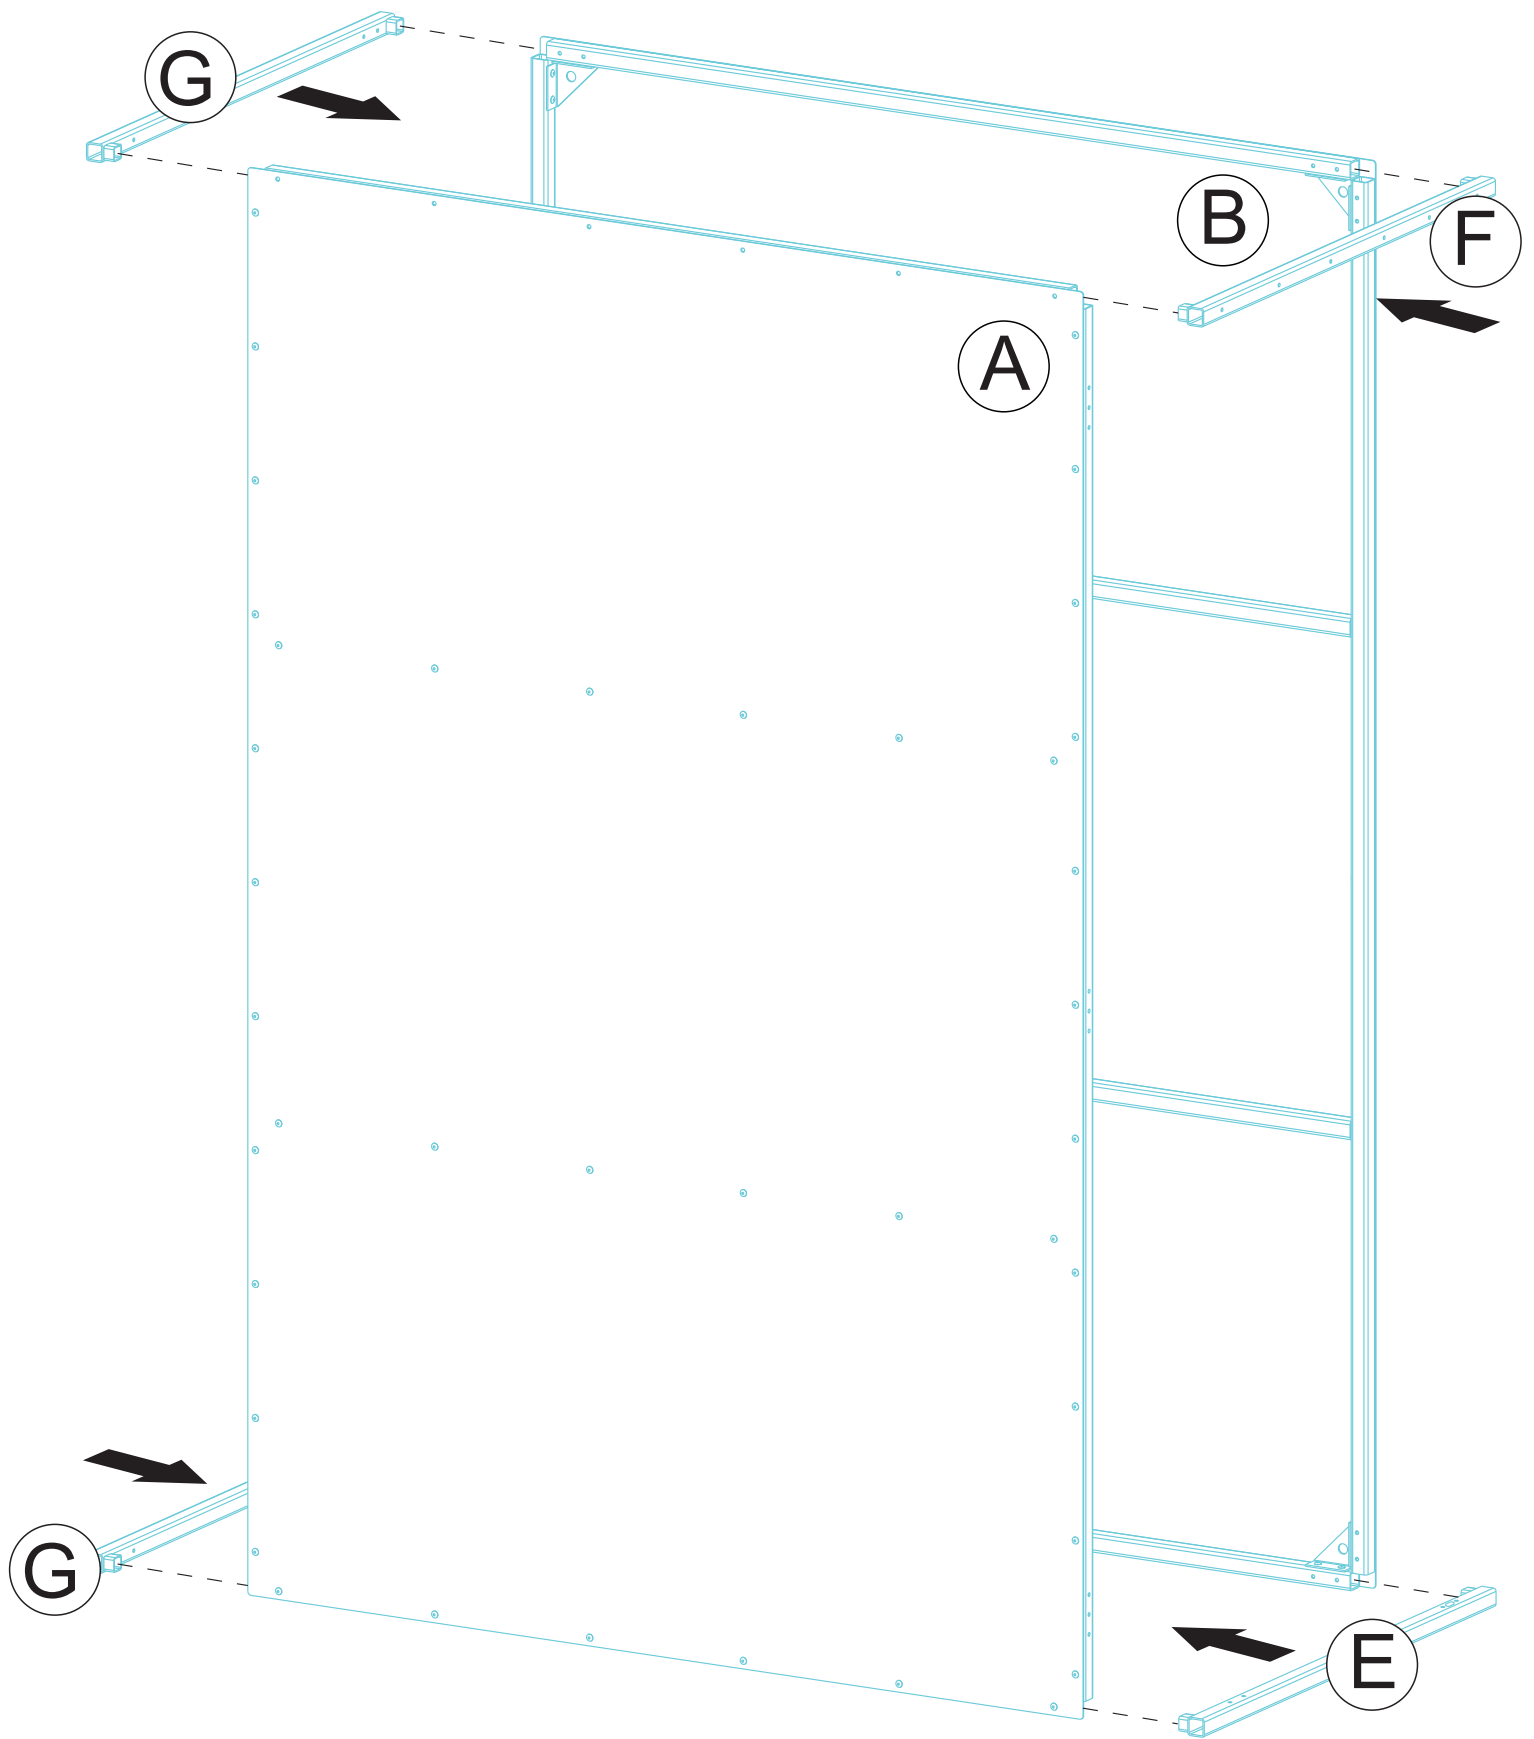

A × 1 **B** × 1 **E** × 1 **F** × 1 **G** × 2  × 2

Step 2

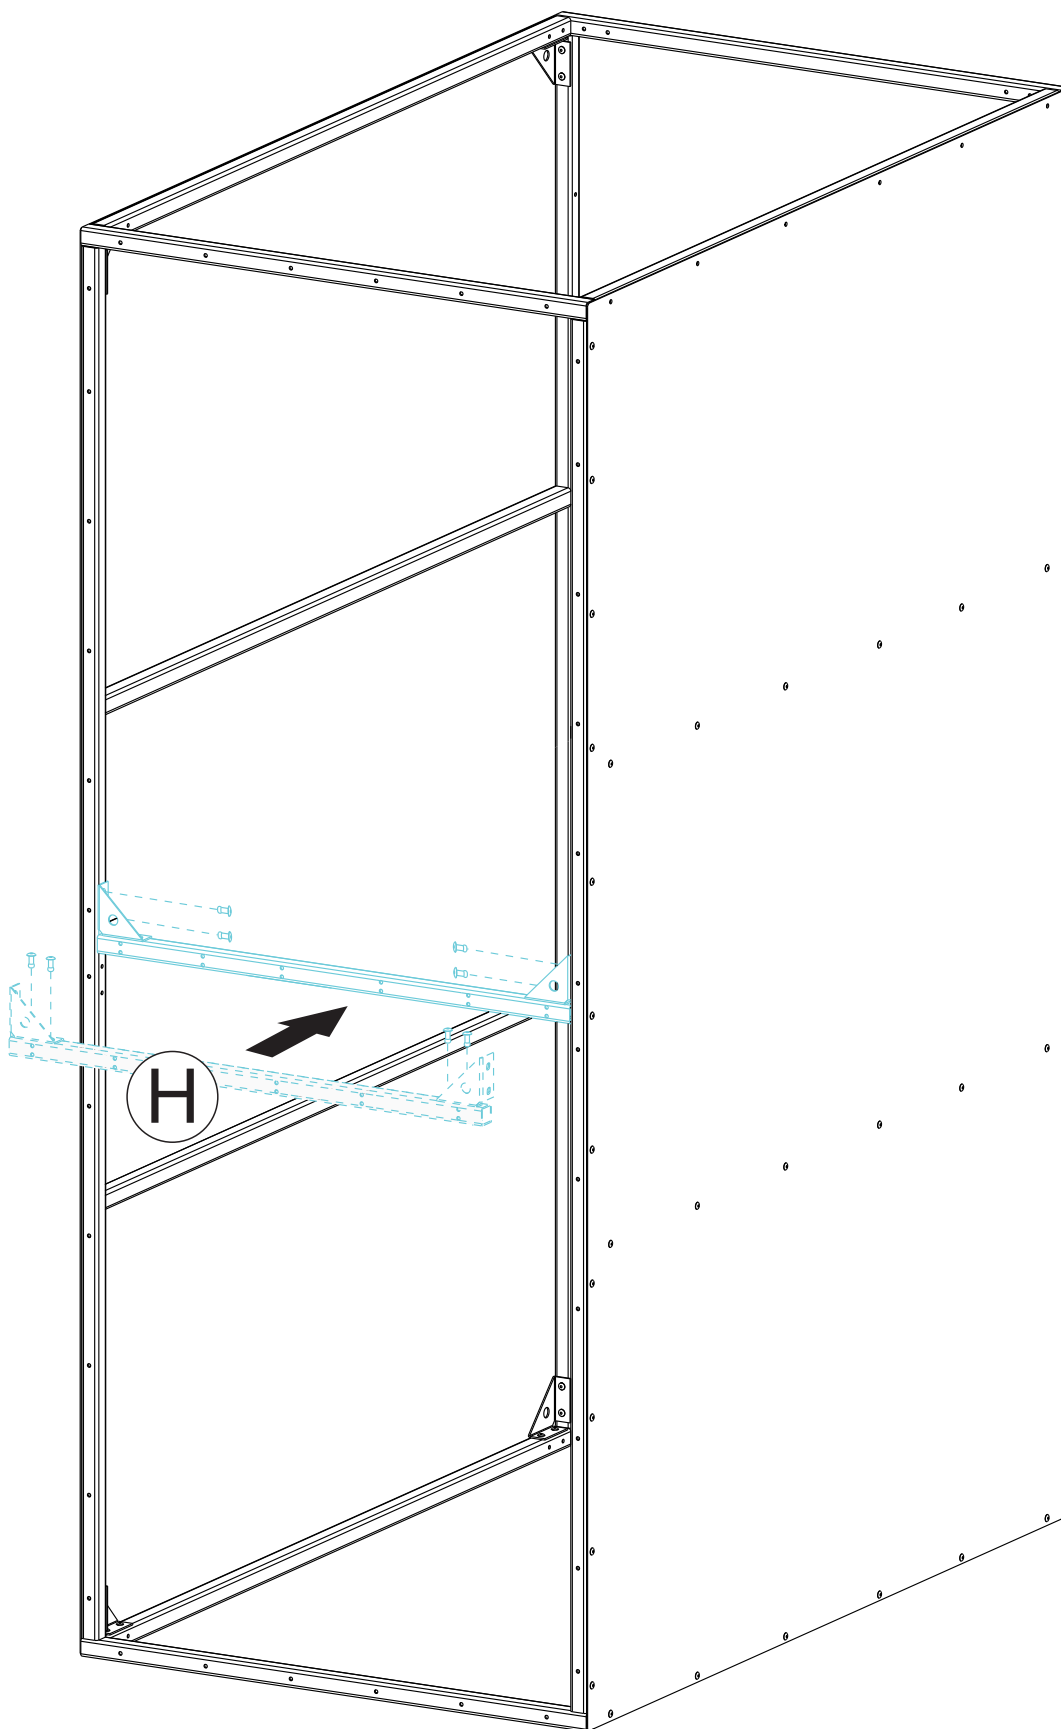

ⓓ × 1


ⓓ × 2

ⓓ × 8

🔪 × 1


🧑 × 1

Step 3

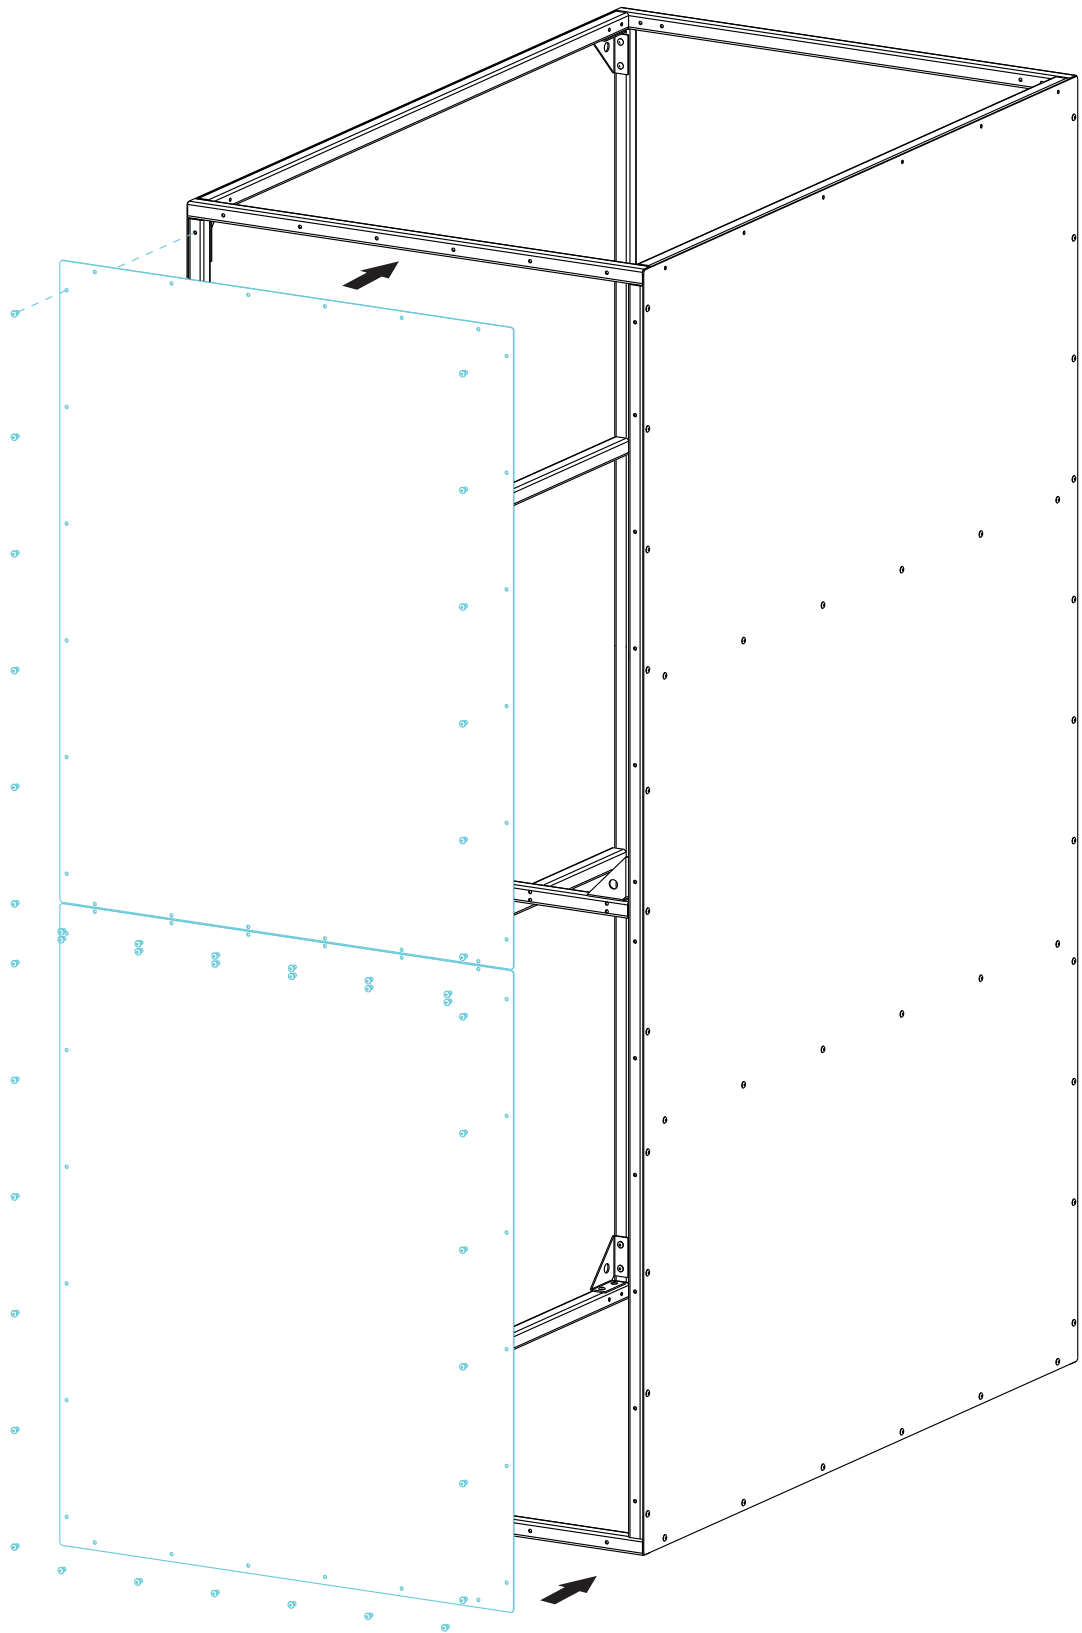

Ⓢ × 2

Ⓟ × 42




× 1



× 1

Step 4

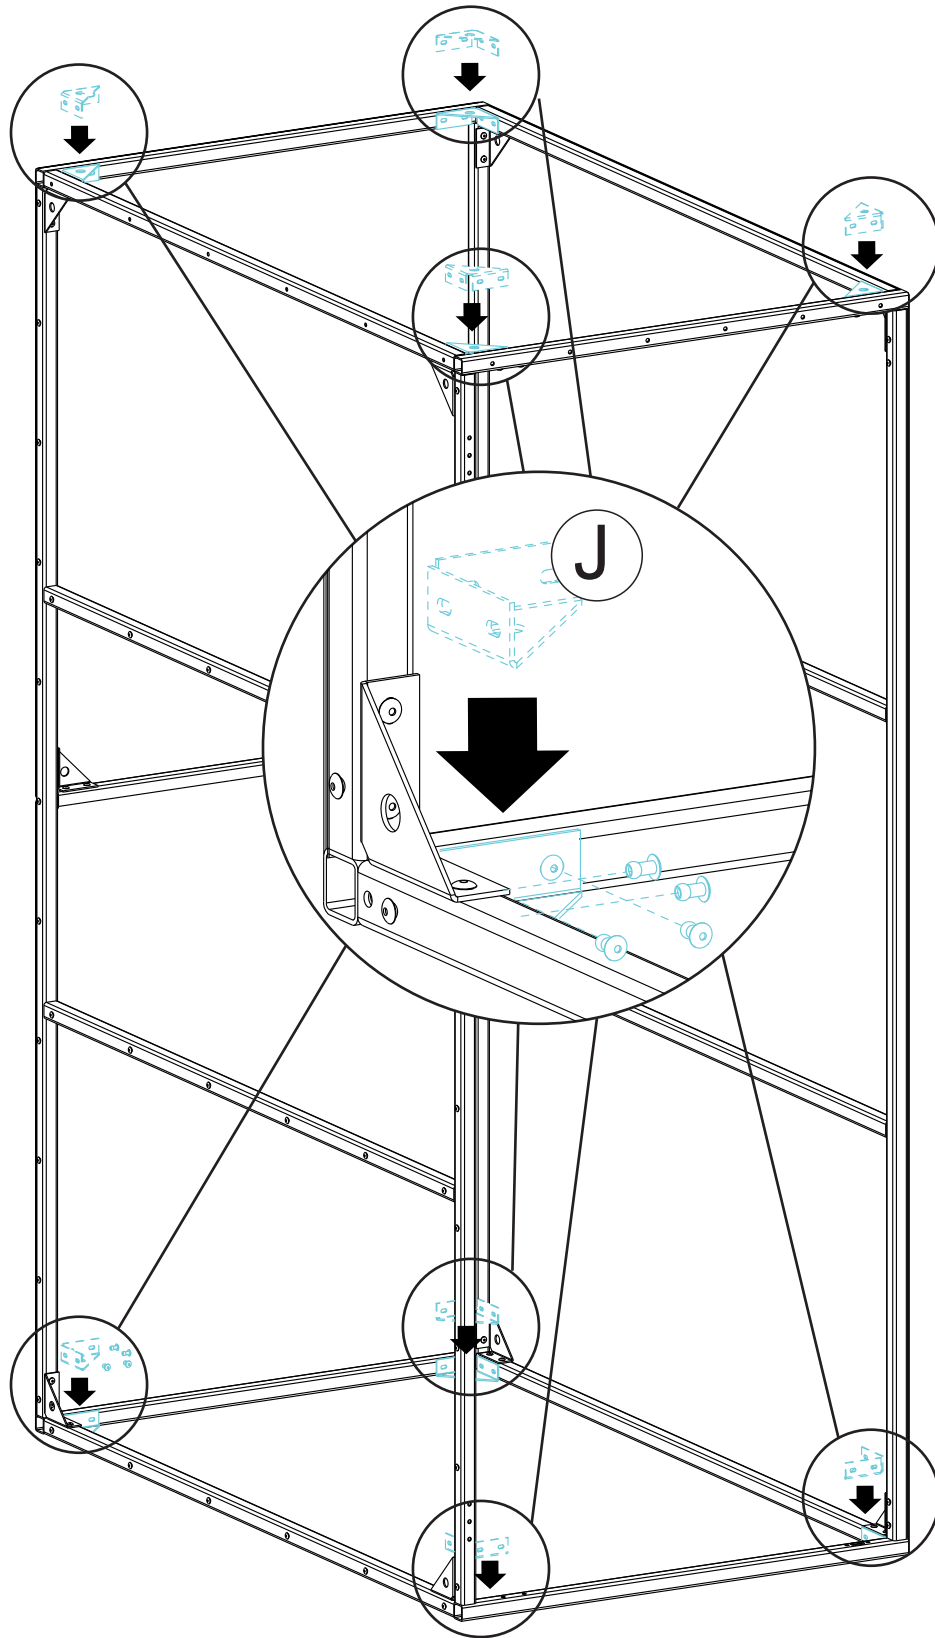


ⓐ × 8

ⓑ × 32

🔪 × 1


😊 × 1

Step 5

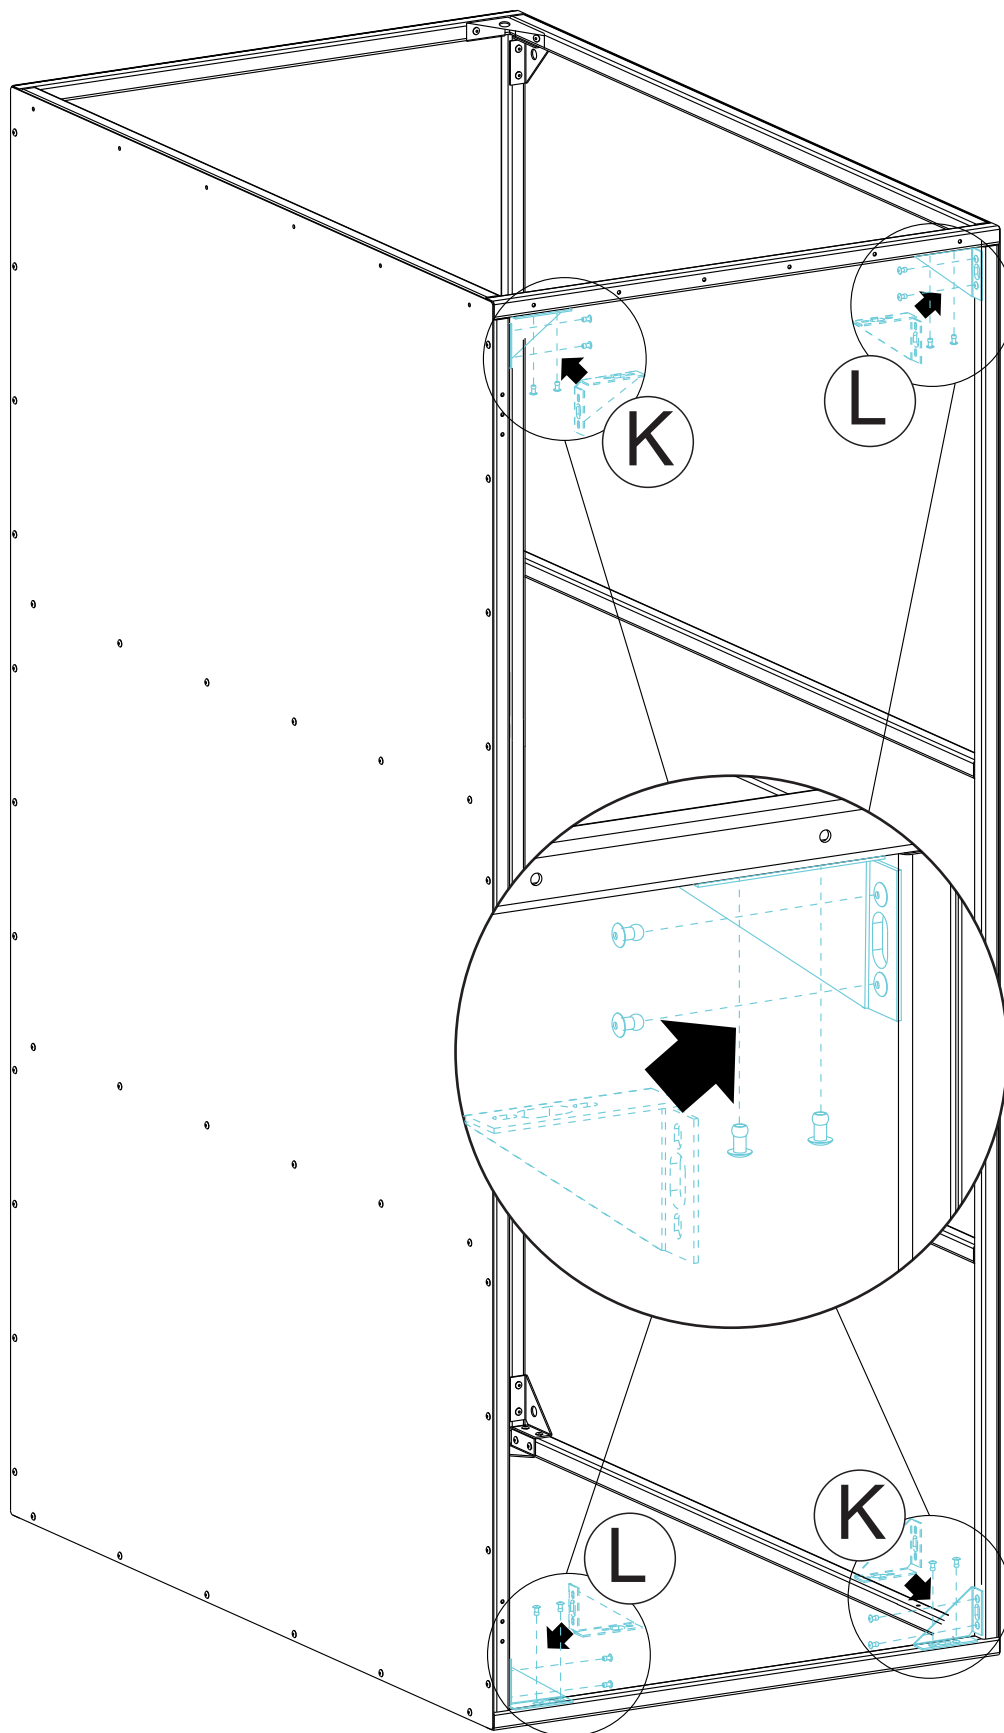

(K) × 2 (L) × 2 (P) × 16  × 1  × 1

Step 6

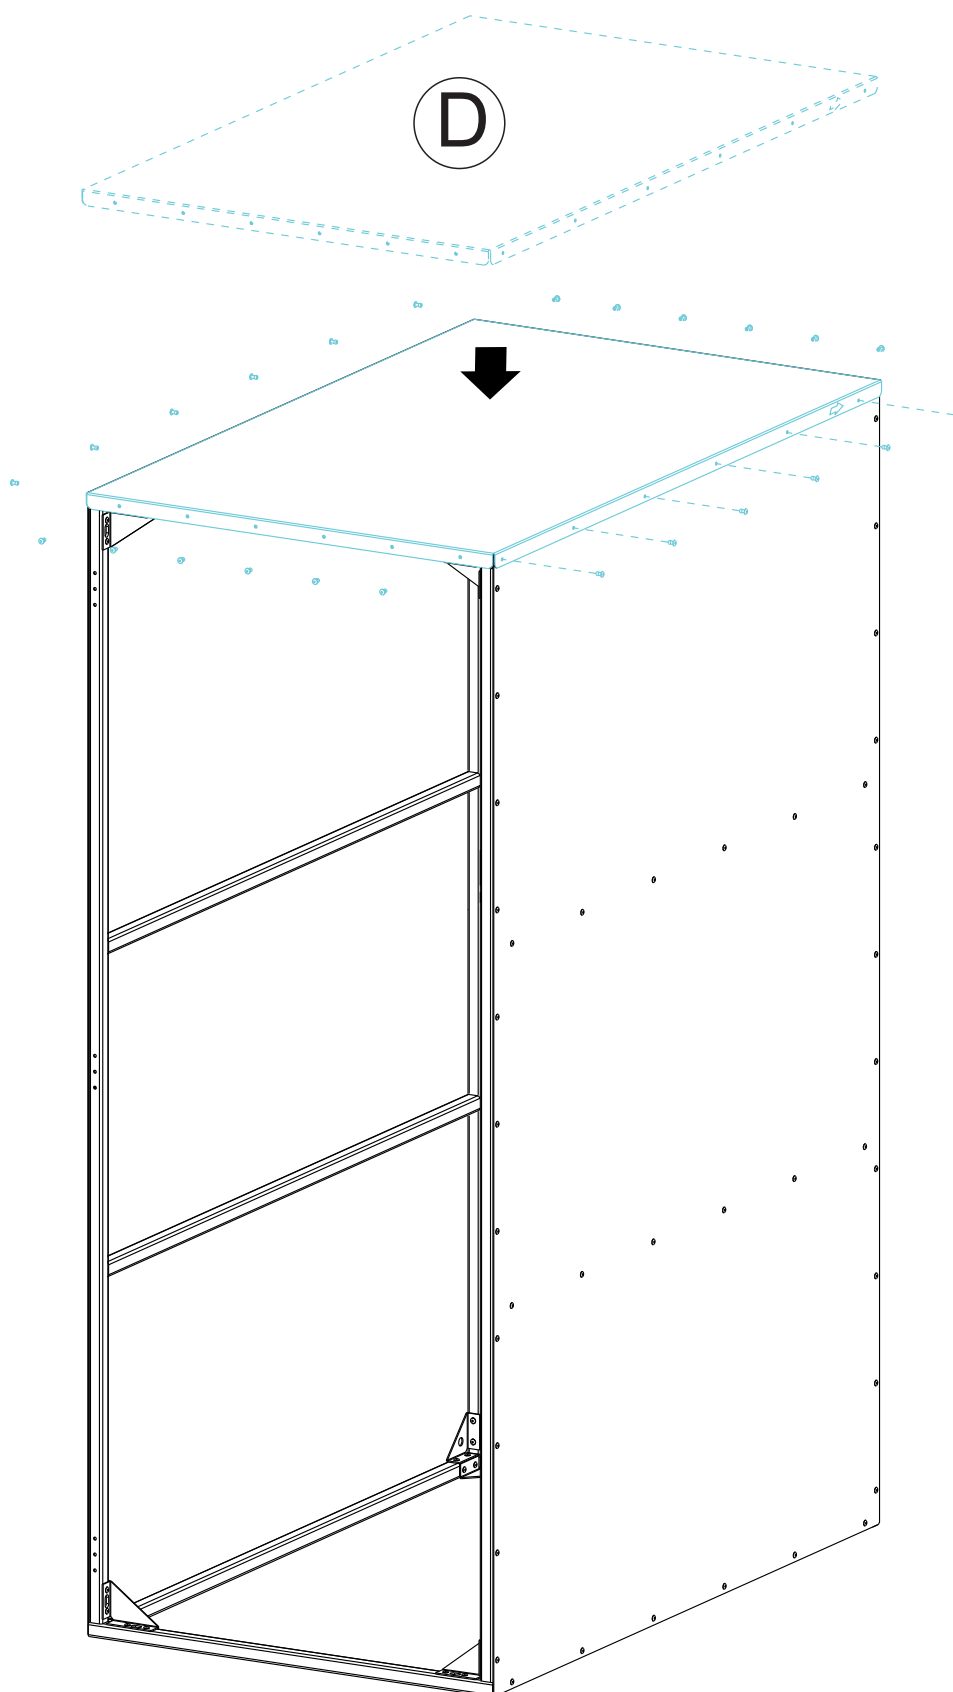

Ⓓ × 1

Ⓟ × 24




× 1



× 1

Step 7

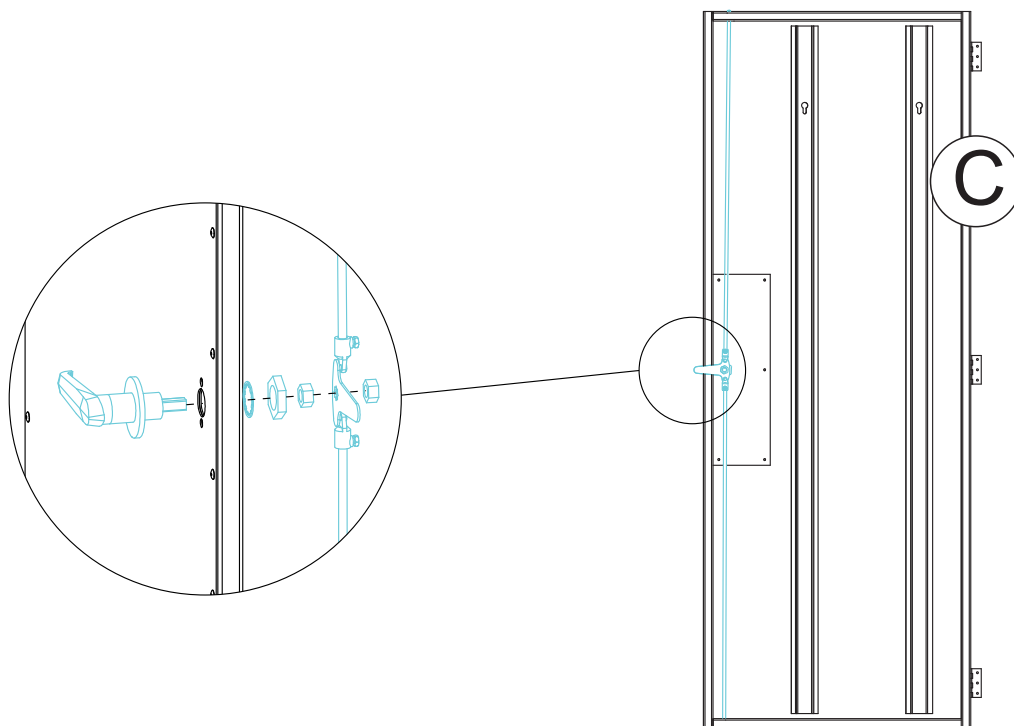


Ⓒ × 1

Ⓜ × 1

😊 × 1

Step 8

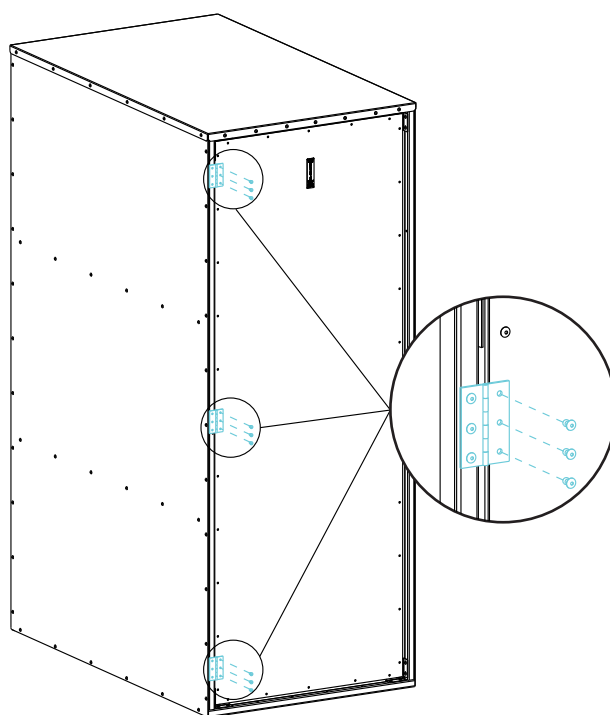


Ⓟ × 9

🔪 × 1

😊 × 2

Step 9


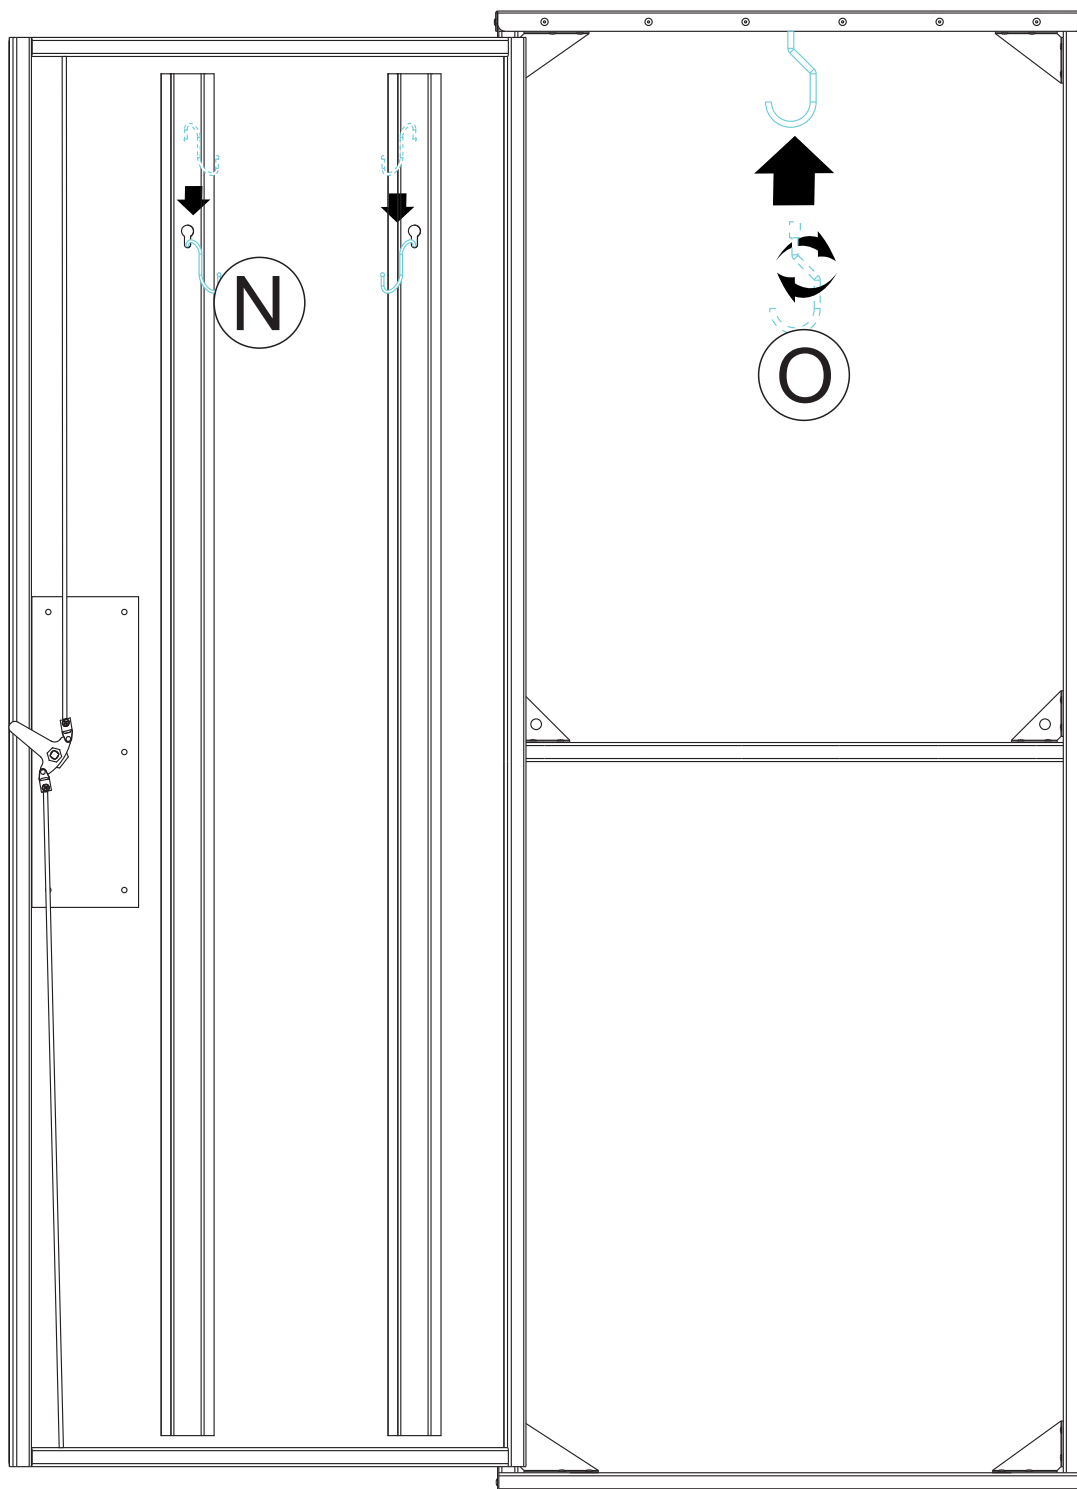


Ⓝ × 2

ⓐ × 1


☺ × 1

Step 10

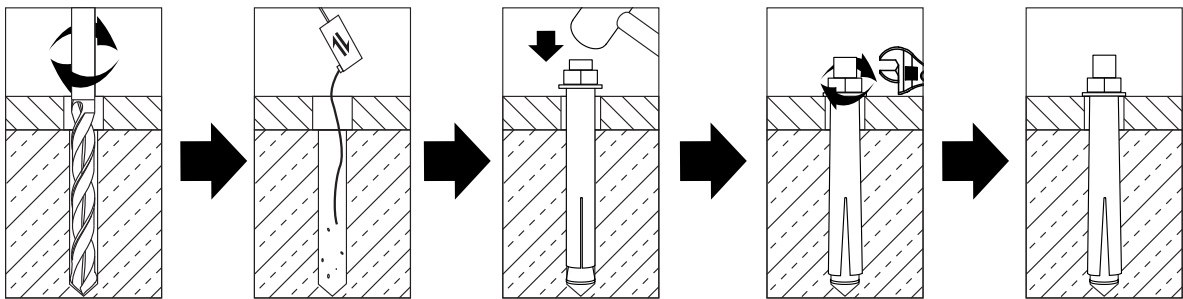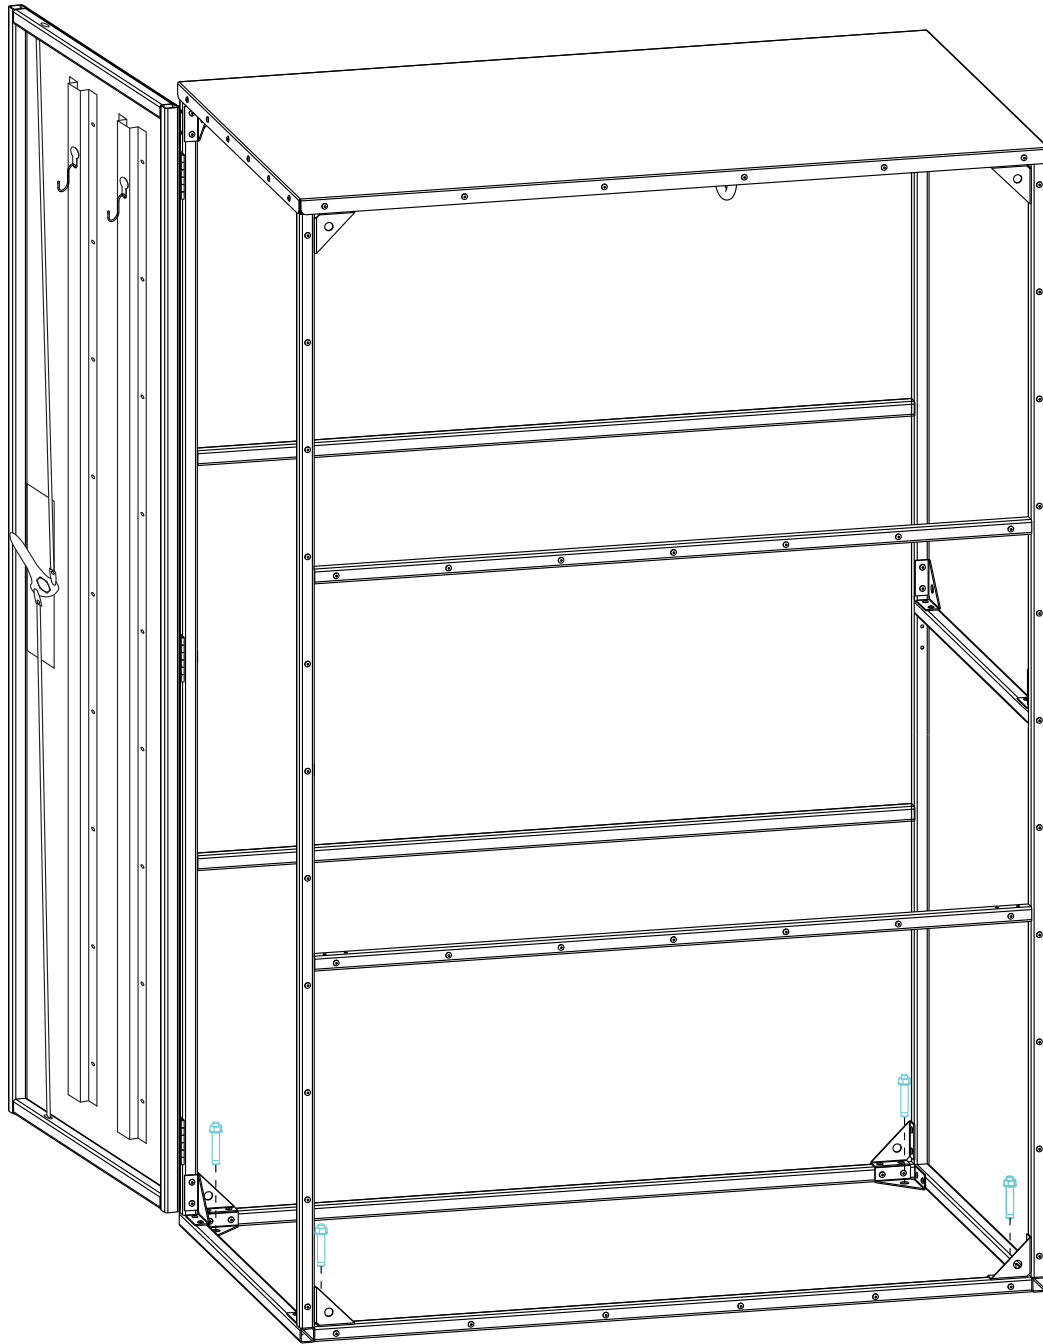


Q x4

R x1



x1



x1



x1



x1