

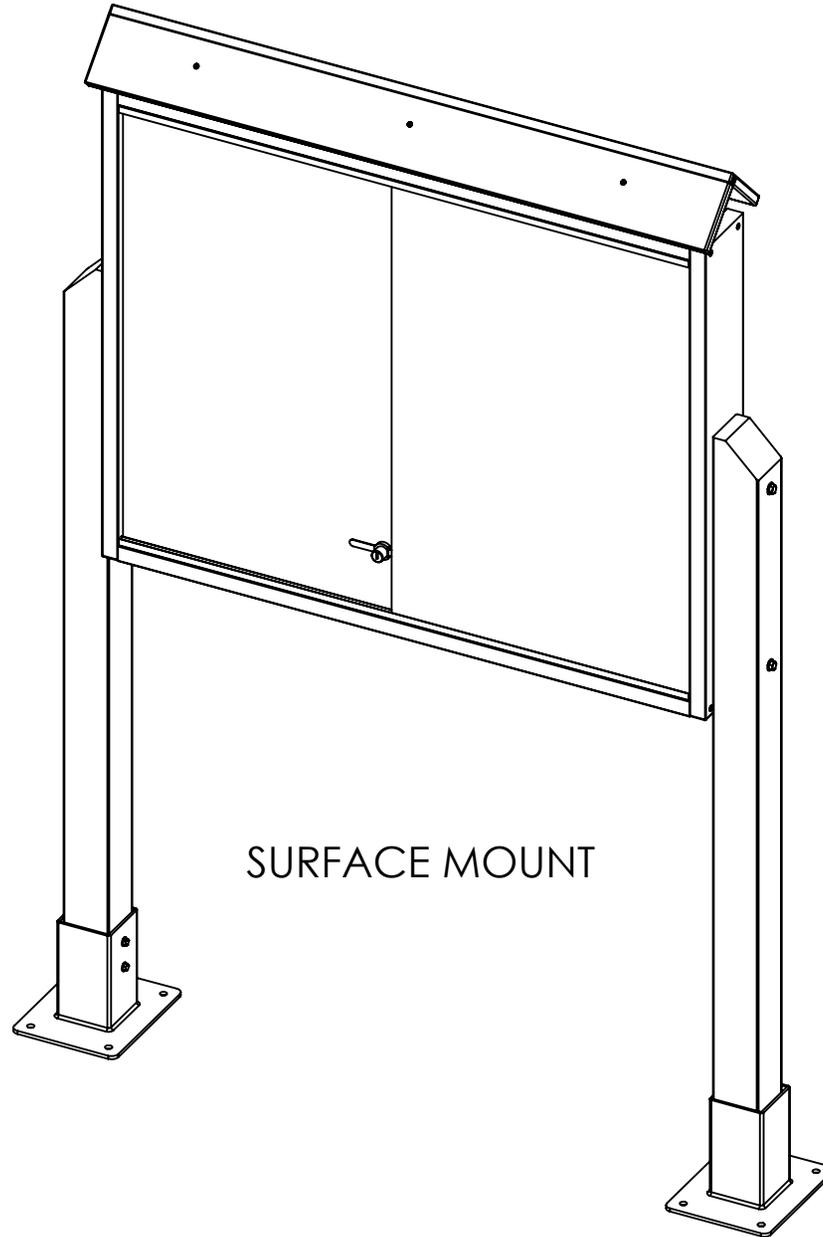
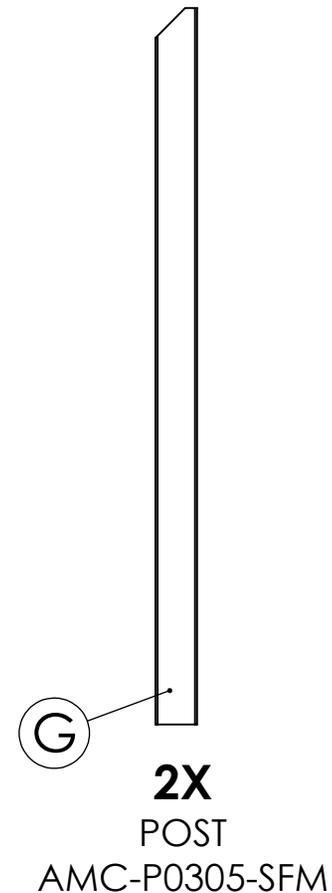
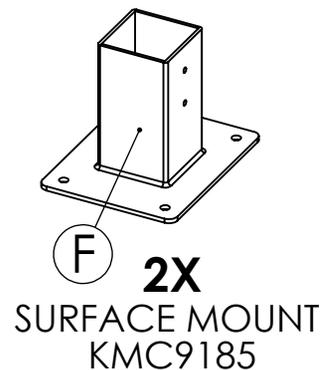
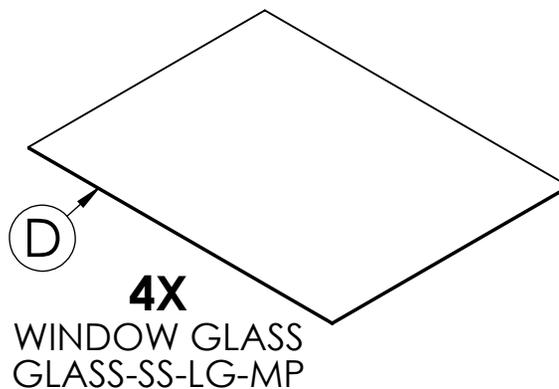
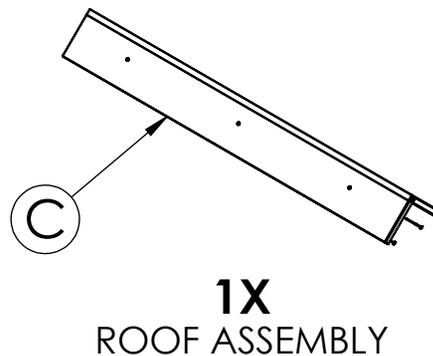


# SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS


MC5396  
8/18/2022  
REV #2

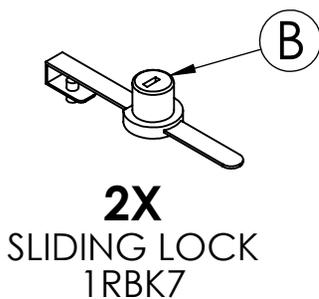

# SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

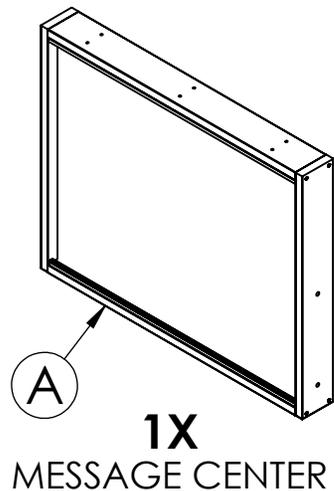

# SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

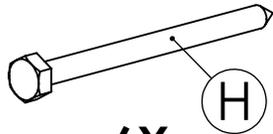

**6X**

1/4" X 4" LAG SCREW  
HLAG025C400188




**10X**

1/4" FLAT WASHER  
WUSS025WAS188



**4X**

1/4" X 1-1/2" LAG SCREW  
HLAG025C250188

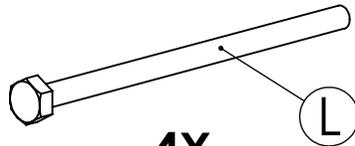

**4X**

3/8" X 5" HEX BOLT  
HHCS037C500188



**4X**

3/8" FLAT WASHER  
WUSS037WAS188

## REQUIRED TOOLS (NOT INCLUDED)

- (1) 3/8" SOCKET
- (1) 1/4" SOCKET
- (1) #2 PHILLIPS BIT
- (1) LEVEL



**COMPONENTS &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**3/6**

# SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

## STEP #1

- A. Lay Message Center (A) on the ground
- B. Lay Posts (G) on either side of the Message Center (A) and align the predrilled holes
- C. **Note: It may be helpful to prop up Posts about an inch to better align with holes on Message Center**
- D. Take 3/8" x 5" Hex Bolt (L), feed through a 3/8" Flat Washer (M), through an outside hole on one of the Posts (G), and screw into aligned hole on Message Center (A)
- E. Repeat for three other holes to complete attachment of Posts (G) to Message Center (A)
- F. **Note: Hand tighten bolts until all four have been placed, then tighten with socket wrench**

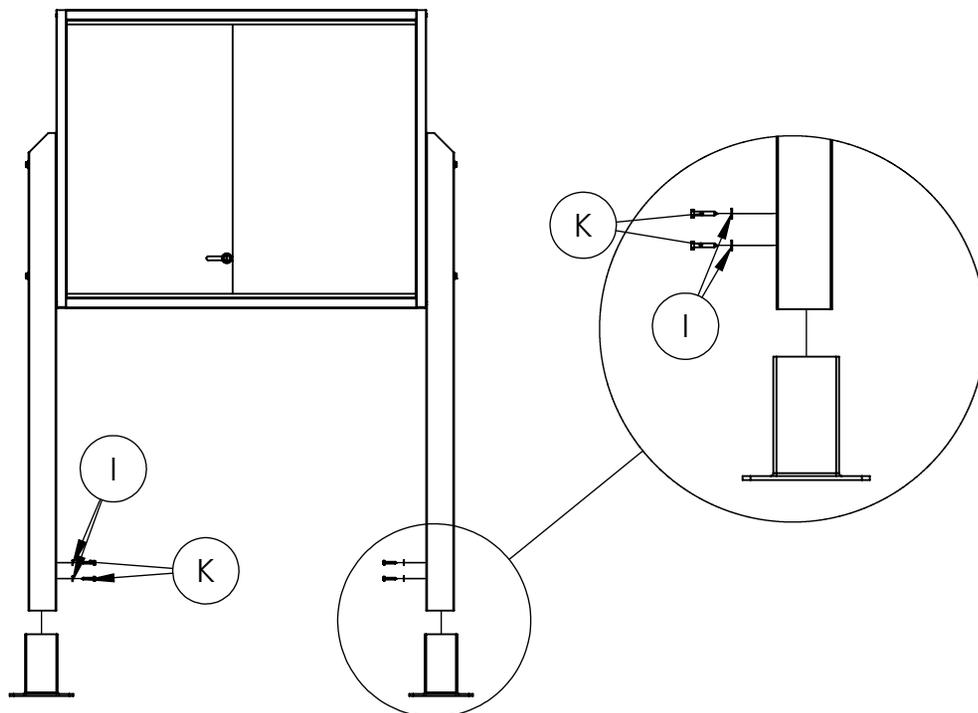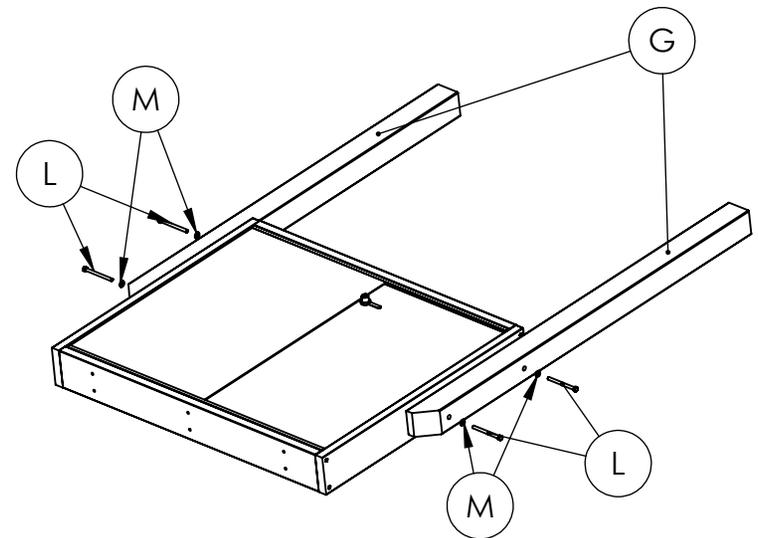



## STEP #2

- A. Keep the Message Center with the Posts attached on the ground
- B. Put the Surface Mount Bases (F) onto the post bottoms (G)
- C. Fasten the 1-1/2" Lag Screw (K) through the 1/4" Washer (I) through Surface Mount Base (F) and screw into Post (G)
- D. Repeat for other 3 other Lag Screws (K)
- E. Lift properly into standing position
- F. Secure Surface Mount Bases to ground

# SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS

## STEP #3

- A. Align predrilled holes on Roof Assembly (C) and top of Message Center (A)
- B. Take 1/4" x 4" Lag Screw (H), feed through 1/4" Washer (I), through a hole in the top of Message Center (A), and screw into Roof Assembly (C)
- C. Repeat for remaining 5 Lag Screws (H)
- D. **Note: Moderately tighten screws until all 6 are placed, then go back and securely tighten.**

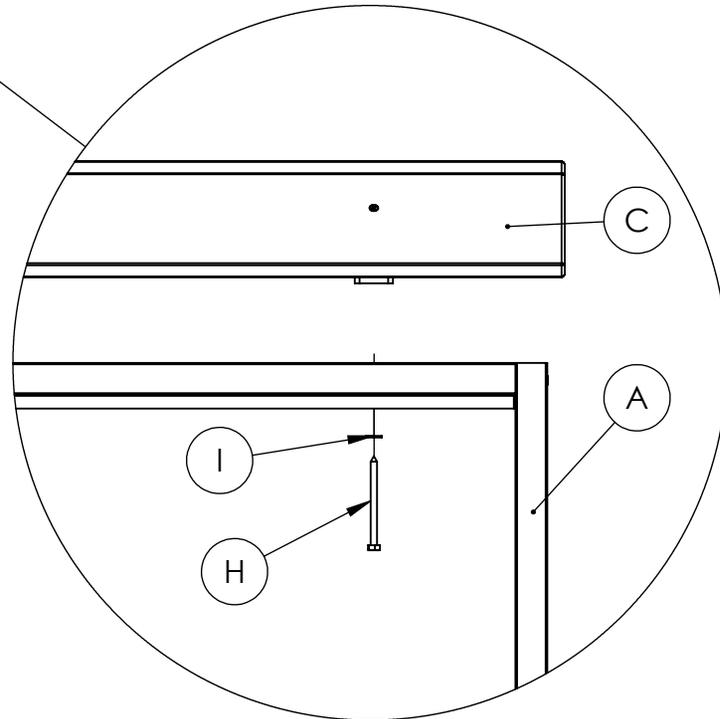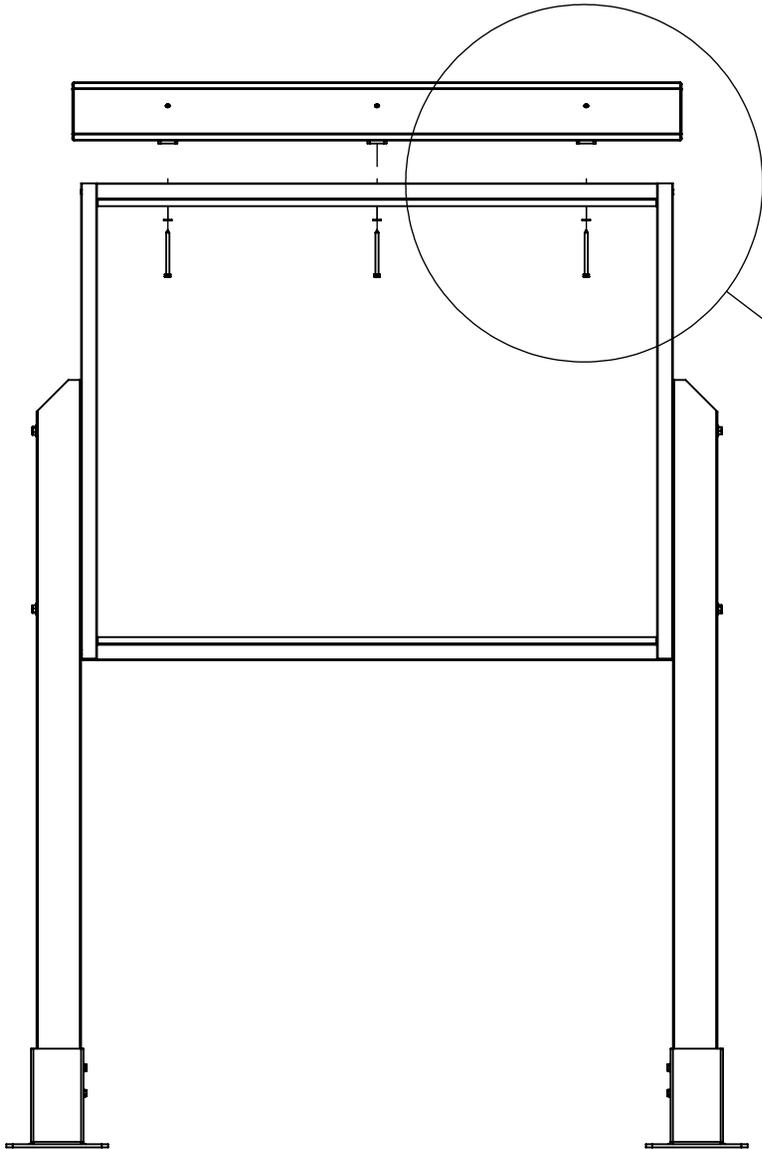


**ATTACH ROOF  
TO MESSAGE  
CENTER**

**5/6**

# SUPERSAVER SURFACE MOUNT MESSAGE CENTER INSTRUCTIONS





## STEP #4

- A. Remove protective film from Window Glass (D)
- B. Gently Bend the Window Glass (D) into Door Track (E)
- C. Make sure one piece of Window Glass (D) is in the rear track, and one piece is in the front track**
- D. Attach Sliding Lock (B) set screw to Window Glass (D) by tightening in desired lock location
- E. Secure Windows by locking the Sliding Lock (B)
- F. Repeat all steps for other side of display

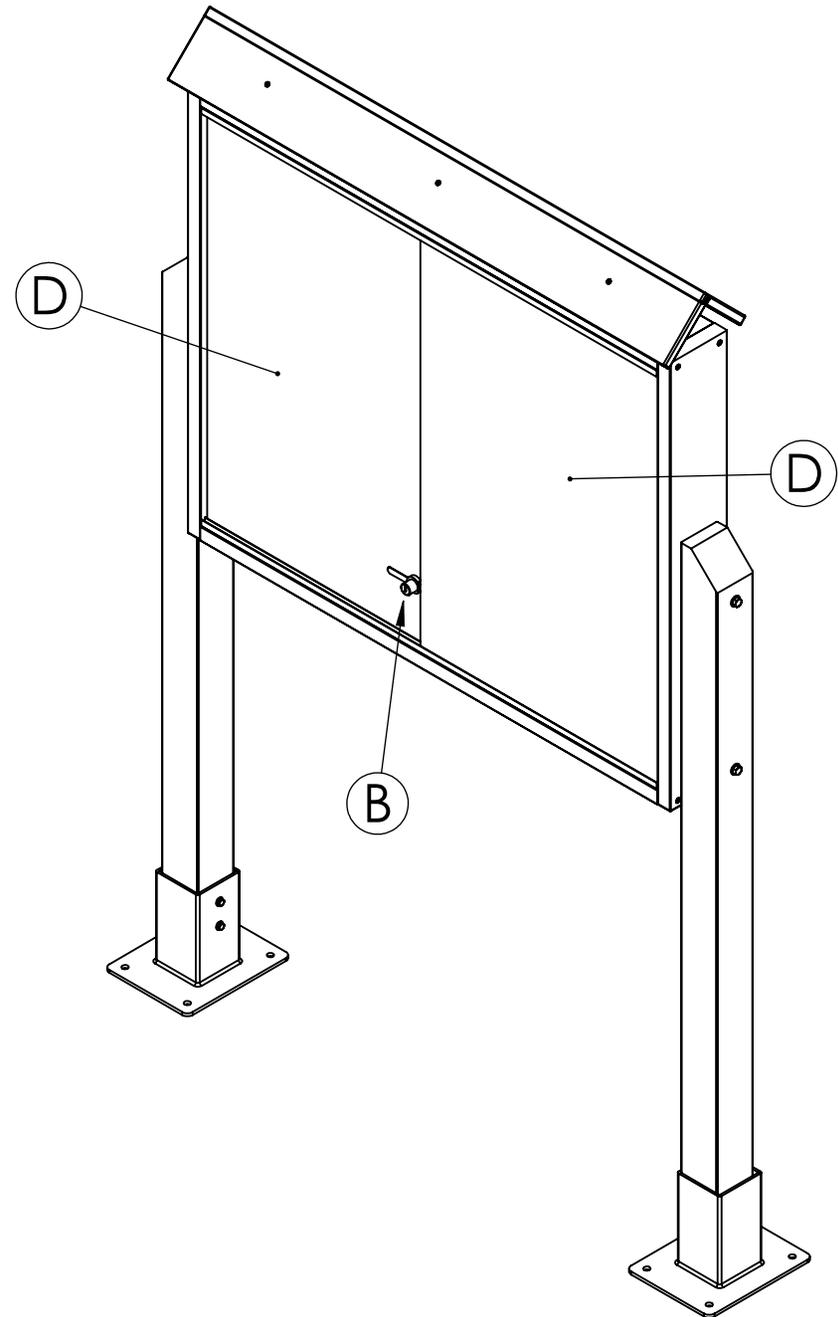

# SUPERSAVER SURFACE MOUNT MESSAGE CENTER SPECIFICATIONS

MC5396  
8/18/22  
REV #2

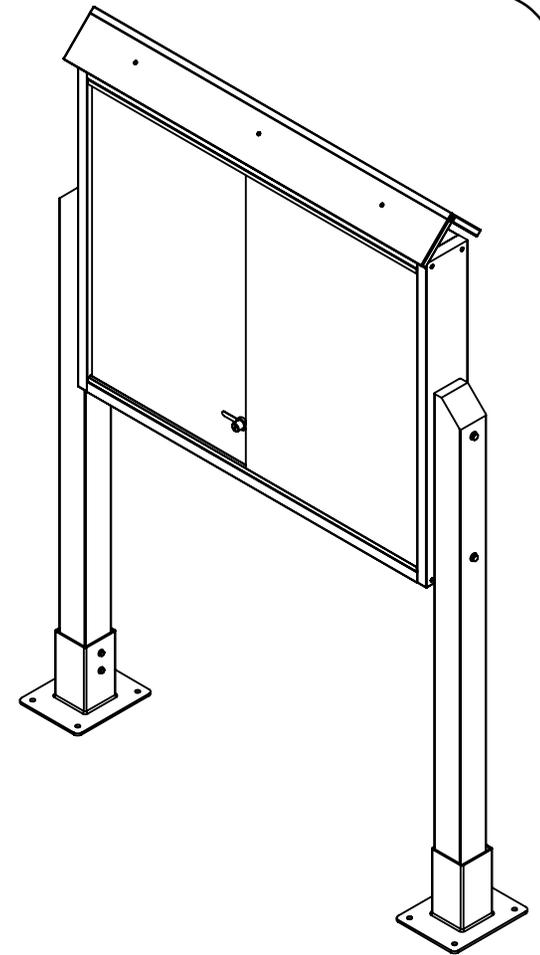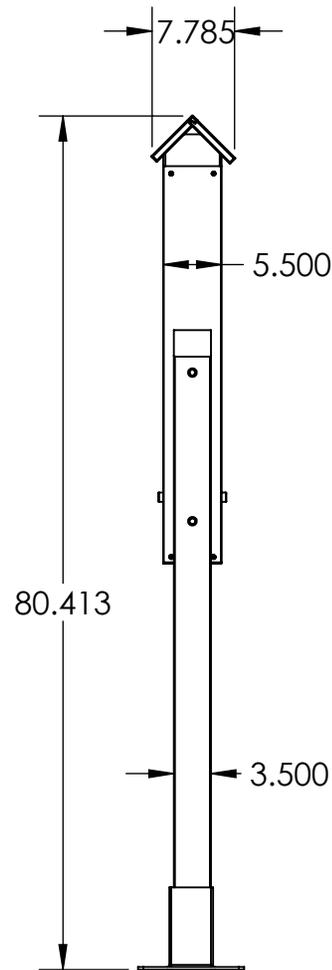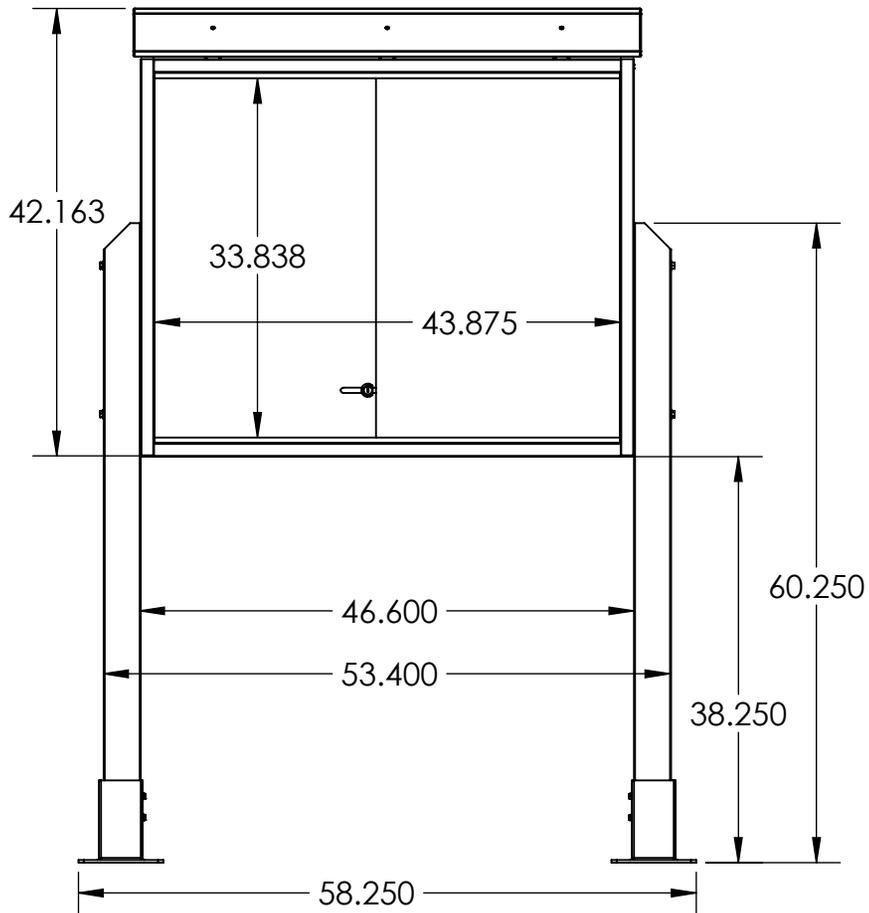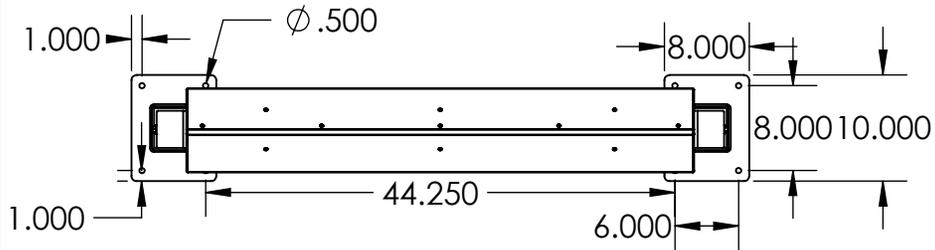

ALL DIMENSIONS SHOWN IN INCHES