




Backless Silhouette Bench BC2375

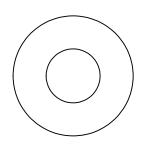

16 1/4" Flat Washer



16 1/4" x 1.5" Lag Screw

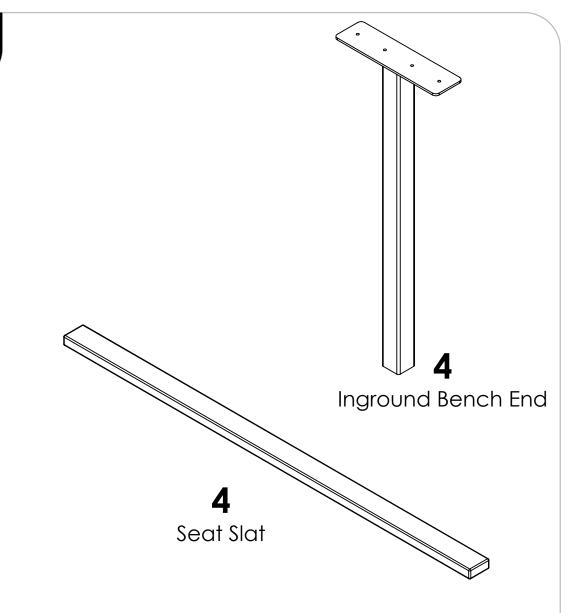

REQUIRED TOOLS:

- -(1) SCREW GUN
- -(1) 7/16" SOCKET
- -(1) 8" 10" POSE HOLE DIGGER
- -(1) LEVEL

REQUIRED MATERIALS:

- -READY-TO-MIX-CONCRETE
- -LOOSE GRAVEL
- -WIRE & BRACING MATERIAL


INCLUDED HARDWARE & TOOLS REQUIRED FOR ASSEMBLY

2/6

Backless Silhouette Bench Assembly: BC2375 Place the seat slats with the pilot holes facing up off the ground. Line up the holes on the bench end with the pilot holes on the seat slats. Secure the bench ends to the seat with the included washers and lag screws. **KEEP BOARD SPACING APPROXIMATELY 1/2" NOTE**: Make sure BOTH ends of the bench are square before fully tightening everything down. If possible, secure one of the short ends of the bench against a wall or other flat surface.

Backless Silhouette Bench BC2375


USING POST HOLE DIGGER, DIG FOUR HOLES AS SHOWN BELOW. THEN, FILL IN EACH HOLE WITH APPROXIMATELY 4" OF LOOSE GRAVEL.

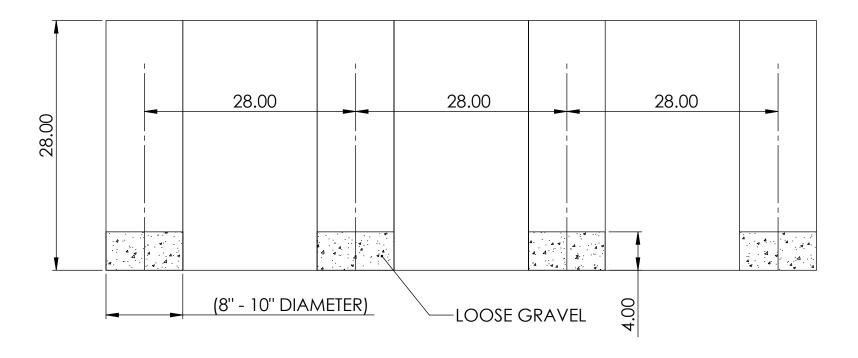


BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

Backless Silhouette Bench BC2375

CAREFULLY, PLACE THE BENCH INTO HOLES. CENTER EACH POST IN EACH HOLE AND LEVEL BENCH. ALSO, BE SURE TO CHECK SEAT HEIGHT TO ENSURE COMFORTABLE SEATING. SECURE PLACEMENT OF BENCH WITH BRACING MATERIALS AND FILL IN HOLES WITH READY-TO-MIX CONCRETE. ALLOW TO DRY AND REMOVE BRACING MATERIALS.

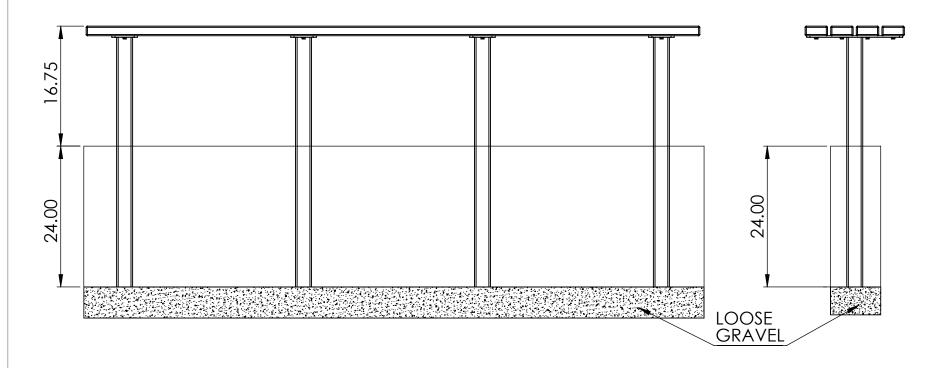

BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

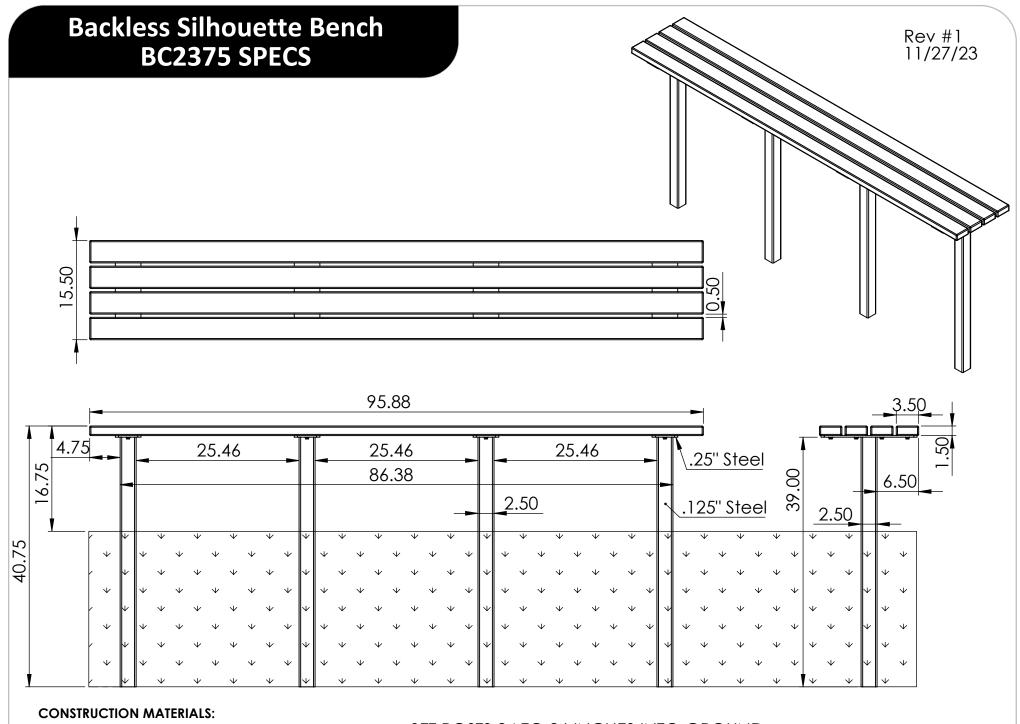

Recycled Plastic, Powder Coated Steel

HARDWARE: Stainless Steel SET POSTS 24 TO 26 INCHES INTO GROUND ALL DIMENSIONS SHOWN IN INCHES