



INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

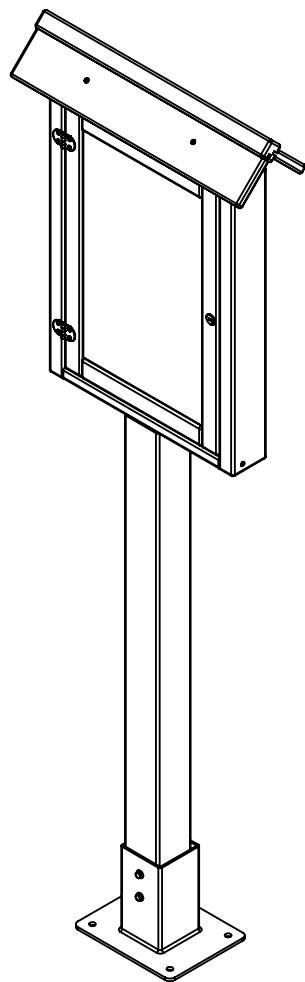


SURFACE MOUNT

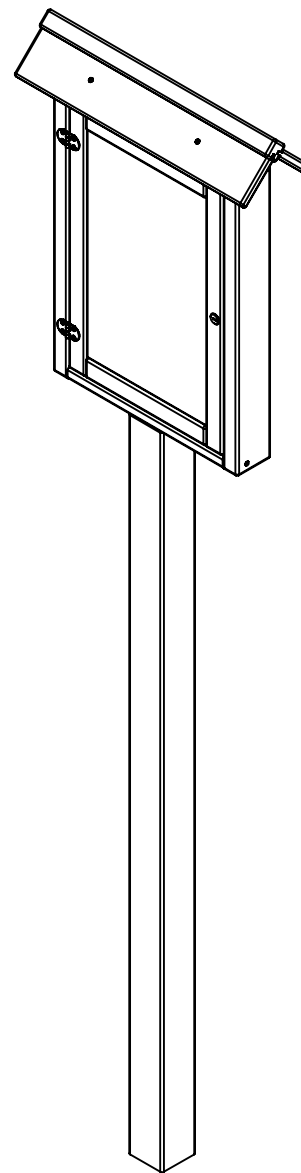


INGROUND MOUNT


INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

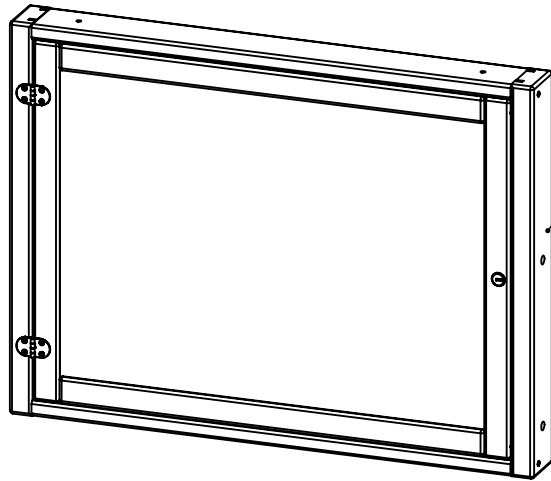


1X
MESSAGE CENTER

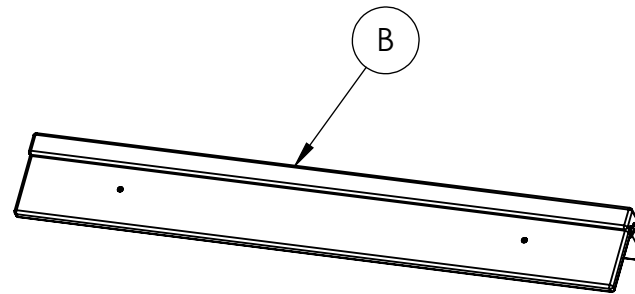


1X
ROOF

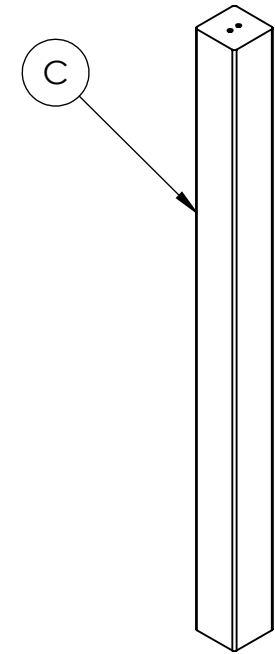


1X
POST

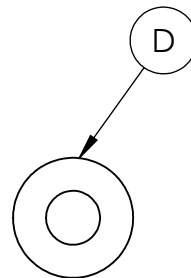


6X
1/4" FLAT WASHER
(2 ARE FOR SURFACE
MOUNT ONLY)

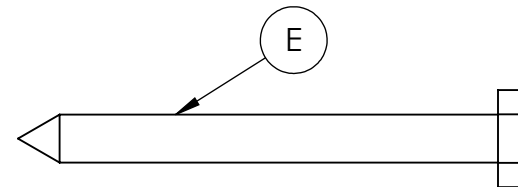

4X
1/4" X 2-1/2" LAG SCREW

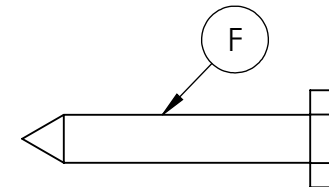

2X
1/4" X 1-1/2"
LAG SCREW
(FOR SURFACE
MOUNT ONLY)

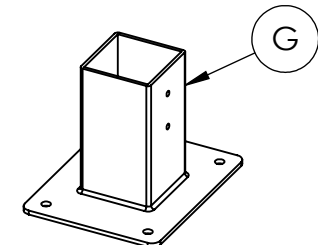

1X
SURFACE MOUNT
(FOR SURFACE
MOUNT ONLY)

REQUIRED TOOLS (NOT INCLUDED)

- 1 - 7/16" SOCKET
- 1 - SCREW GUN
- 1 - LEVEL

OTHER REQUIRED MATERIALS FOR INGROUND MOUNTING (NOT INCLUDED)

- BAG OF SAKCRETE
- 1 - POST HOLE DIGGER
 - GUIDE WIRES
 - A FRIEND TO HELP


**COMPONENTS &
TOOLS REQUIRED
FOR ASSEMBLY**

1/5

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

STEP #1


- Lay message center (A) on a flat clean surface
- Put end post (C) on the bottom of message center (A) with holes lining up
- Secure with (2) 1/4" x 2-1/2" lag screws (E) and 1/4" flat washers (D)

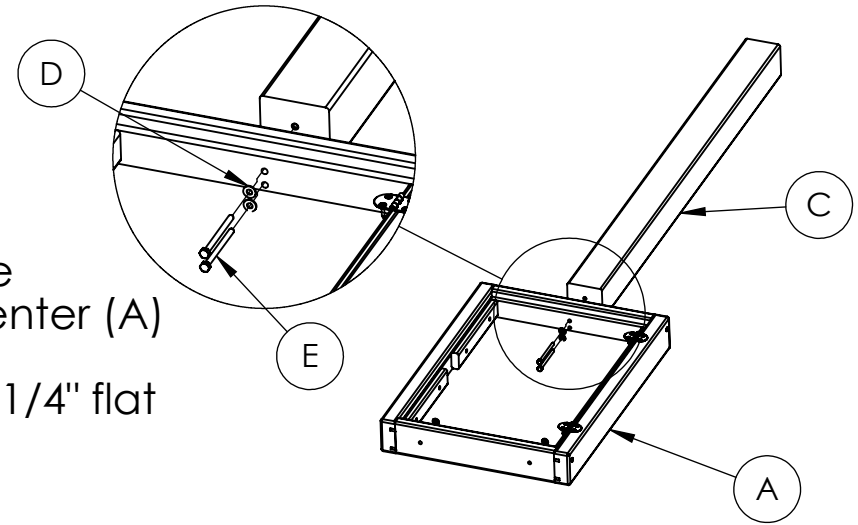

NOTE: ORIENTATION OF MESSAGE CENTER MAY DIFFER THAN PICTURE DEPENDING ON MODEL PURCHASED

STEP #2 (Surface Mount)



- With the message center (A) still lying on the ground, slide the surface mount base (G) onto the post (C)
- Fasten with (2) 1/4" x 1-1/2" lag screws (F) and flat washers (D)
- Stand the assembly upright in desired location
- Secure surface mount bases to the ground (Hardware not included)

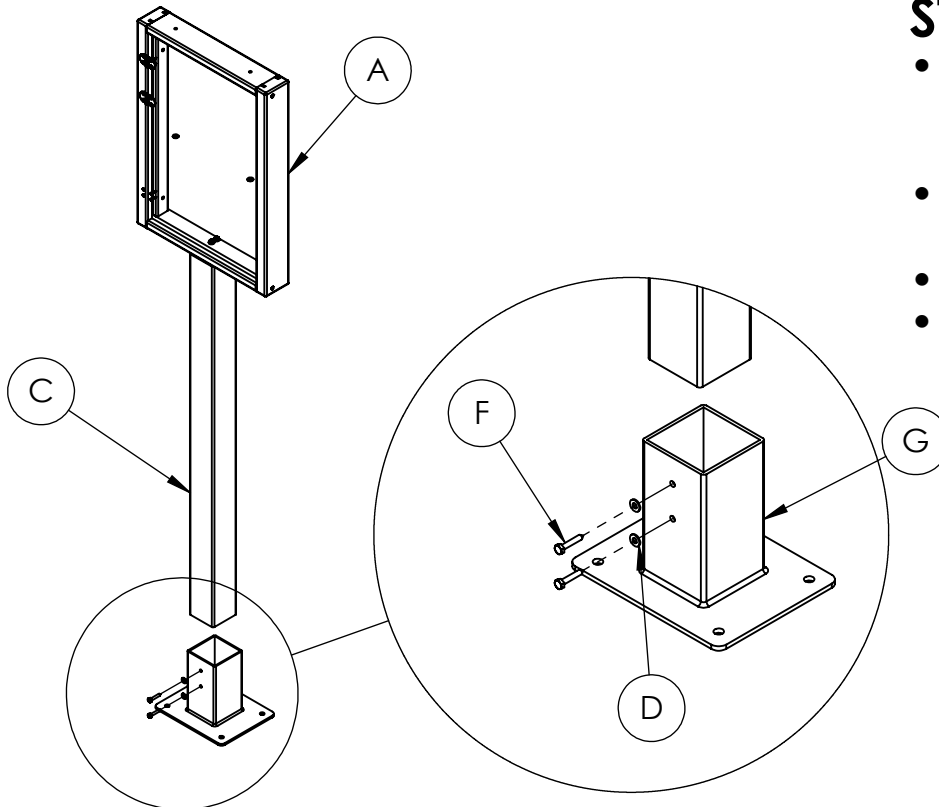

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

STEP #2-A (INGROUND MOUNT)

- Dig a hole in desired location, approximately 10" in diameter to a depth of 36" (or to building code / frost line)

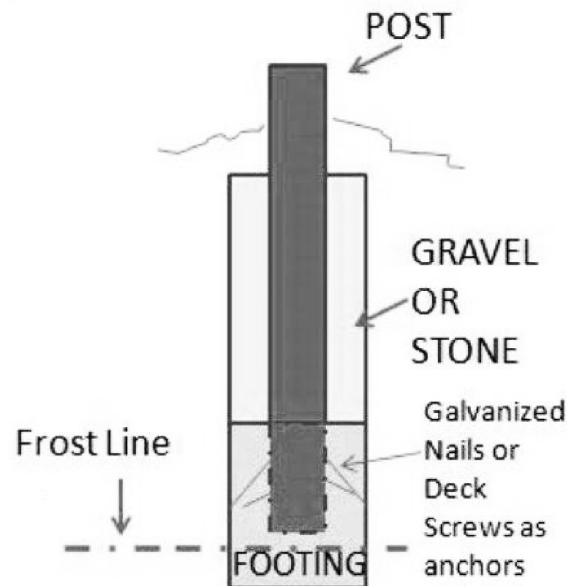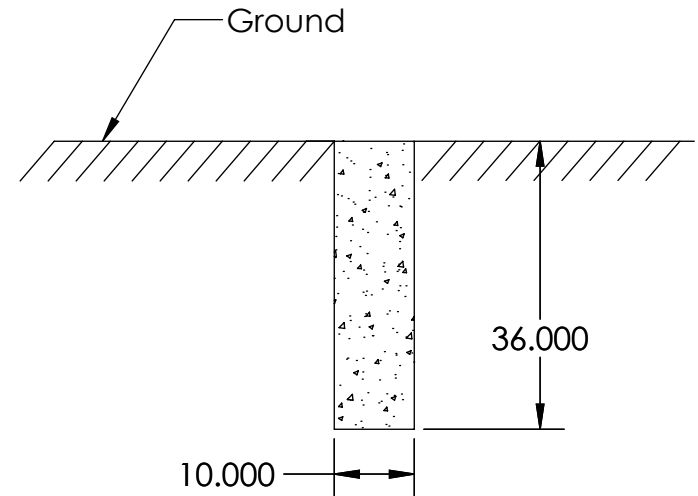


Post in Poured
Concrete Footing

STEP #2-B (INGROUND MOUNT)

- Place post into hole
- Fill with Sakcrete to a level about 4" - 6" below ground level
- Use a level to make sure message center is square and level
- Use guide wire to secure until Sakcrete is dry



INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

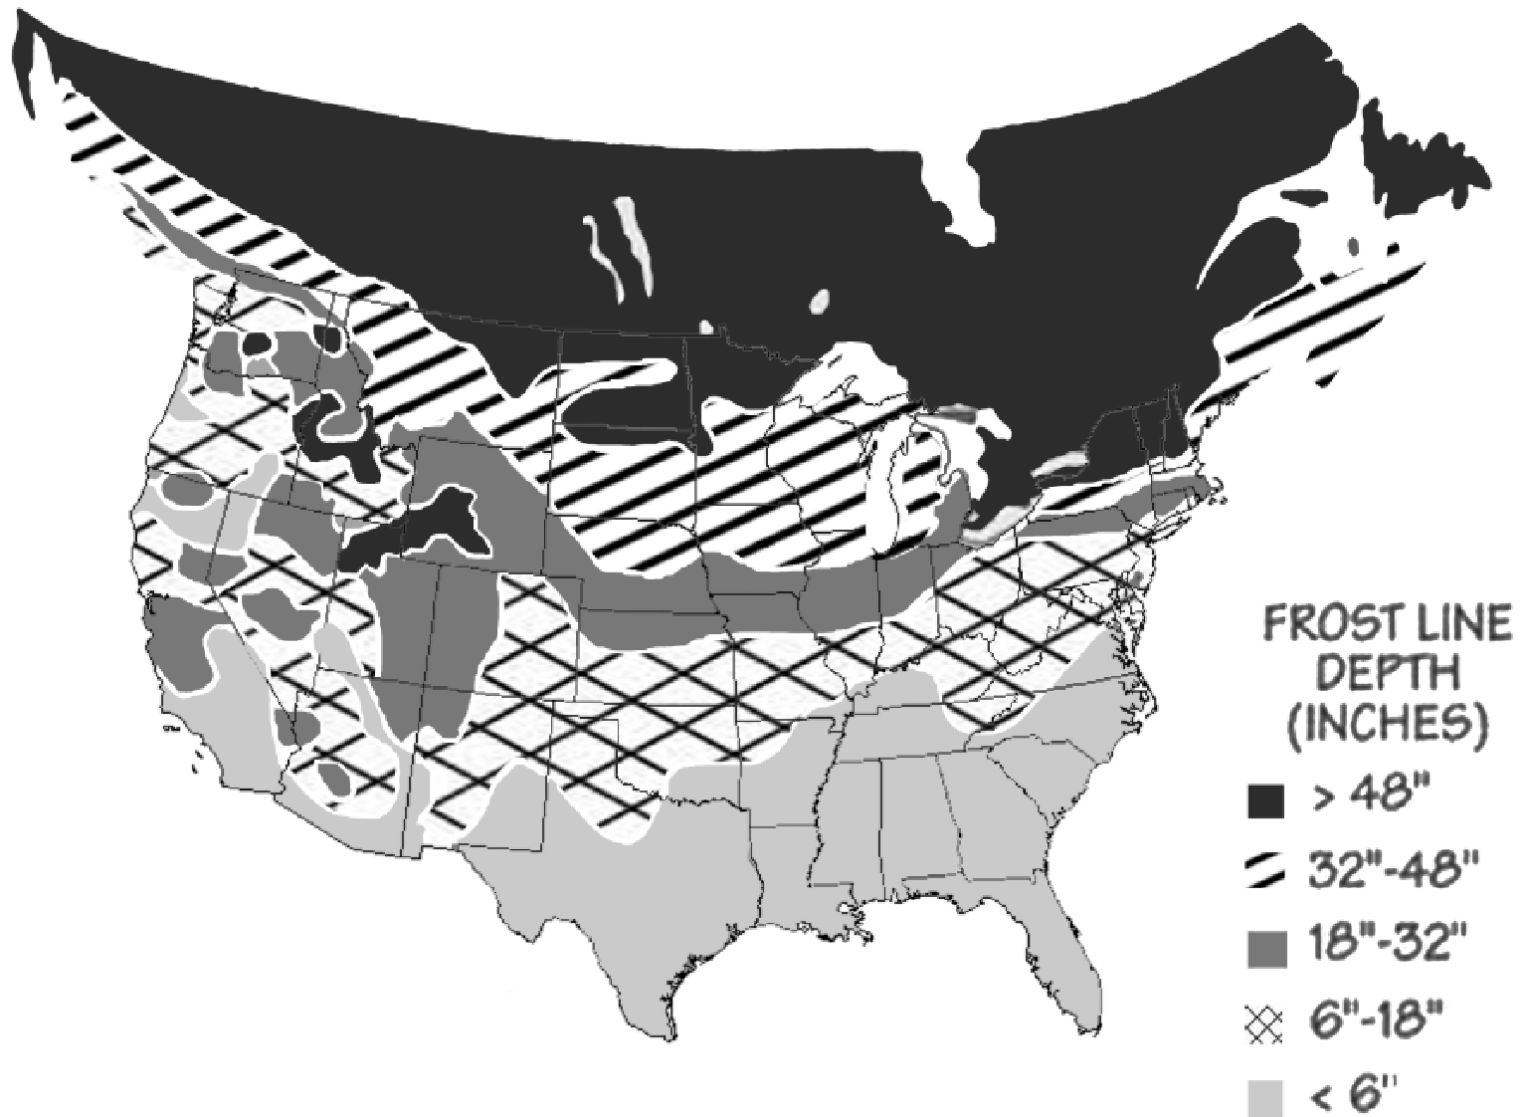

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

STEP #3 Install the Roof

- Set roof piece (B) onto top of message center (A)
- Fasten 1/4" x 2-1/2" lag screw (E) with 1/4" flat washer (D) thru message center (A) into roof piece (B)
- Repeat for the other lag screw (E)

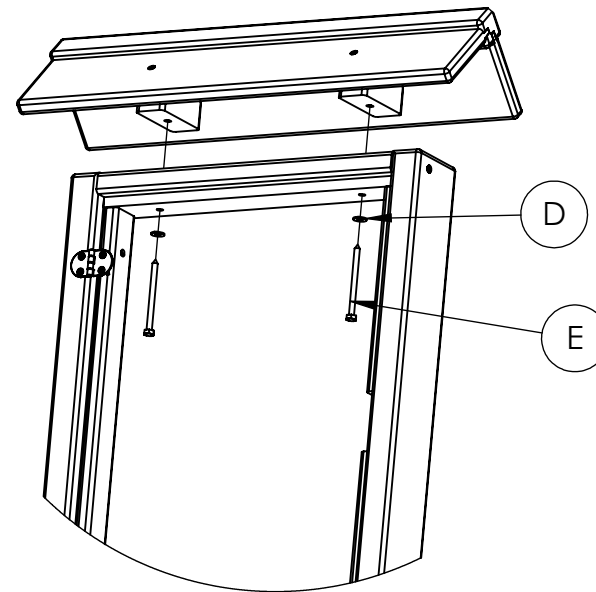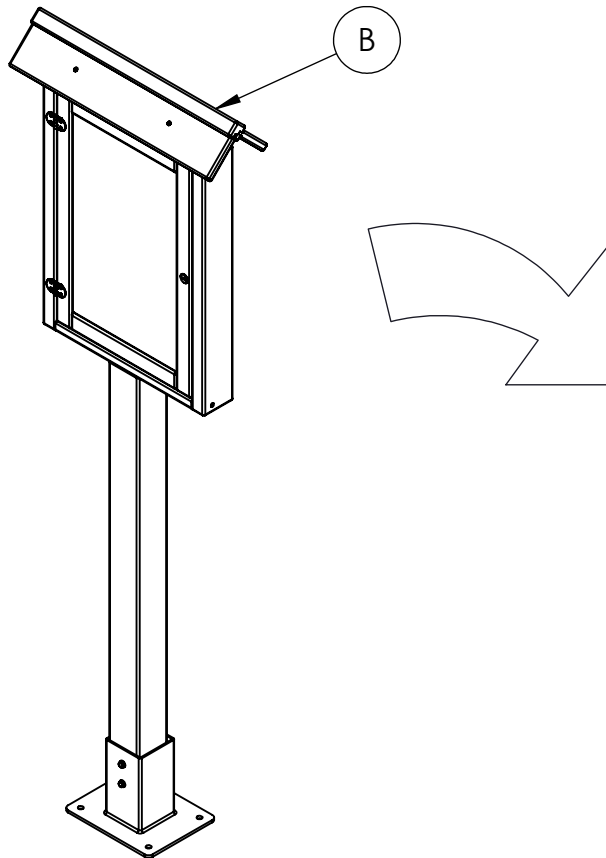


**ATTACH ROOF
TO MESSAGE
CENTER**

REMOVE GLASS COVERING

REMOVE GLASS COVERING

- Take a razor blade and score as close as possible to the frame, cutting the covering
- In a corner, peel back the the covering using the point of the knife blade
- Pull the covering off the glass
- Repeat for the other side

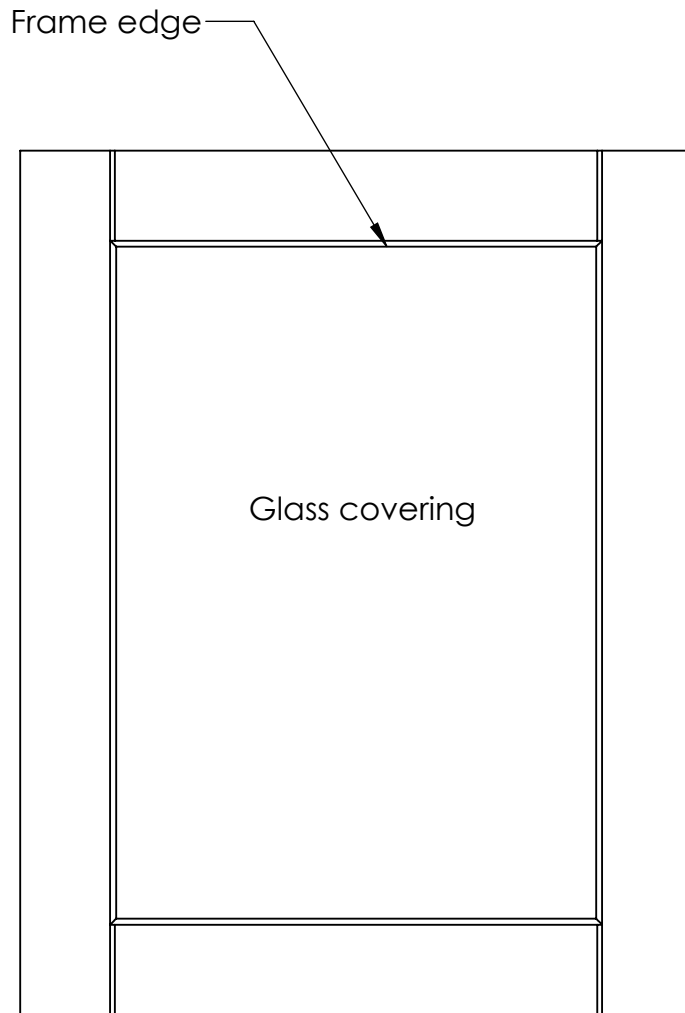

Score along thick line
with a razor blade

