

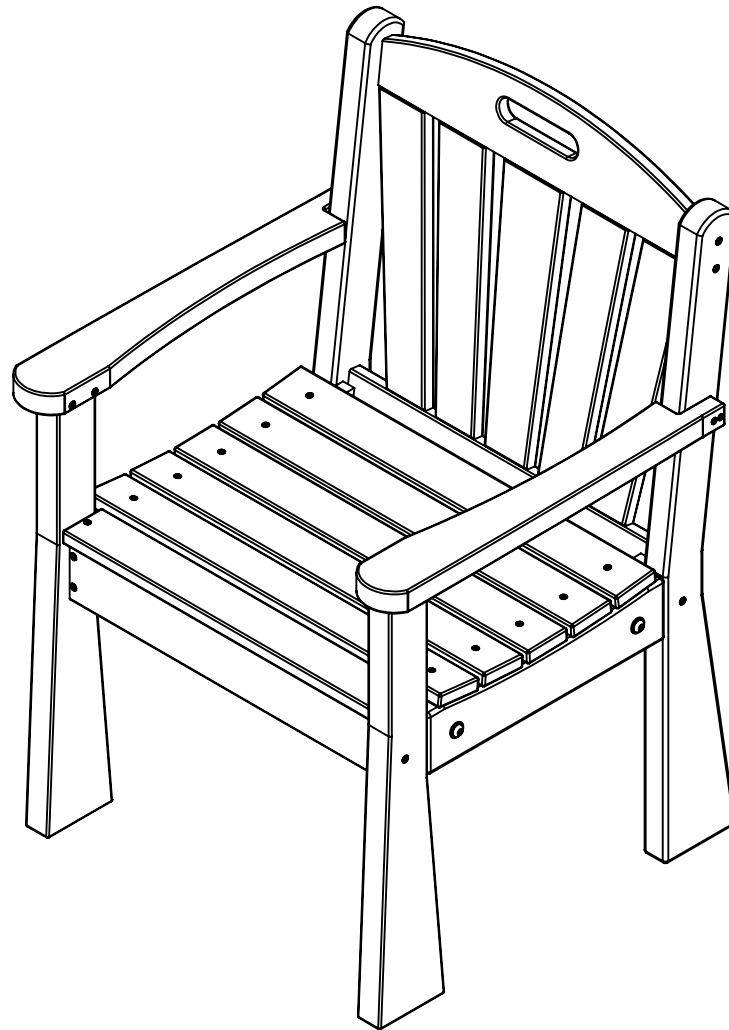
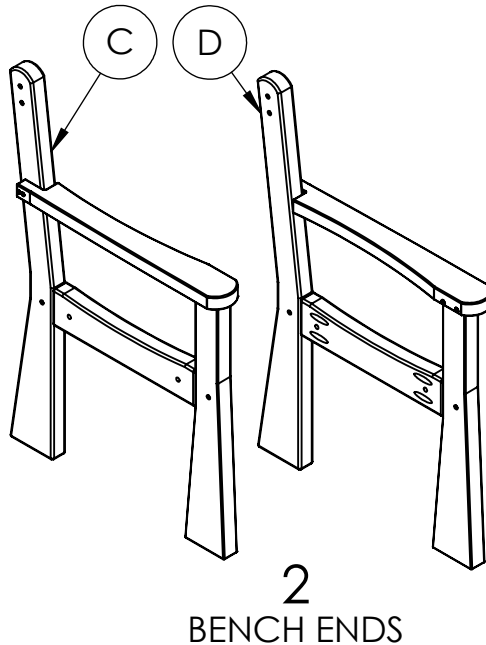


CHAIR INSTRUCTIONS

CF1110 REV# 2
9-12-2022

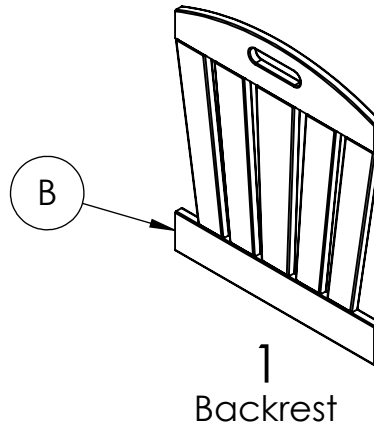

CHAIR INSTRUCTIONS

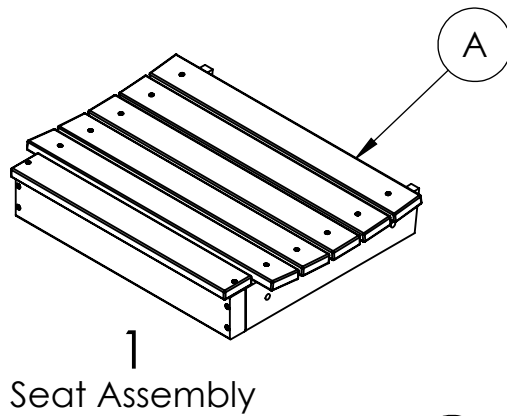

REQUIRED TOOLS (NOT INCLUDED)


- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- T30 TORX BIT

**NOTE: IT IS IMPORTANT TO KEEP ALL
SCREWS LOOSE DURING ASSEMBLY
UNTIL ENTIRE BENCH IS ASSEMBLED**


HARDWARE




4
3/8" x 3" Button Head Cap Screws

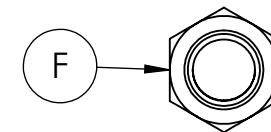

4
3/8" Hex Nuts

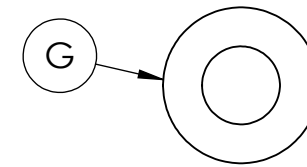

8
3/8" Flat Washer

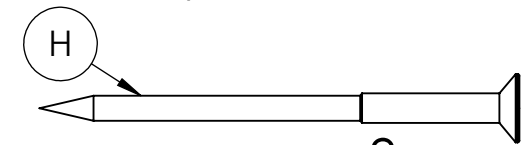


8
#10 x 2.5 Flat Head Screw

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/5


CHAIR INSTRUCTIONS

STEP 1

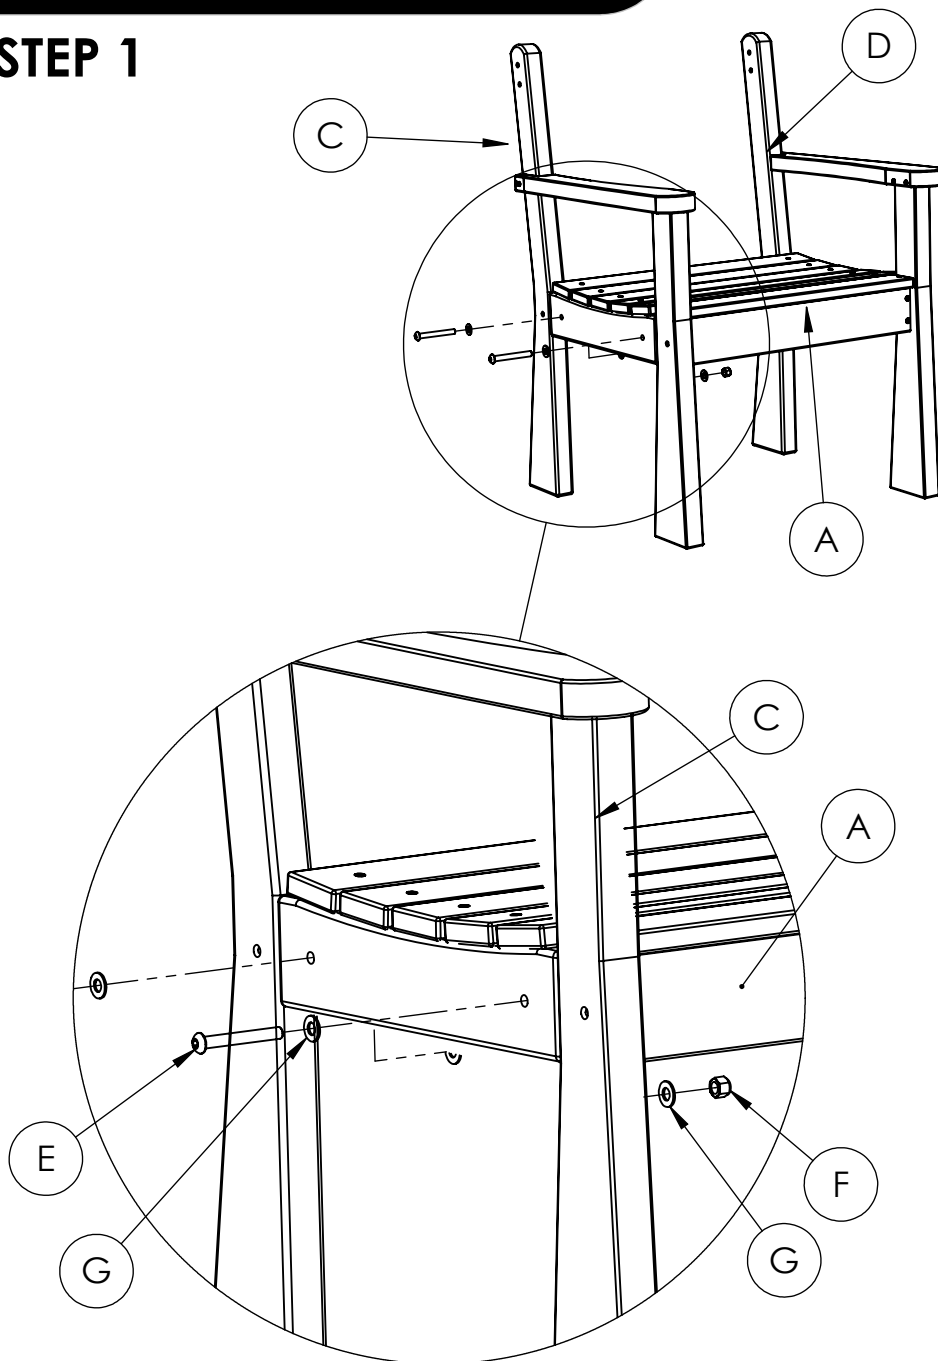

STEP 2

PRE-MARKED
HOLE LOCATIONS

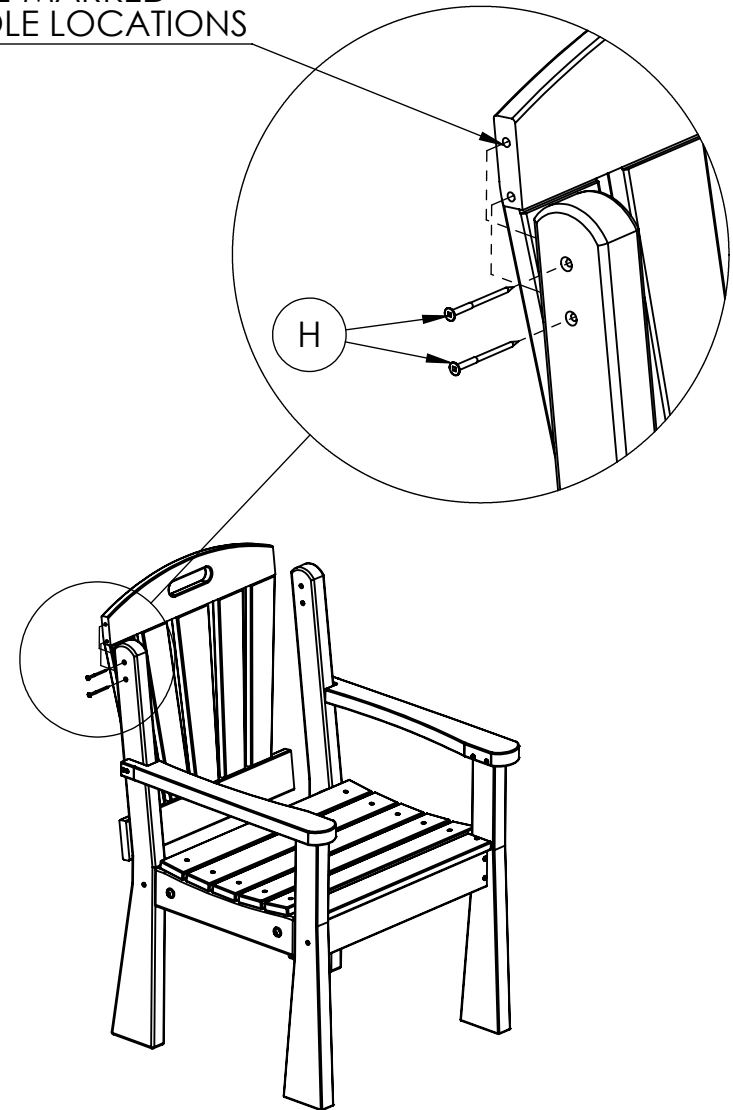


ASSEMBLY

3/5





CHAIR INSTRUCTIONS

STEP 3

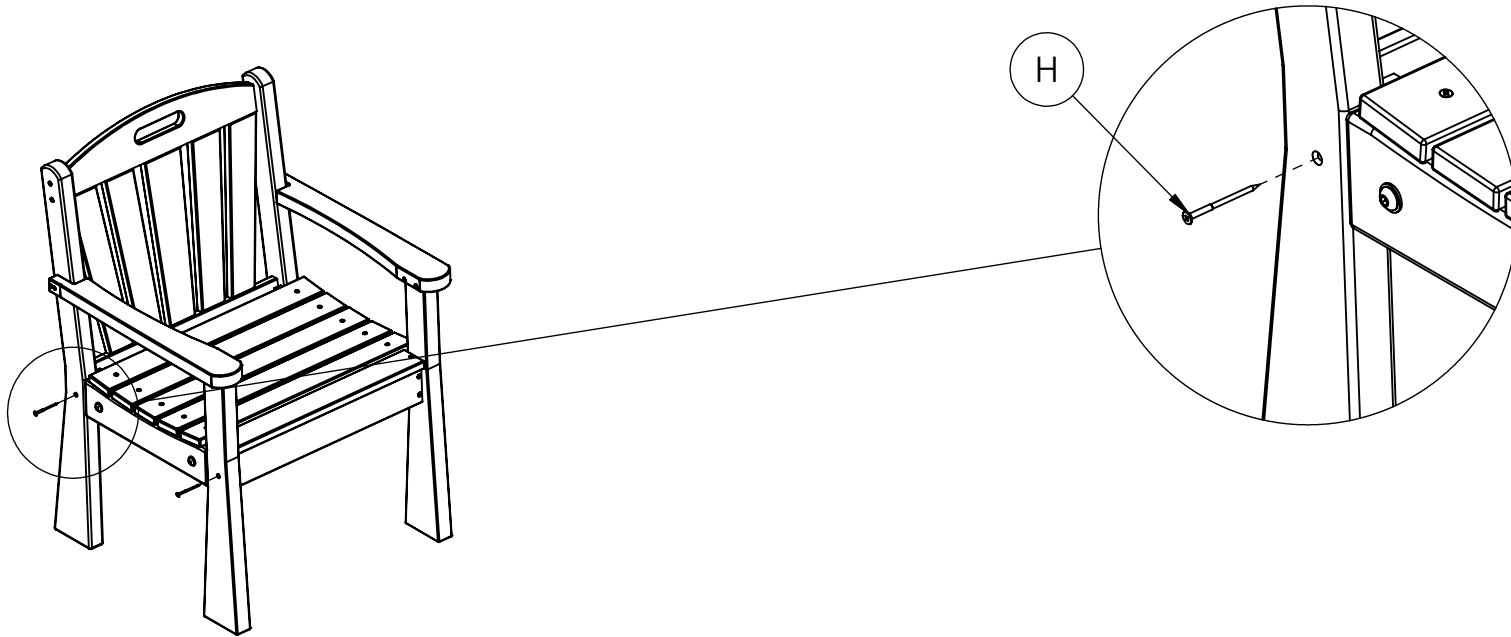

CHAIR SPECIFICATIONS

CF1110 REV# 2
9-12-2022

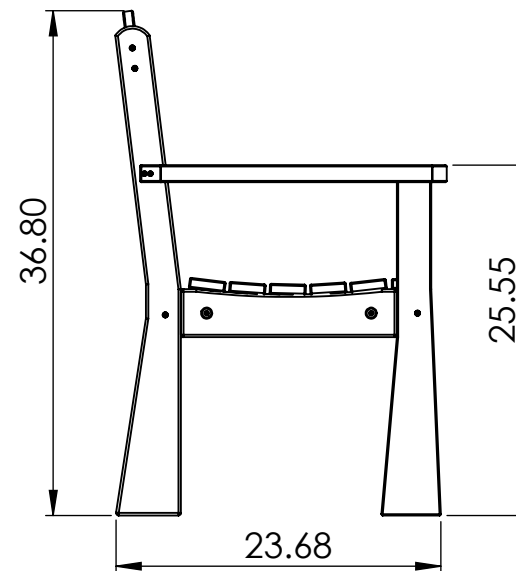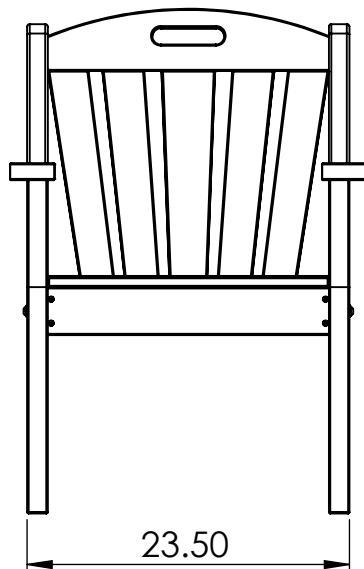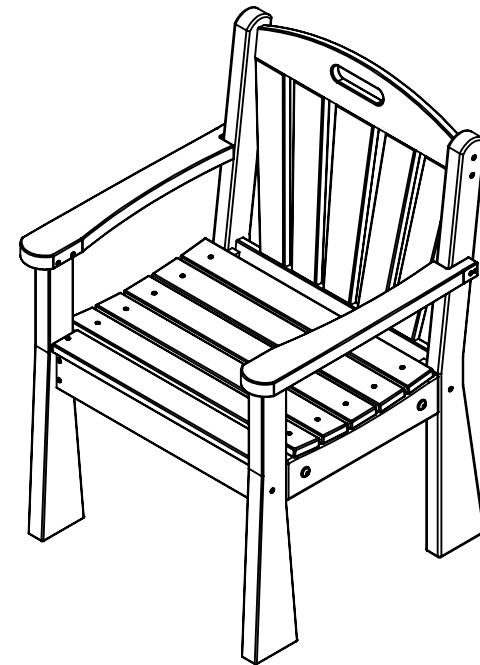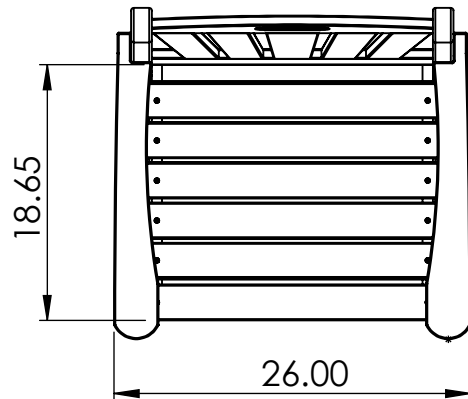

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES