


CF1065 REV# 3 10/01/2024

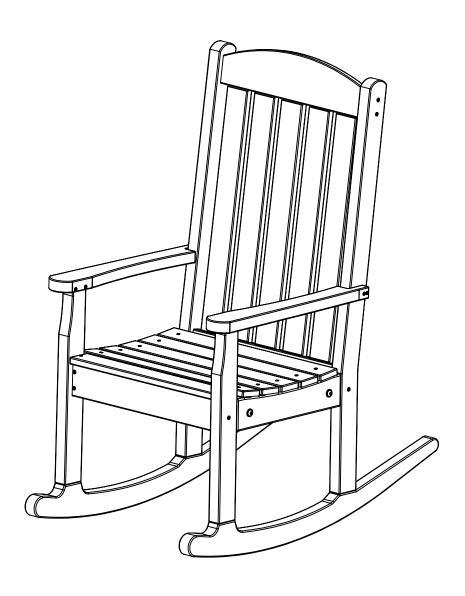


CHAIR INSTRUCTIONS

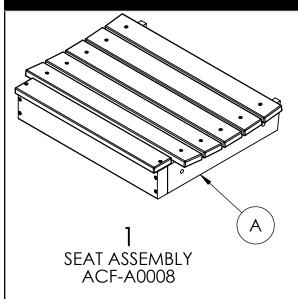

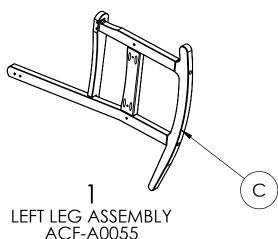


REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- 3/16 ALLEN WRENCH
- 1/2 WRENCH
- #2 SQUARE HEAD BIT

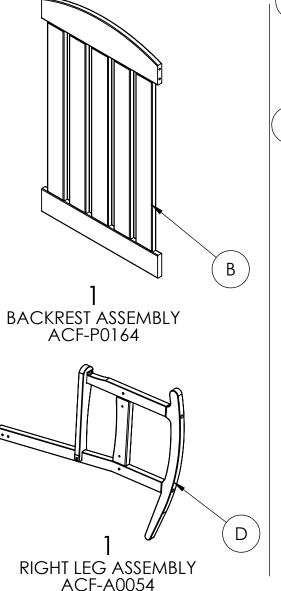

NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE CHAIR IS ASSEMBLED

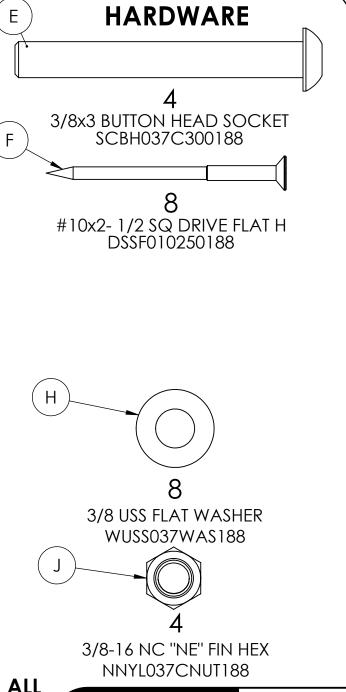


HARDWARE & TOOLS REQUIRED FOR ASSEMBLY


2/5

CHAIR INSTRUCTIONS


STEP 1

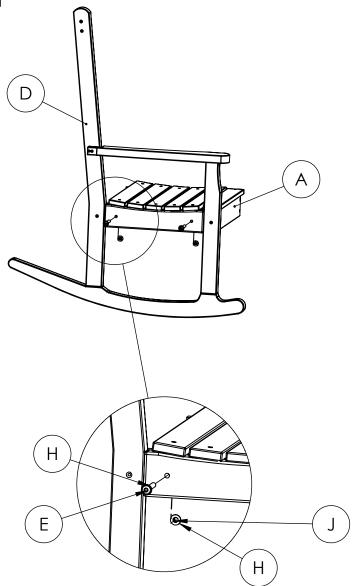

STEP 2

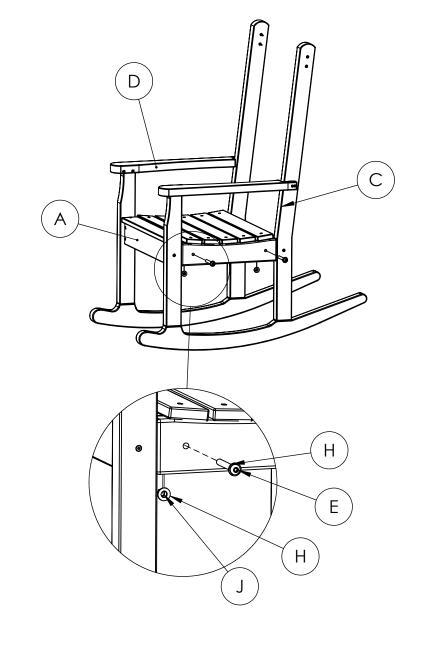



ASSEMBLY

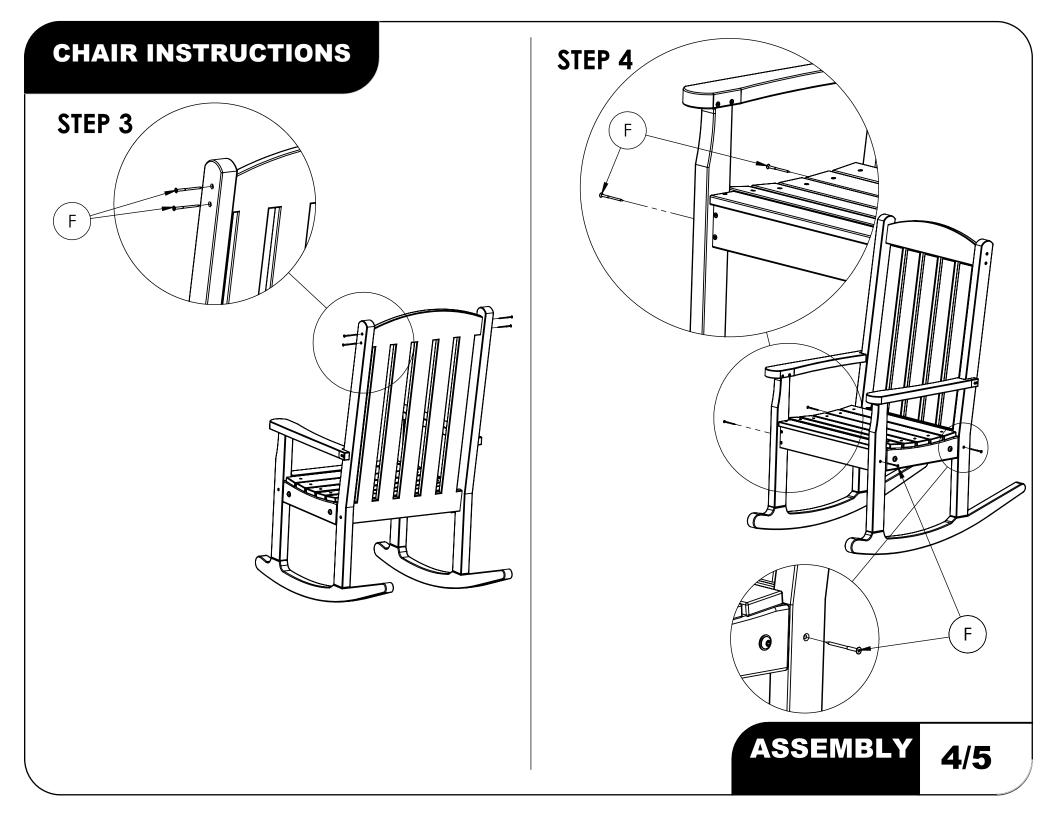



CHAIR SPECIFICATIONS

CF1065 Rev #2 9/12/22

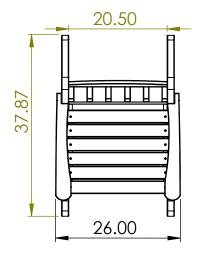

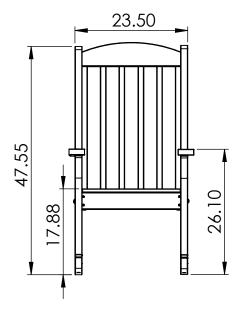

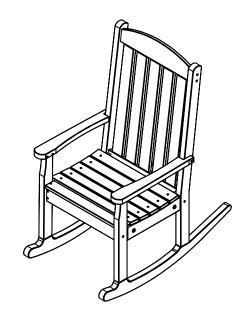

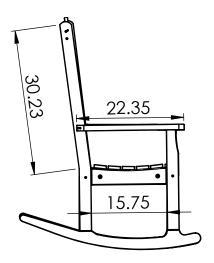

CONSTRUCTION MATERIALS: Recycled Plastic HARDWARE: Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES