



3 SIDED KIOSK INSTRUCTIONS


MC3225 REV #3
1/16/2023

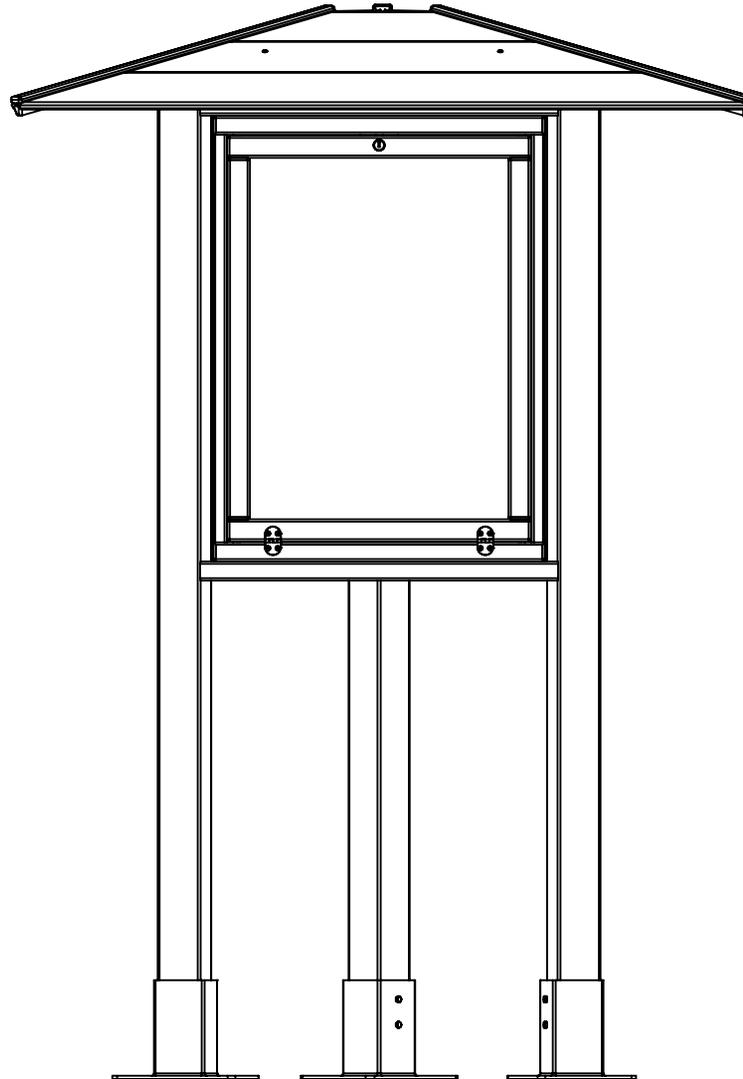


3 SIDED KIOSK INSTRUCTIONS

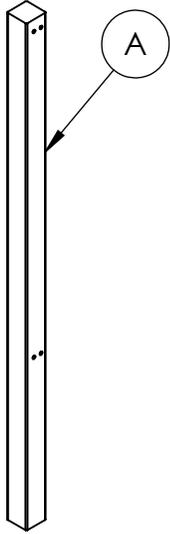


3
4 x 4 Posts
AMC-P0097

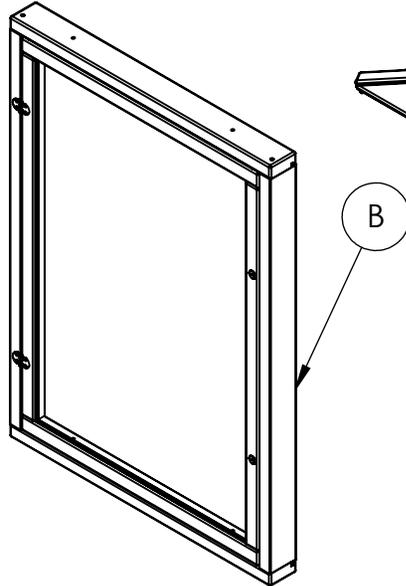


3
Message Centers
AMC-A0034

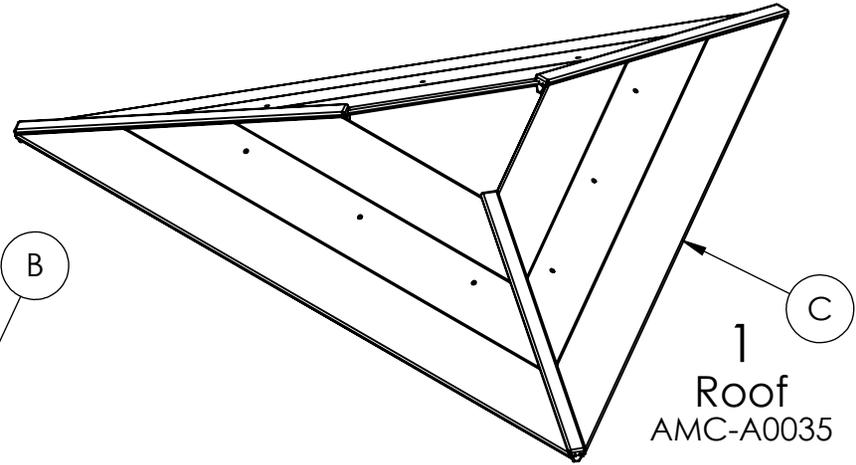


1
Roof
AMC-A0035

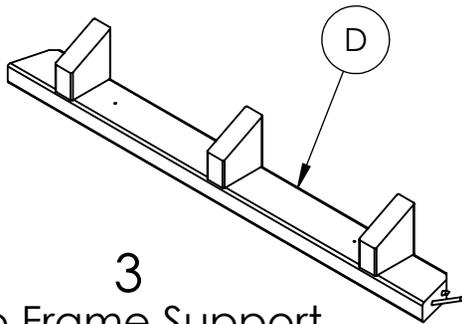

3
Top Frame Support
AMC-A0033

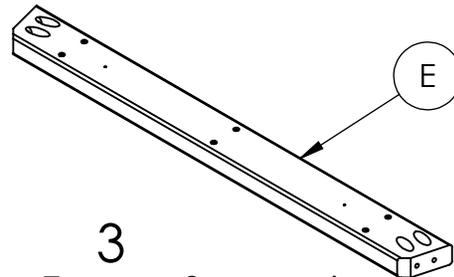


3
Bottom Frame Support
AMC-P0096

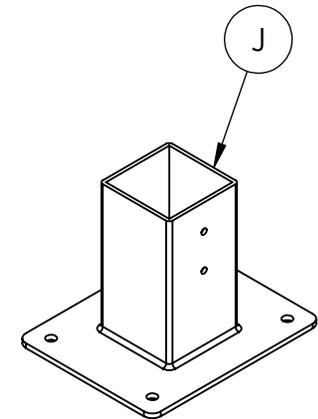


2
Mounting Bases
AMC-9185

**COMPONENTS &
TOOLS REQUIRED
FOR ASSEMBLY**


3 SIDED KIOSK INSTRUCTIONS

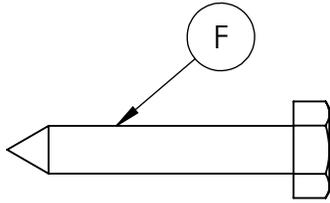


18
1/4" x 1-1/2" Lag Screws
HLAG025C150188

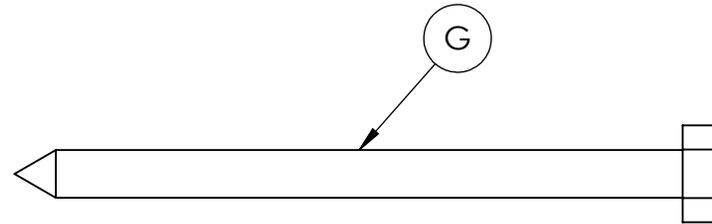

24
1/4" x 3-1/2" Lag Screws
HLAG025C350188

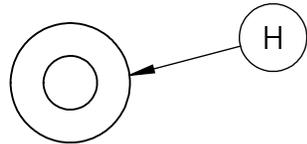

42
1/4" Flat Washers
WUSS025WAS188

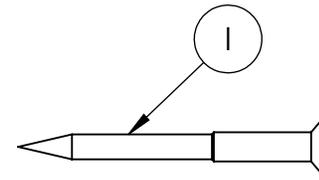

9
#8 x 1-5/8" Flat Head Screws
DSSF010C400188

REQUIRED TOOLS (NOT INCLUDED)


- 1 - 7/16" SOCKET
- 1 - SCREW GUN
- 1 - LEVEL
- 1 - #2 SQUARE DRIVE

COMPONENTS &
TOOLS REQUIRED
FOR ASSEMBLY


2/9

3 SIDED KIOSK INSTRUCTIONS

Pockets always face down
1-1/2" Lag screw always in inside corner

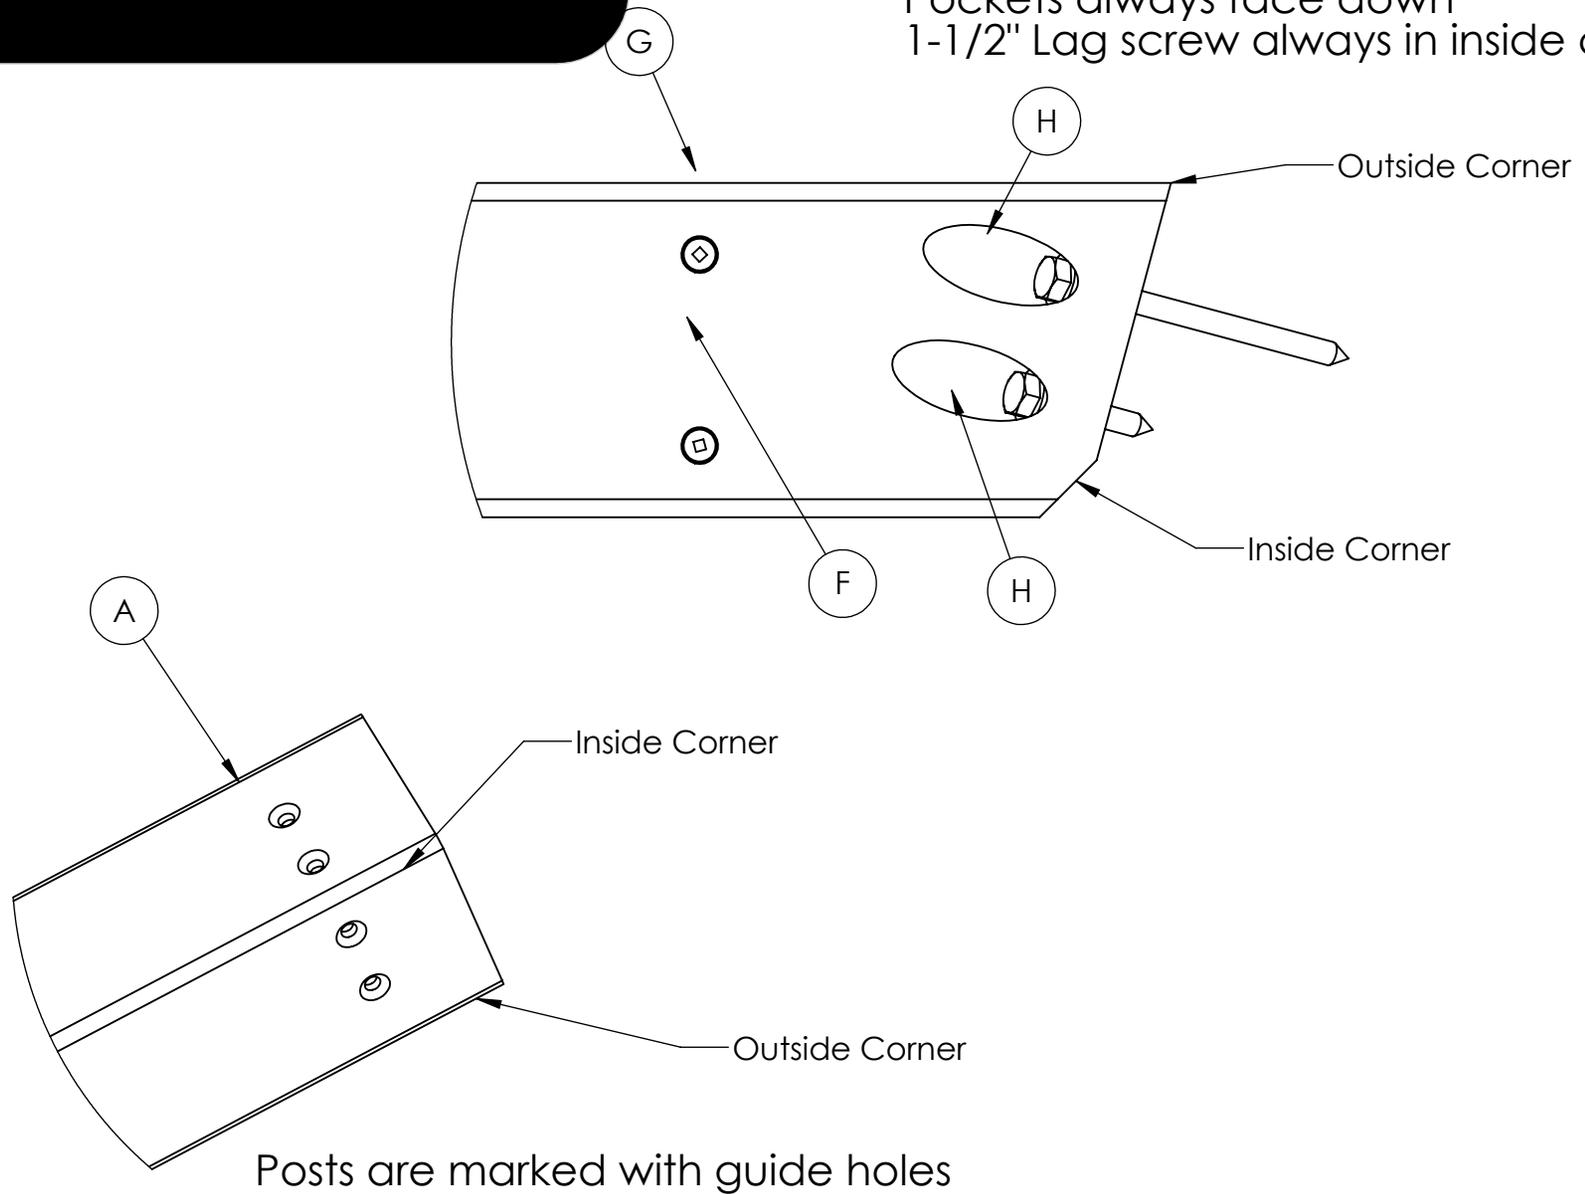


3 SIDED KIOSK INSTRUCTIONS

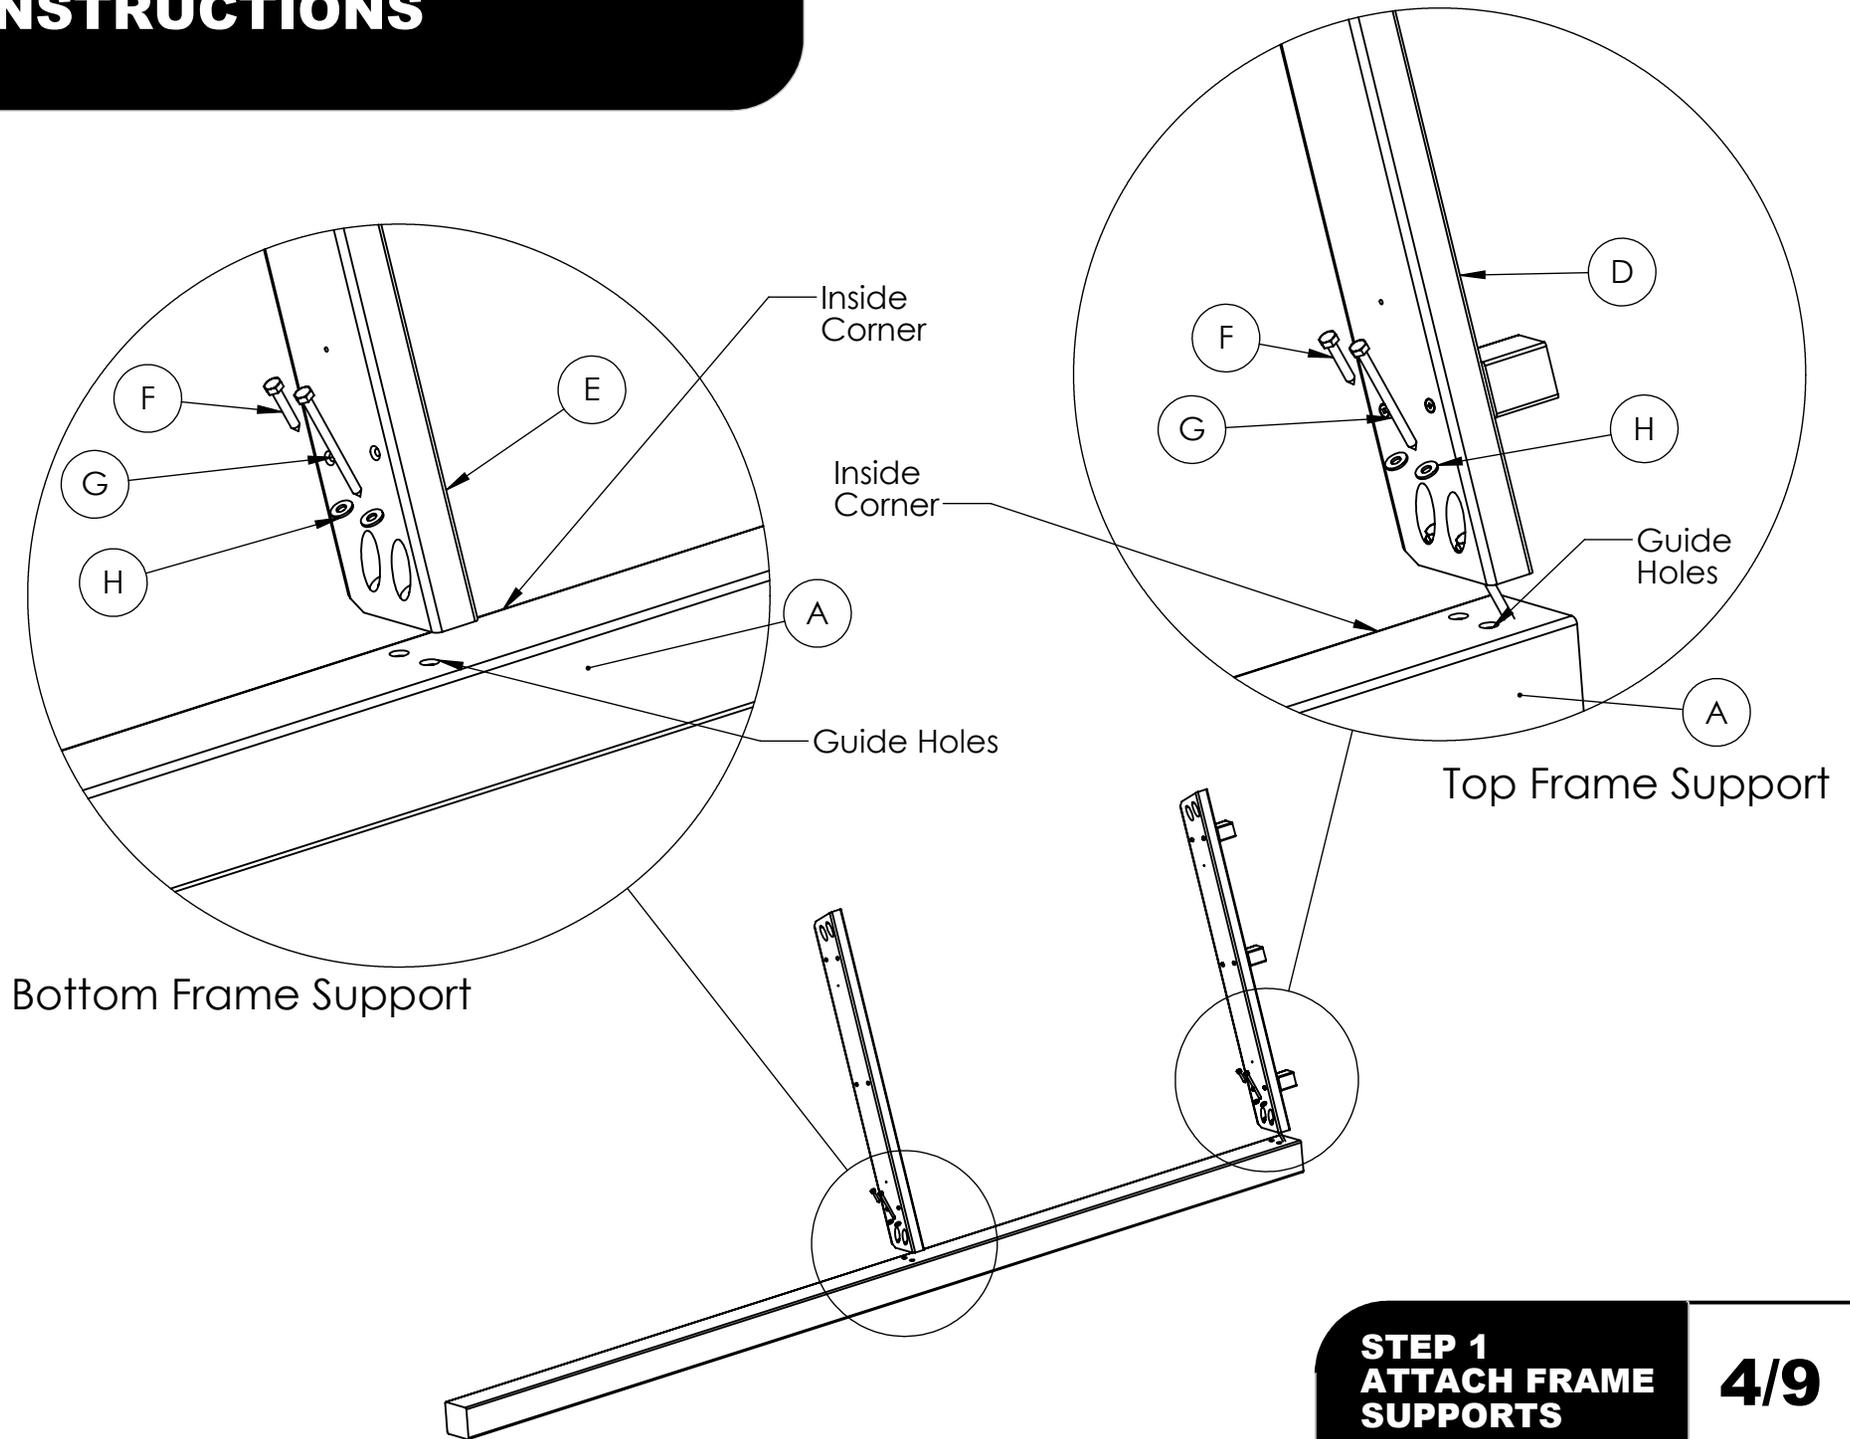


3 SIDED KIOSK INSTRUCTIONS

Attach second frame supports

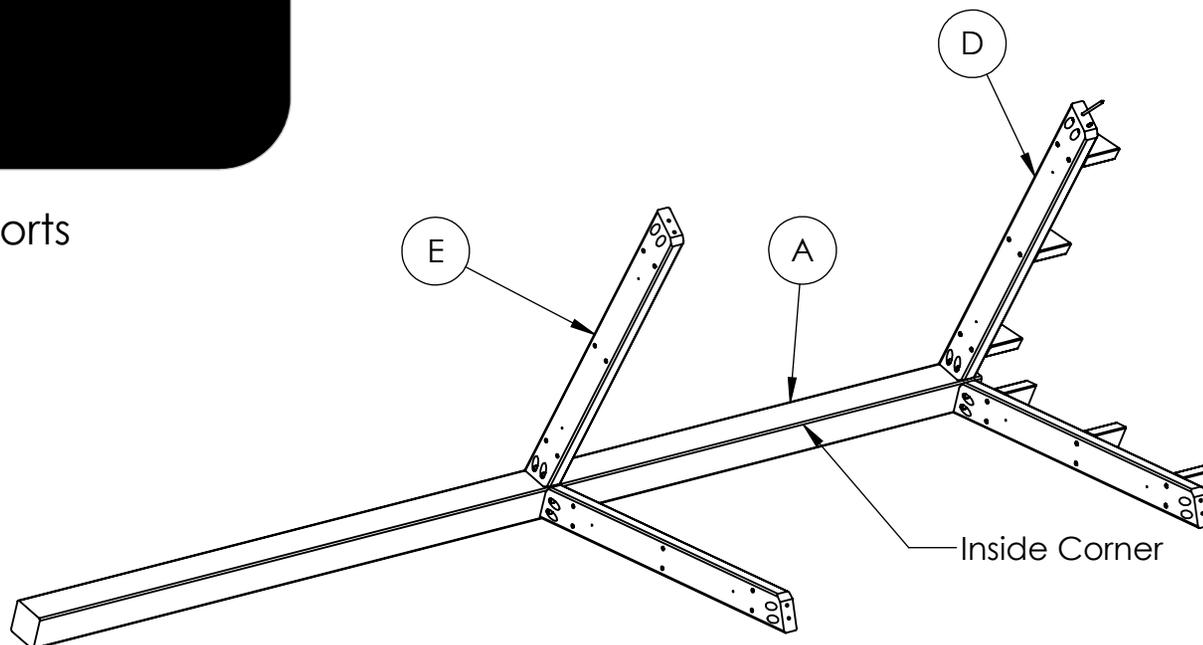

Attach second post

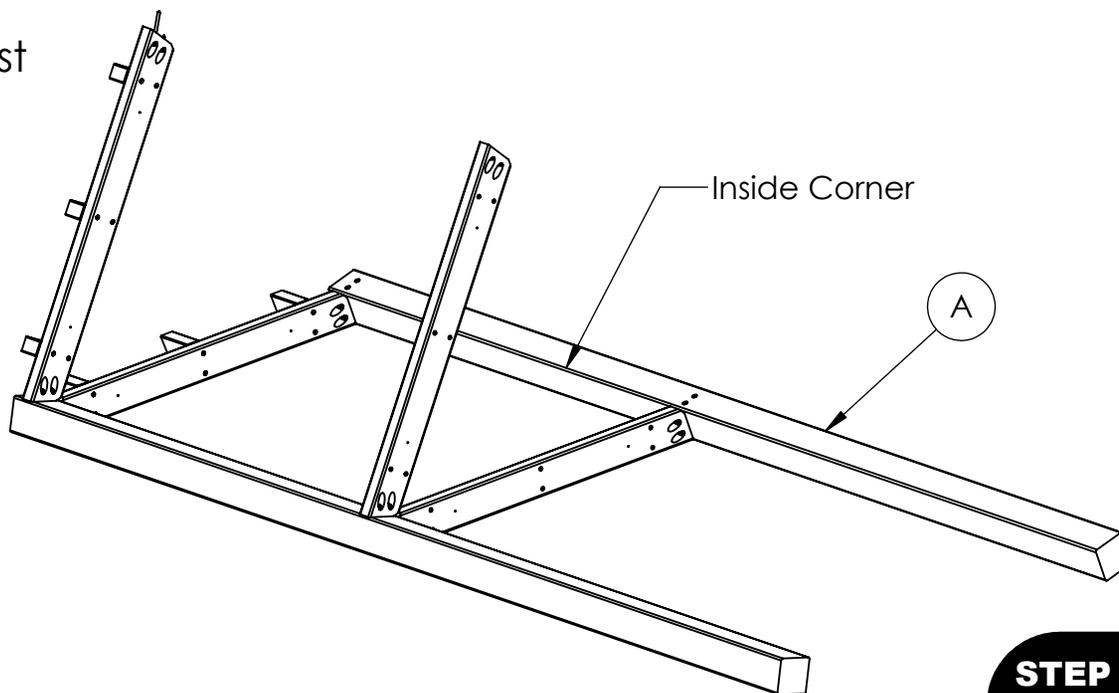


STEP 2
ATTACH SECOND
FRAME SUPPORTS


5/9

3 SIDED KIOSK INSTRUCTIONS


Attach third frame supports

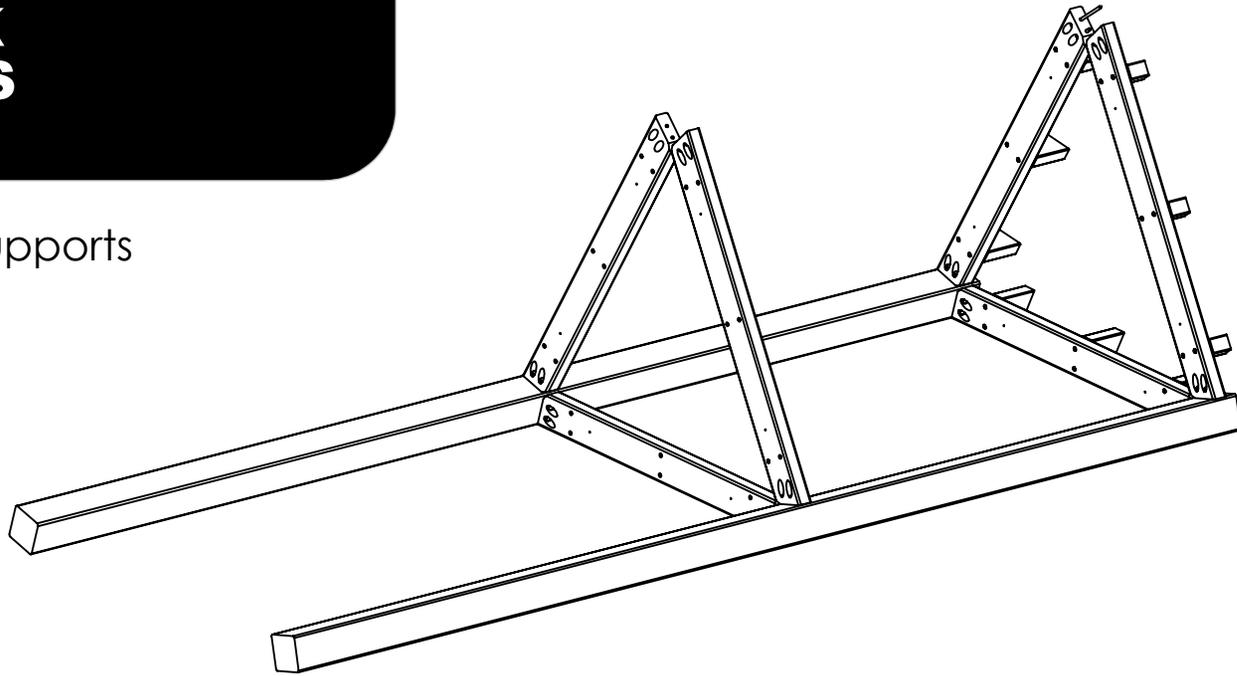

Attach third post

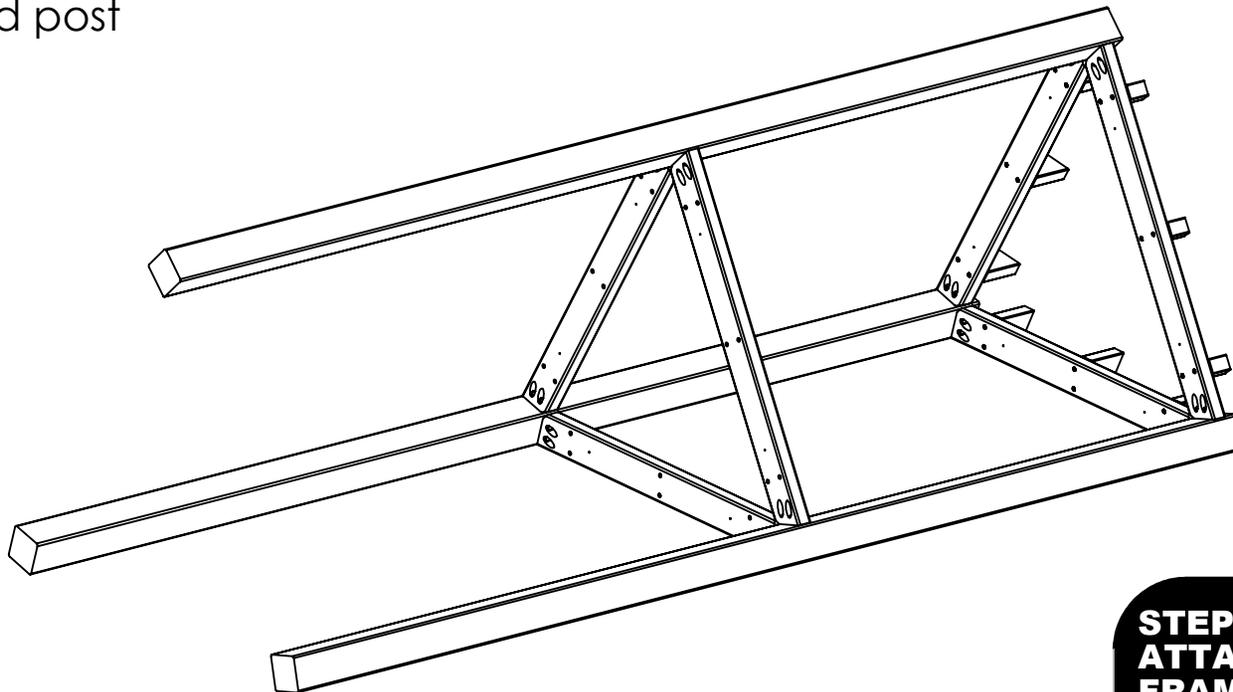


3 SIDED KIOSK INSTRUCTIONS

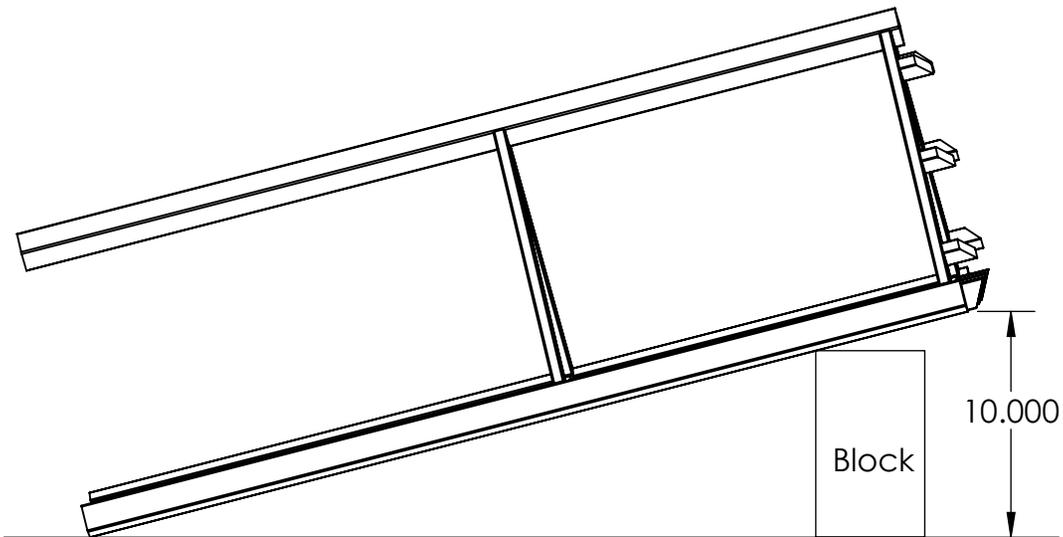

Attach Roof


- Raise the top of the frame assembly at least 10 inches off the ground to attach the roof
- Secure roof using the #8 x 1-5/8" flat head screws (I) provided

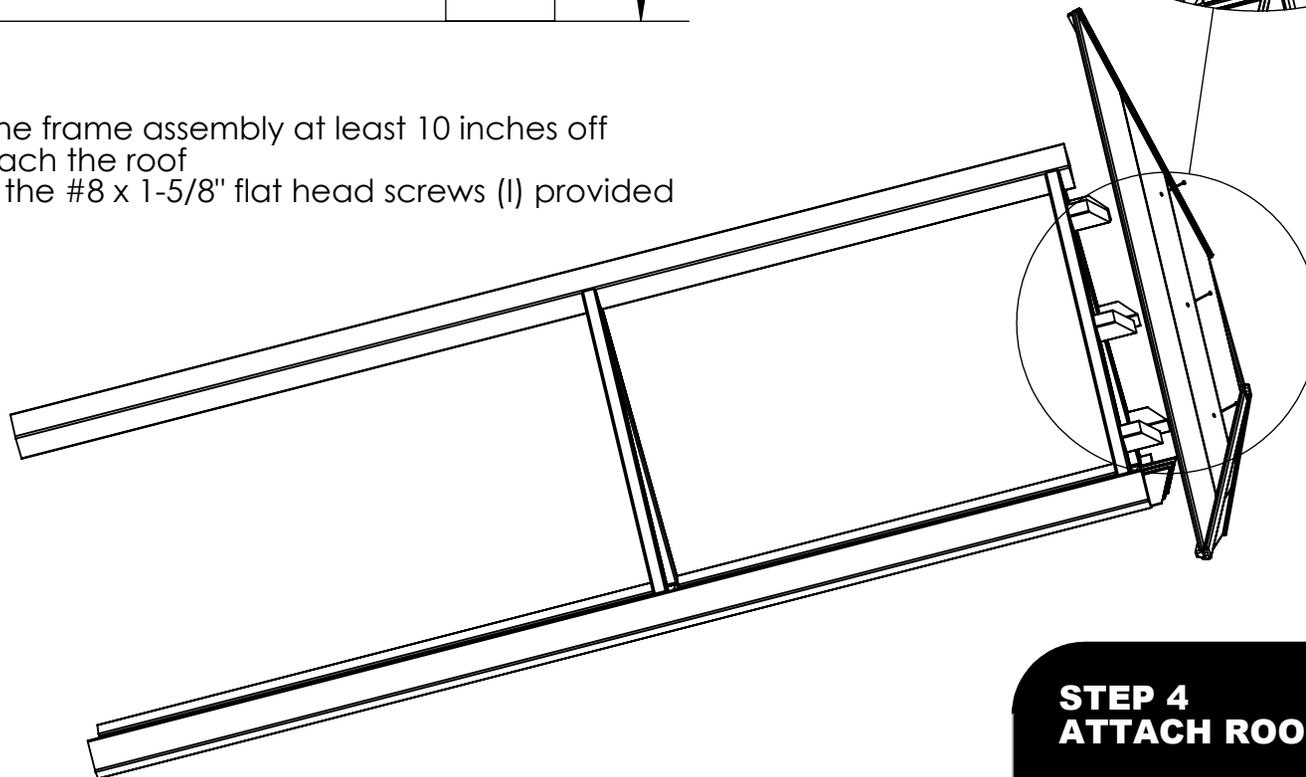

3 SIDED KIOSK INSTRUCTIONS


Surface Mount

- Place a piece of cardboard underneath the edge of the roof (C)
- Move the blocks to the base of the frame assembly
- Attach the mounting bases (J) using two 1/4" x 1-1/2" lag screws (F) and two 1/4" flat washers (H) per mounting base (J)

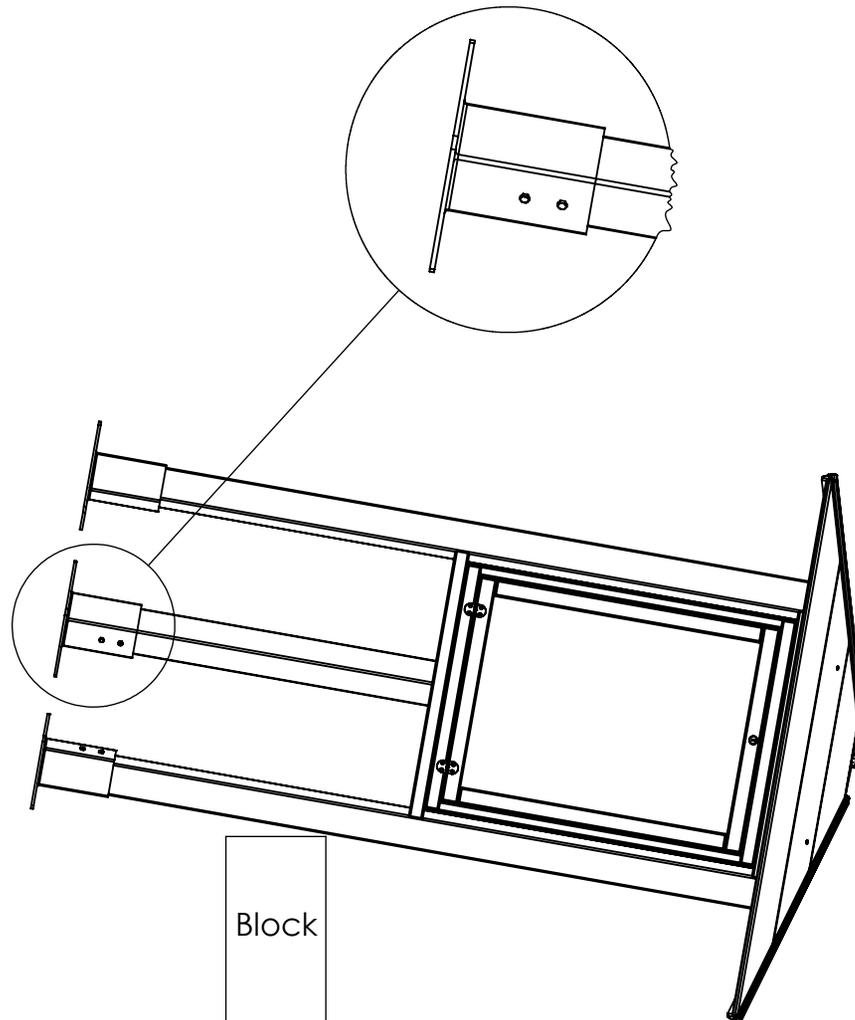

Surface Mount


- Stand the assembly upright and place in desired location
- Mark the hole locations on the ground
- Use the appropriate mounting hardware for your location and secure the frame assembly to the ground

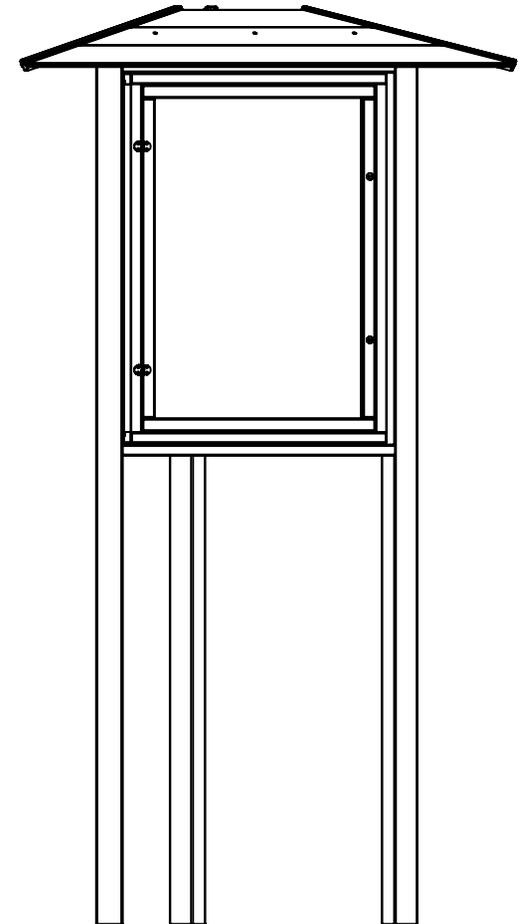

3 SIDED KIOSK INSTRUCTIONS

Attach Message Centers

- Set a message center (B) into the frame assembly
- Insert four 1/4" x 3-1/2" lag screws (G) and 1/4" flat washer (H)
- through the guide holes in the top and bottom of the message center (B)
- Tighten and repeat for the other two message centers

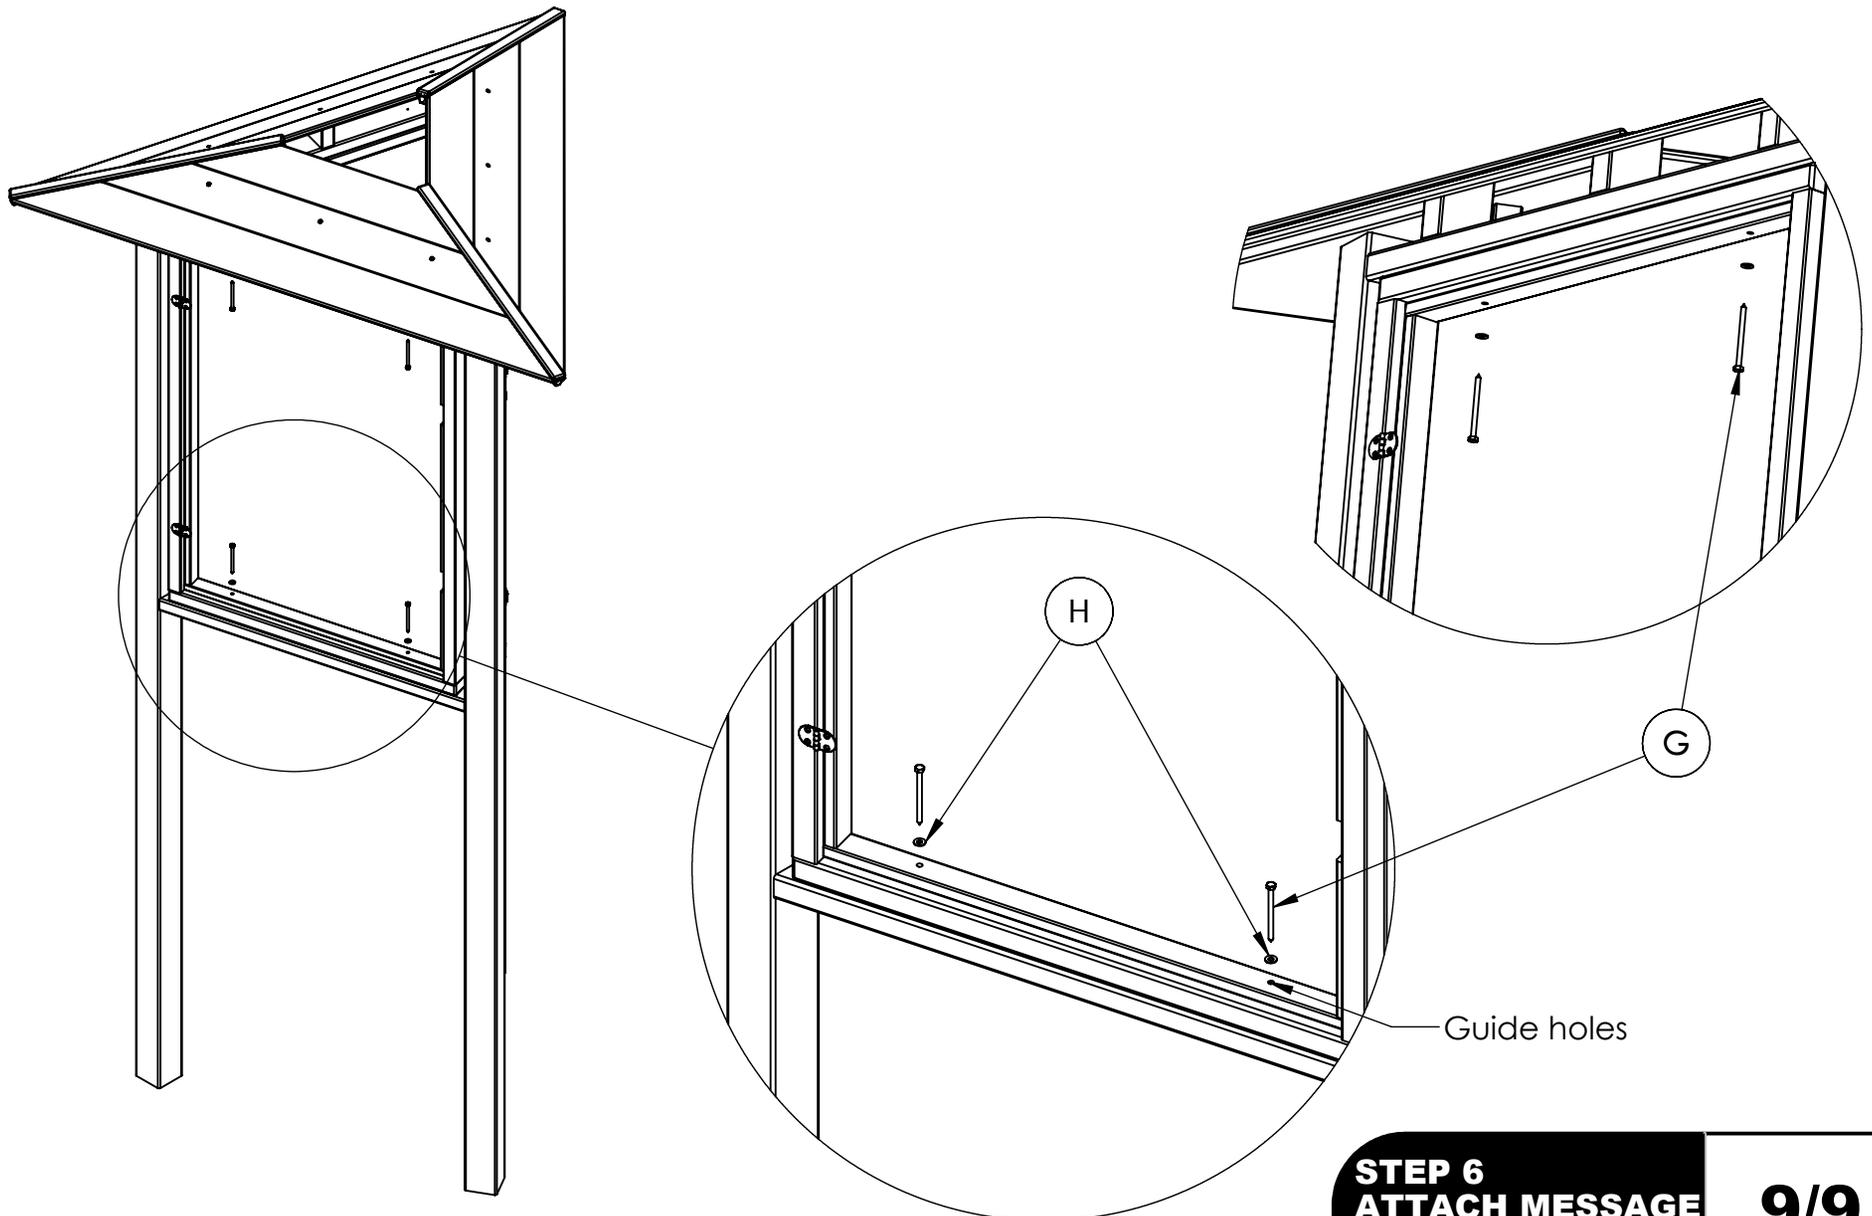


STEP 6
ATTACH MESSAGE
CENTERS


9/9

THREE-SIDED KIOSK SURFACE MOUNT

MC2225 REV #3
1/16/2023

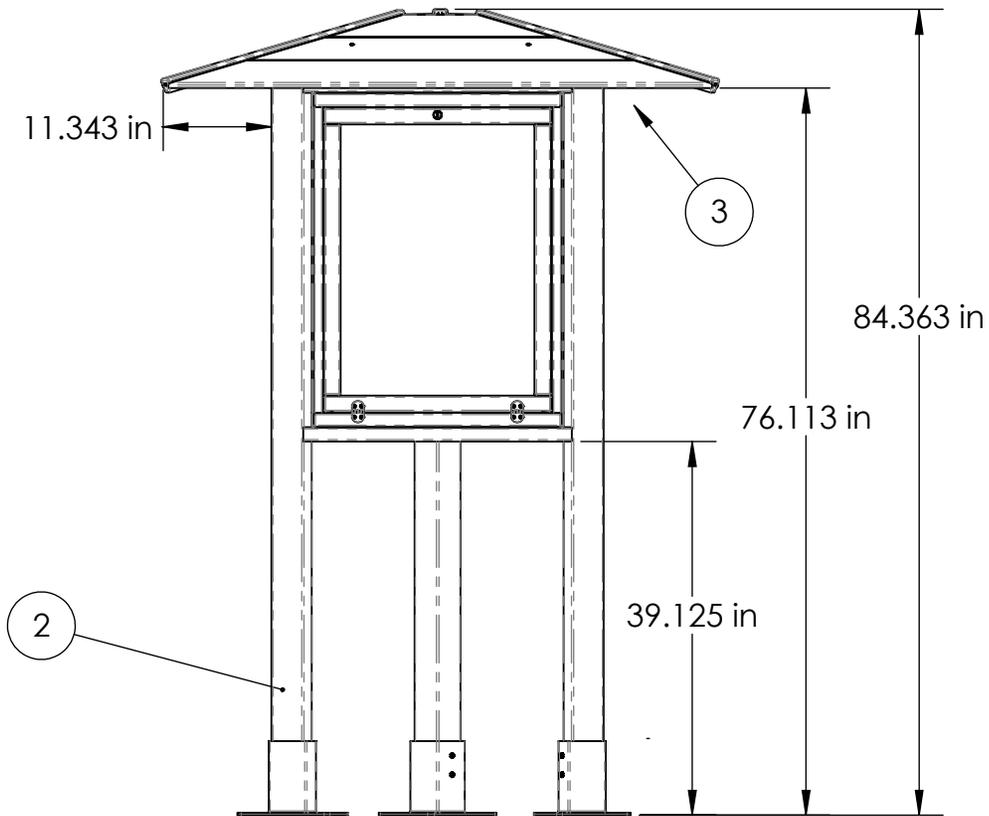





FRONT

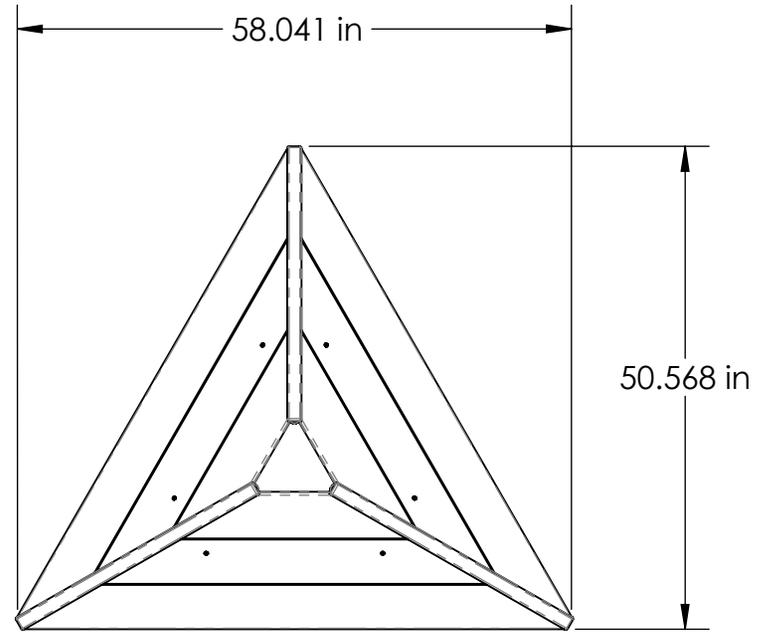

TOP

THREE-SIDED KIOSK SURFACE MOUNT

MC2225 REV #3
1/16/2023

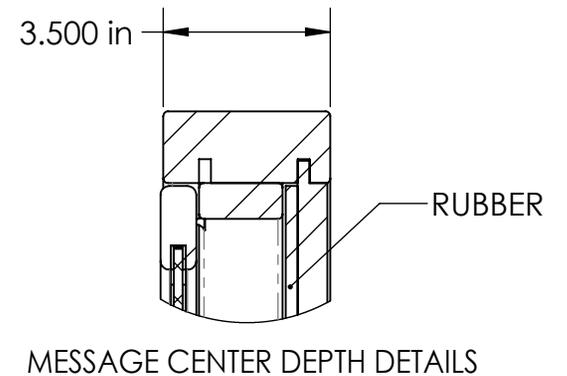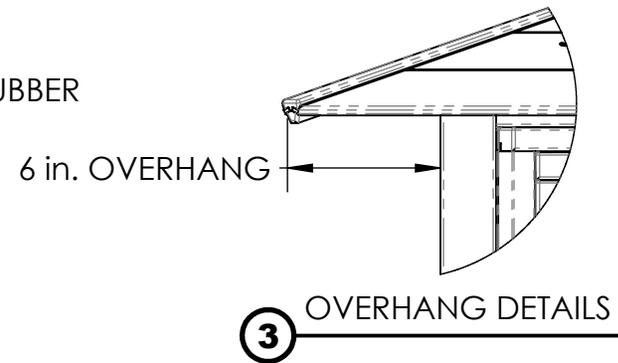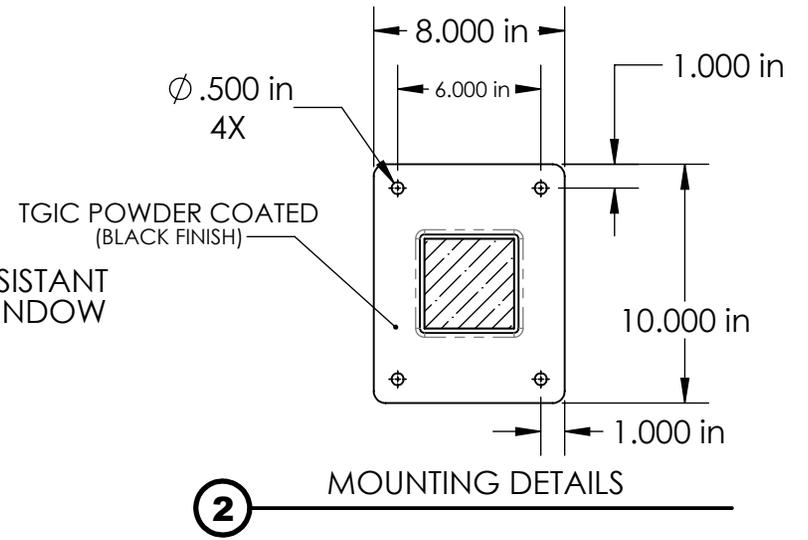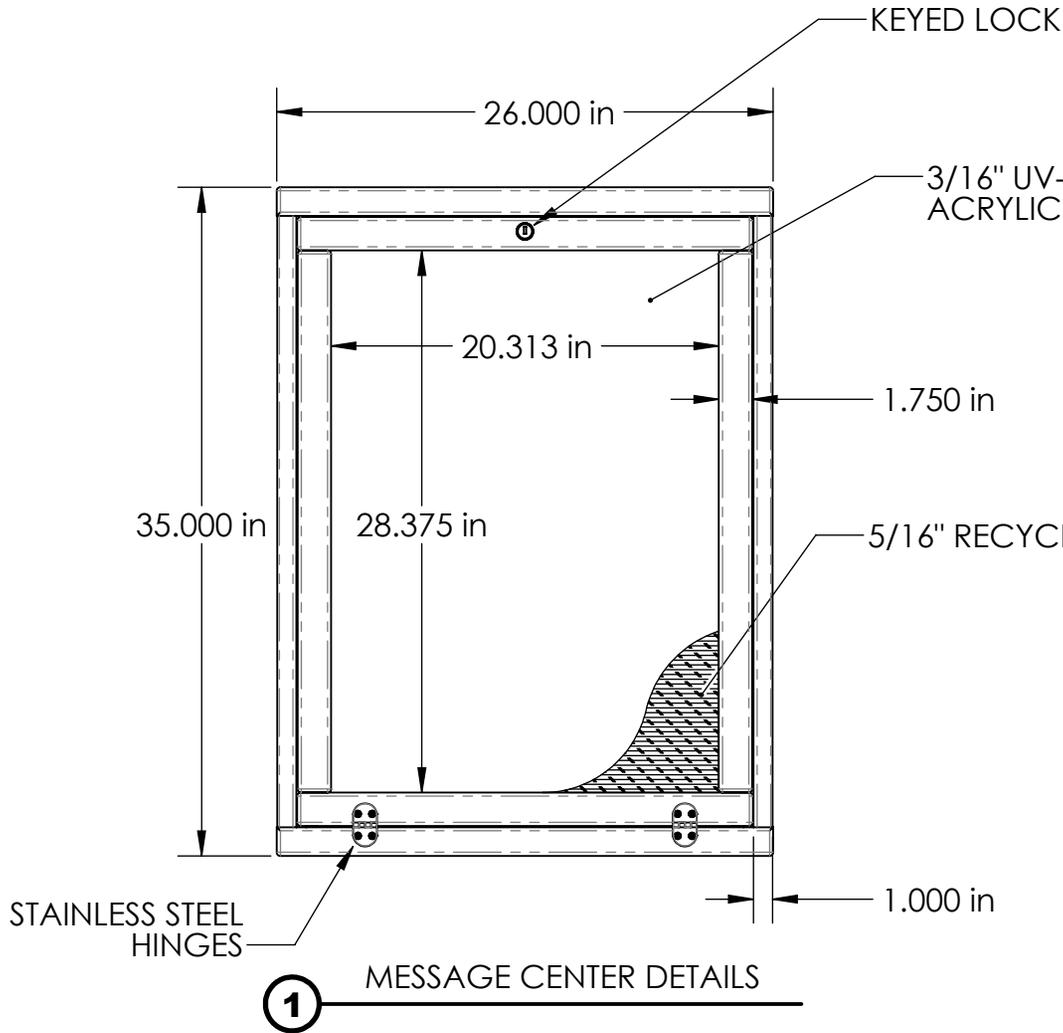

HARDWARE: STAINLESS STEEL
MATERIAL: RECYCLED PLASTIC, ACRYLIC, 5/16" RECYCLED RUBBER