



# INSTRUCTIONS

6 FT & 8 FT Backless Benches, Inground & Surface Mount

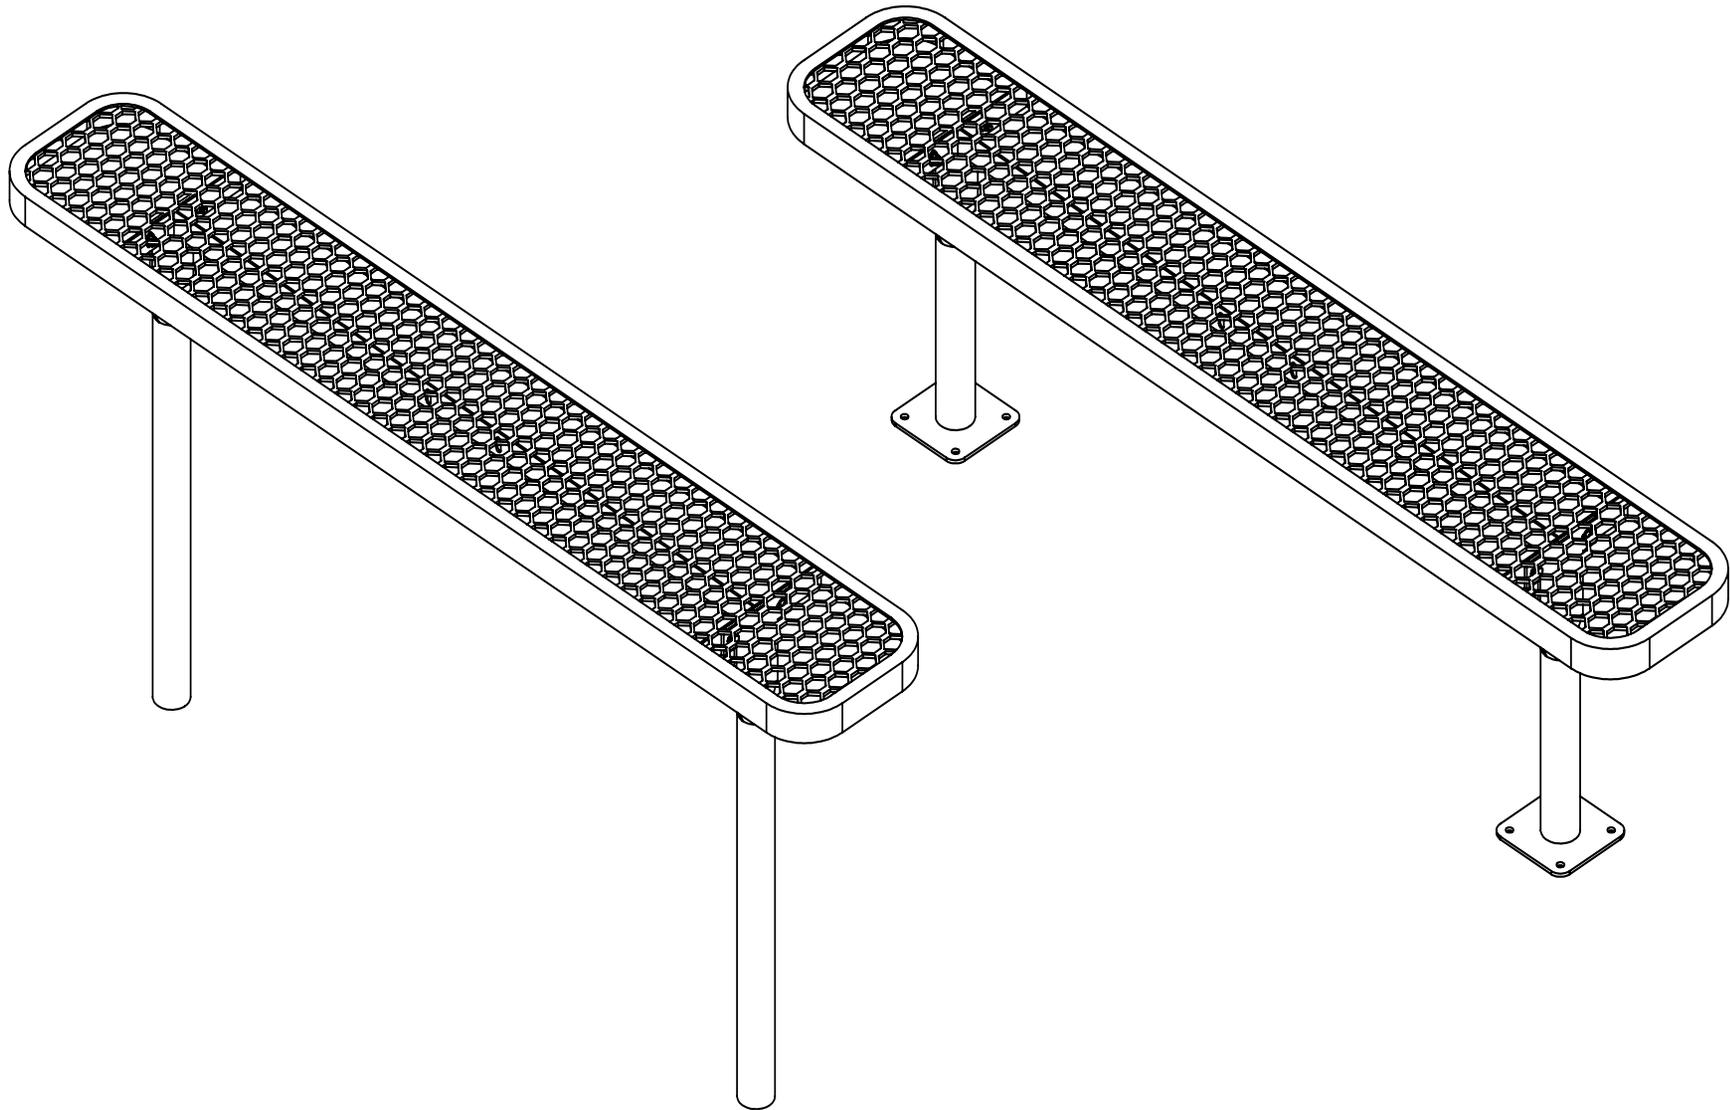


# INSTRUCTIONS

Inground Mount

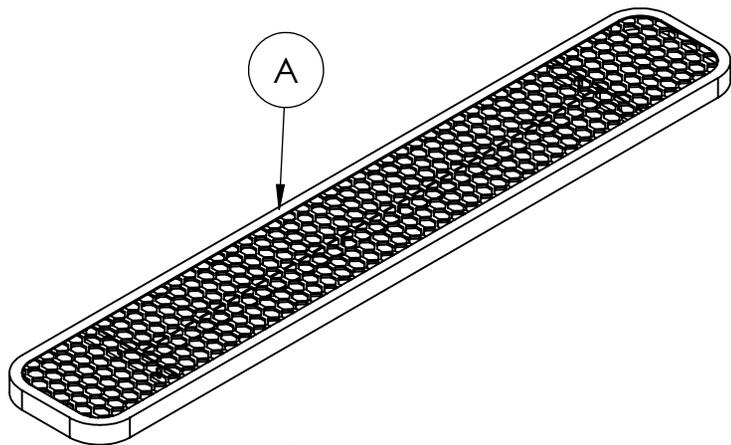


1  
Seat

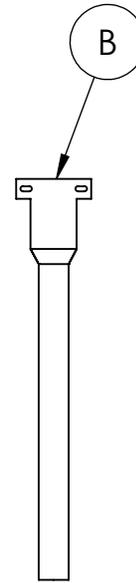


2  
Bench Ends


## HARDWARE

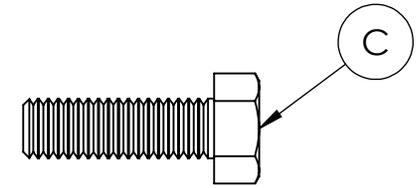

4  
M8 x 25  
Hex Head Bolts

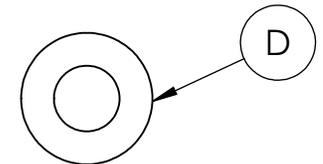

8  
M8 Flat Washer

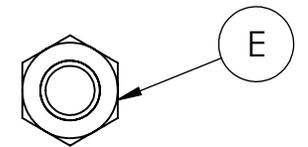

4  
M8 Hex Nut

### REQUIRED TOOLS (NOT INCLUDED)


- 1 - 13MM WRENCH
- 1 - 13MM SOCKET

**NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED**

**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/4**

# INSTRUCTIONS

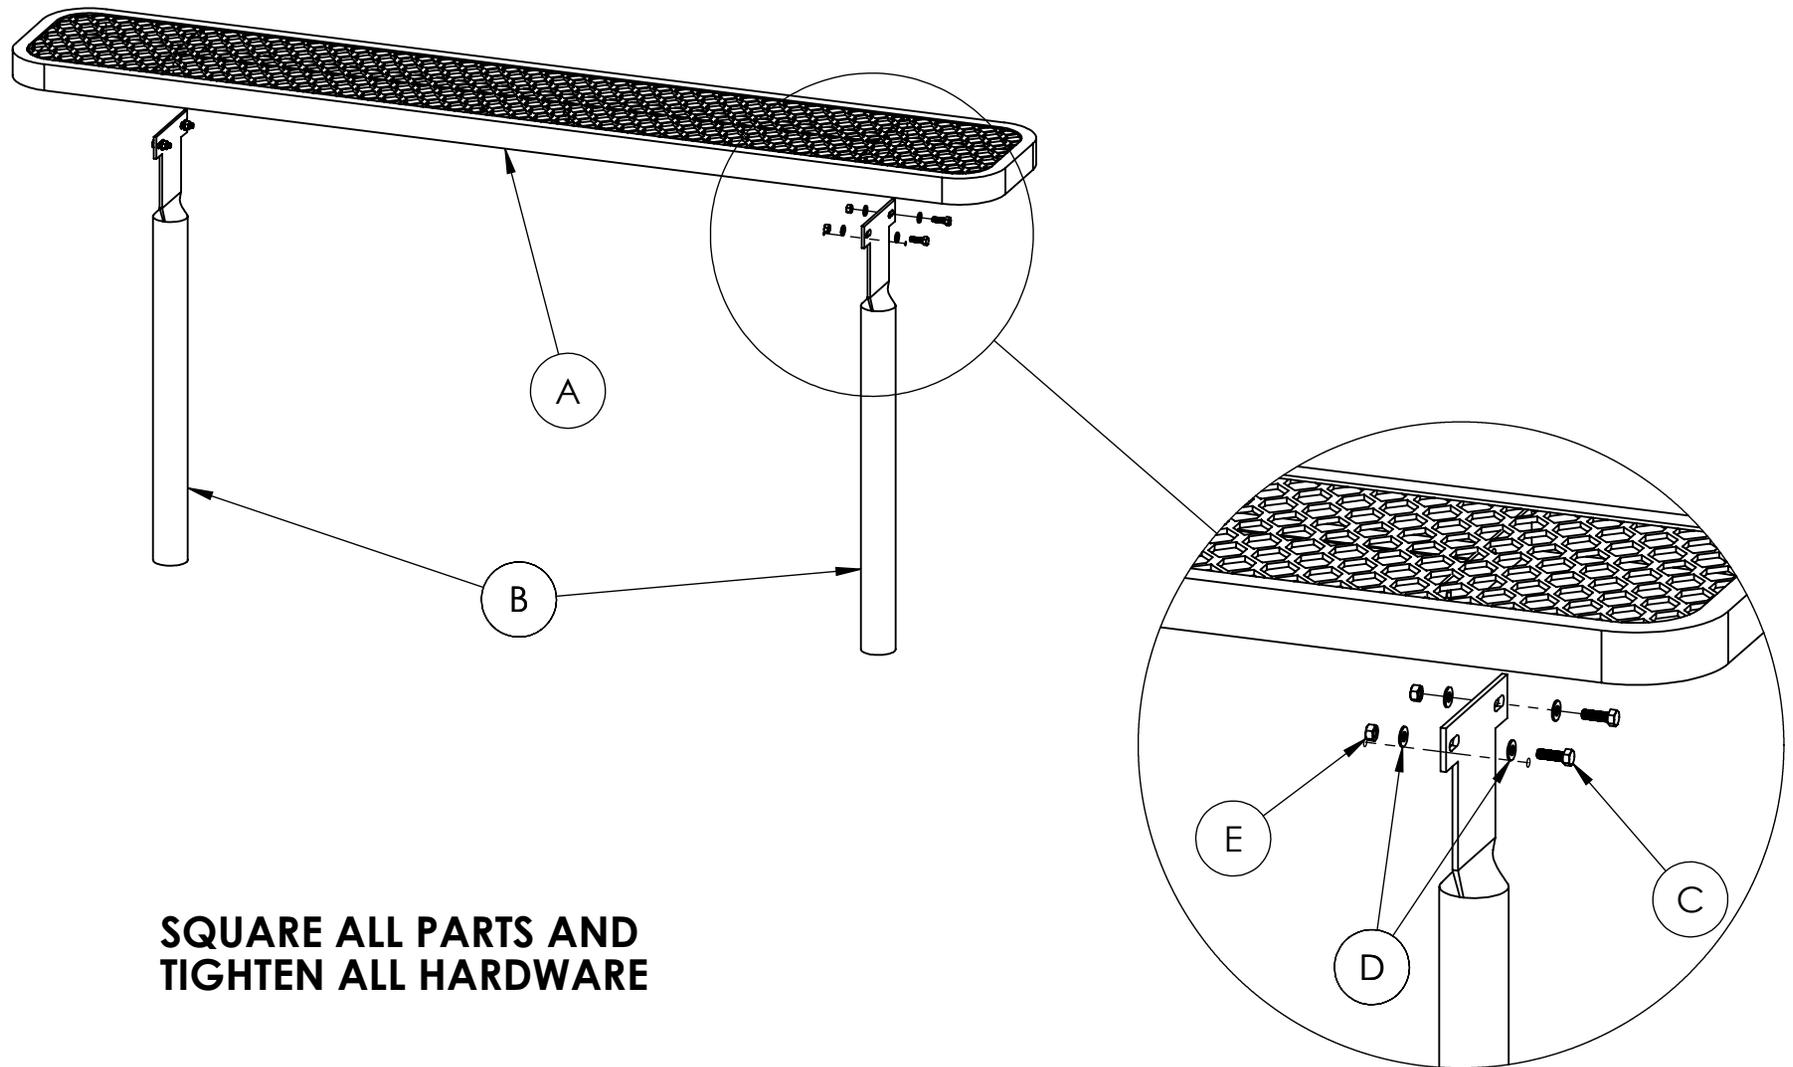


**SQUARE ALL PARTS AND  
TIGHTEN ALL HARDWARE**

**ATTACH SEATS  
TO BENCH ENDS**


**3/4**

# INSTRUCTIONS

Surface Mount

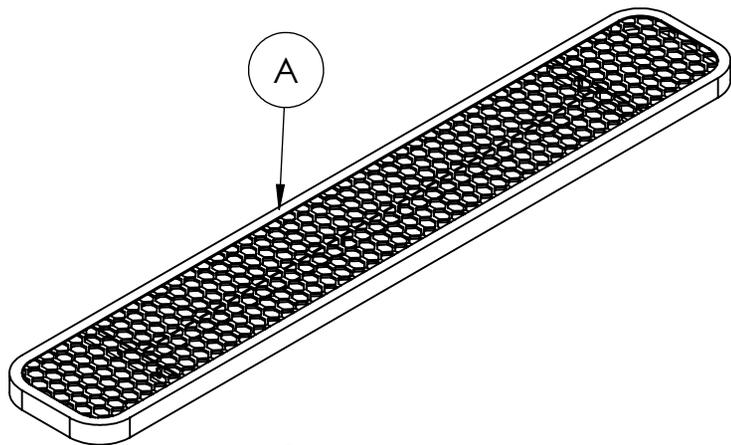


1  
Seat

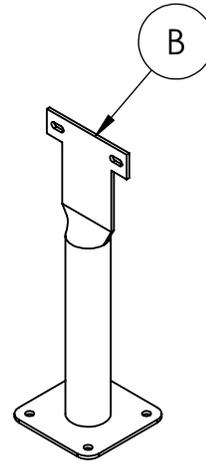


2  
Bench Ends


## HARDWARE

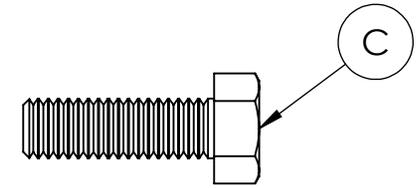

4  
M8 x 25  
Hex Head Bolts

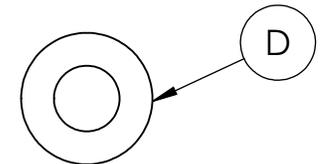

8  
M8 Flat Washer

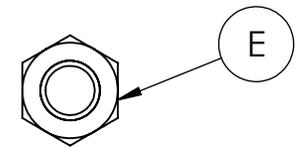

4  
M8 Hex Nut

### REQUIRED TOOLS (NOT INCLUDED)


- 1 - 13MM WRENCH
- 1 - 13MM SOCKET

**NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED**

**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/4**

# INSTRUCTIONS

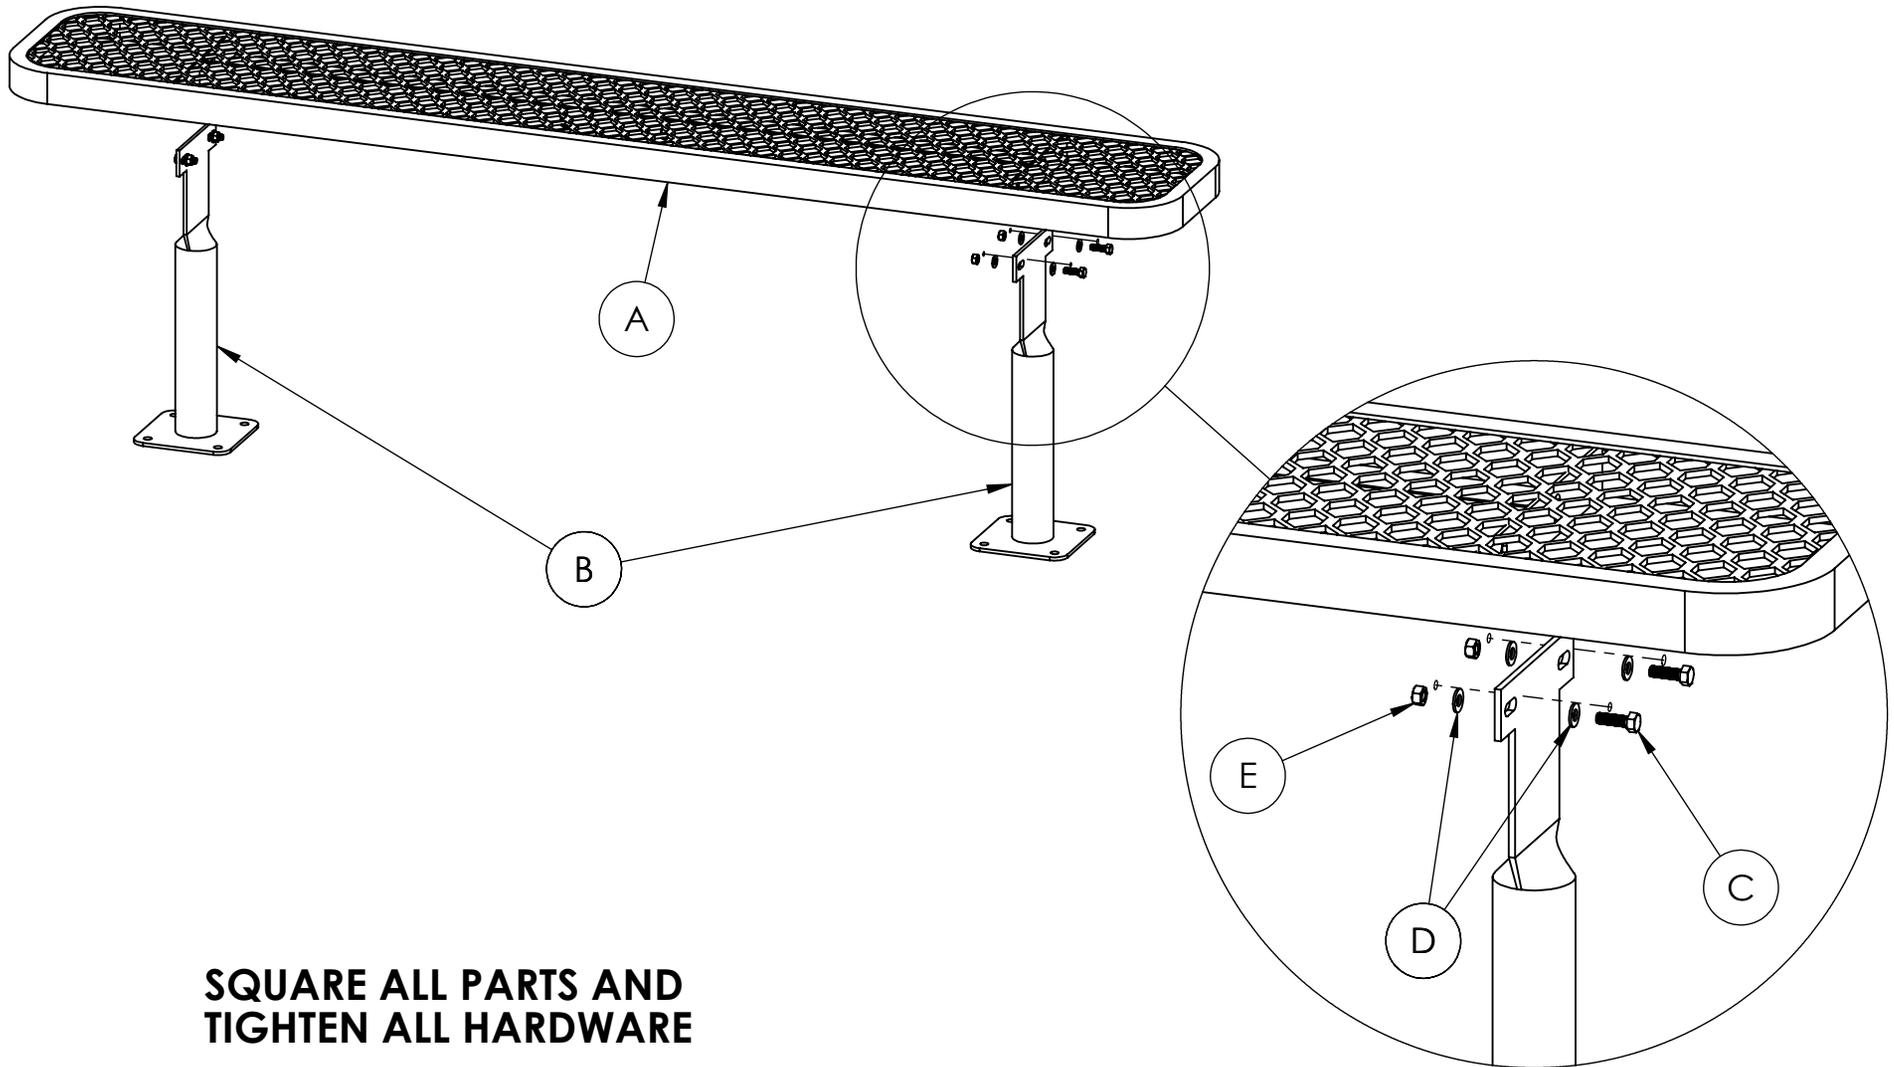

**SQUARE ALL PARTS AND  
TIGHTEN ALL HARDWARE**

**ATTACH SEATS  
TO BENCH ENDS**

**3/4**