



### **INSTRUCTIONS**


Inground Mount

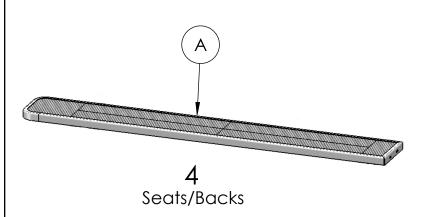


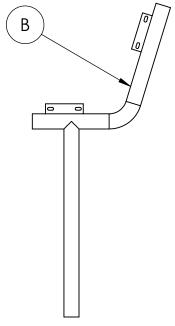


Bench Ends

### **HARDWARE**

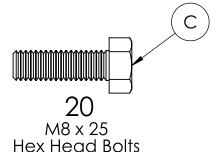



40 M8 Flat Washer




20 Lorem ipsum M8 Hex Nut

# REQUIRED TOOLS (NOT INCLUDED)

1 - 13MM WRENCH 1 - 13MM SOCKET NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED


HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY

2/4

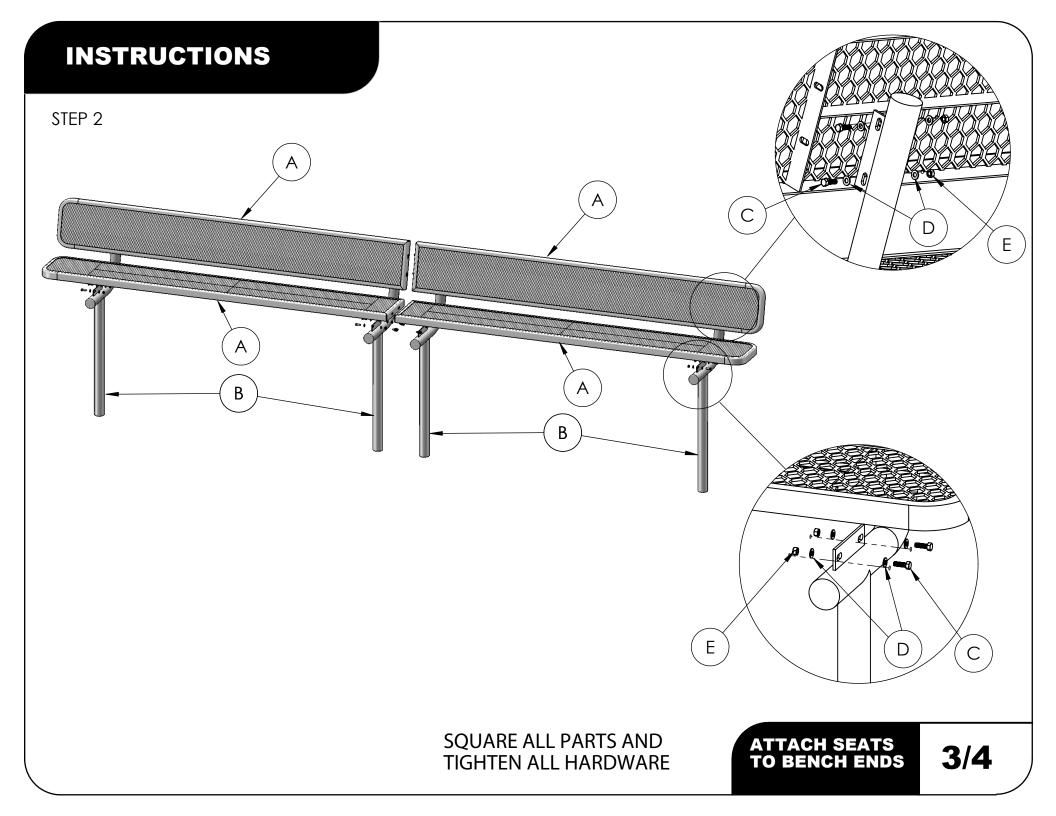



### **INSTRUCTIONS**


Surface Mount

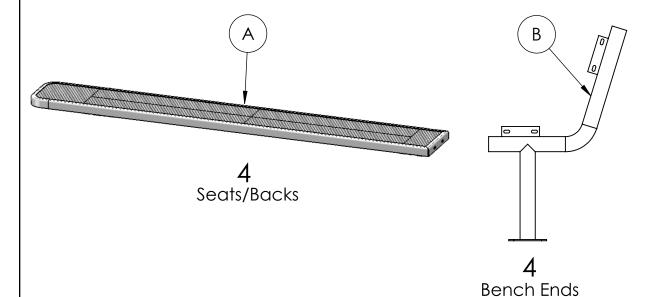

#### **HARDWARE**

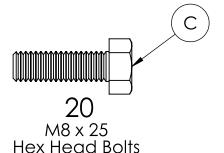

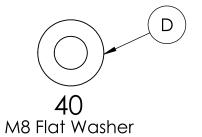



20 M8 Hex Nut

# REQUIRED TOOLS (NOT INCLUDED)

1 - 13MM WRENCH 1 - 13MM SOCKET NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED

HARDWARE & TOOLS REQUIRED FOR ASSEMBLY

2/4

