




Square Surface Mount Table Instructions BM1215

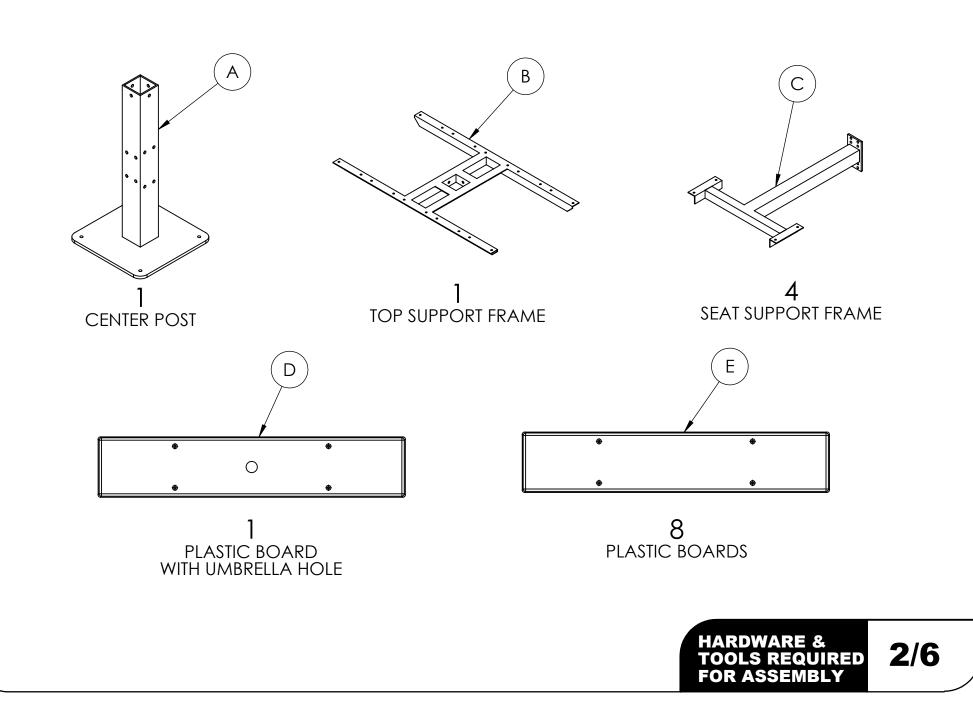


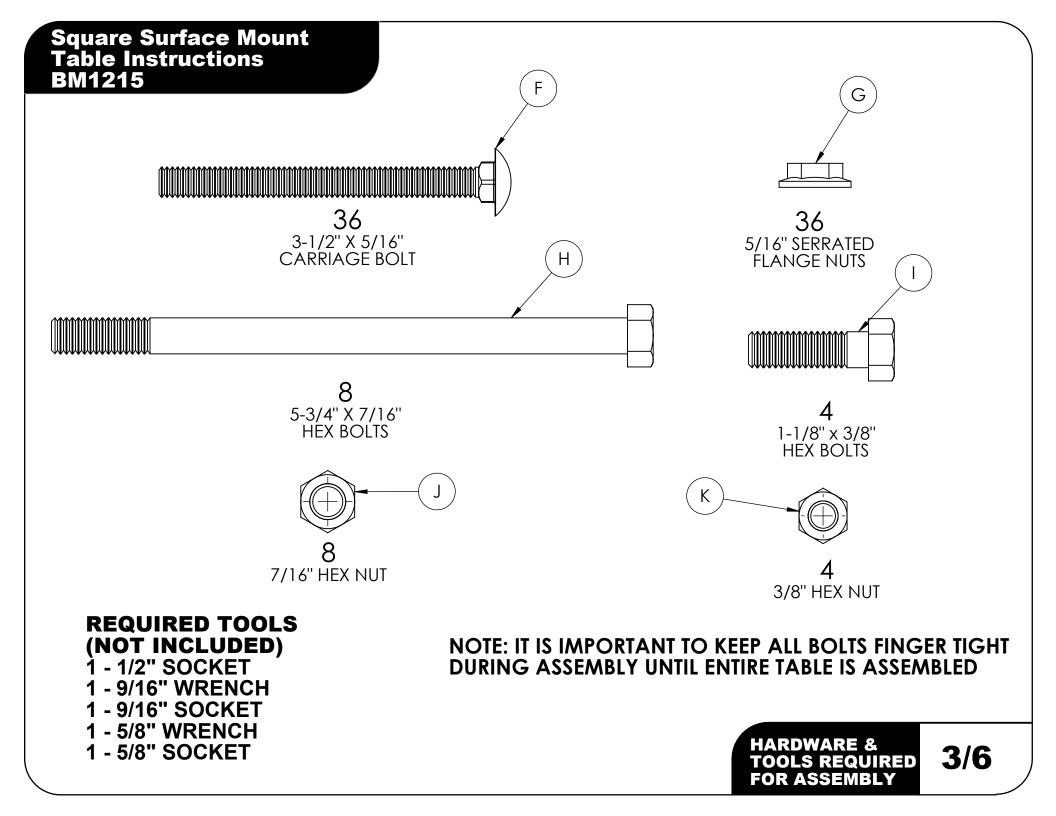

Square Surface Mount Table Instructions BM1215


- **STEP 1** Seat Frame Assembly
- Stand the center post (A) up right Bolt two seat supports (C) to opposite sides with four 5-3/4" x 7/16" hex bolt (H) and four 7/16" hex nuts
- Repeat for the remaining two seat supports

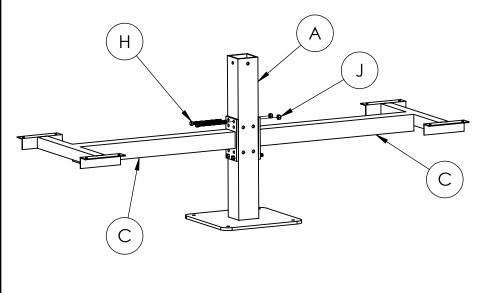


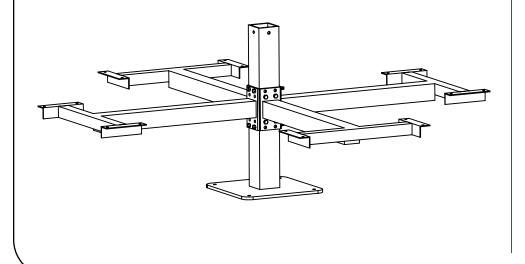

STEP 2 Top Support Assembly

- Slide the top support frame (B) over the top to the center post (A)
- Align the holes in the center post and the top ٠ support frame
- Secure the top support frame (B) to the center • post (A) with four 1-1/8" x 3/8" hex bolts(I) and four 3/8" hex nuts (K)

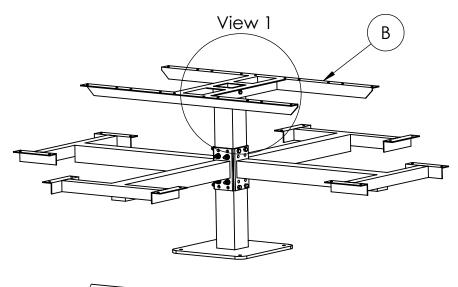

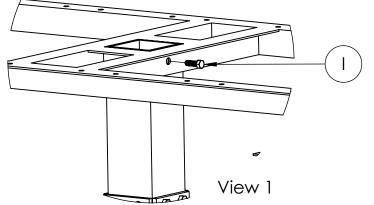



FRAME 4/6 ASSEMBLY

Square Surface Mount Table Instructions BM1215

STEP 3 Top Assembly


- Place the board with the umbrella hole (D) in the ٠ center of the top support frame (B)
- Place four other boards (E) on the top support ٠ frame (B)
- Secure the boards to the top support frame with ٠ twenty 3-1/2" x 5/16" carriage bolts (F) and 5/16" flange nuts (G)

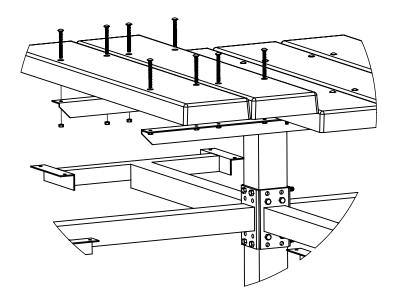

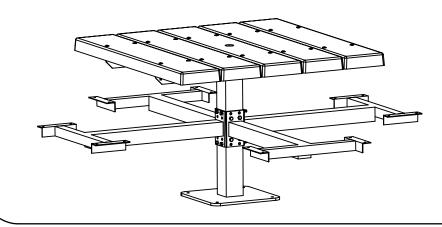

STEP 4 Seat Assembly

- Place a board (E) over the seat support frame (C) Align the holes in the board with the holes in the frame Secure the board to the frame with four 3-1/2" x 5/16" ٠
- ٠ carriage bolts (F) and 5/16" flange nuts (G)
- Repeat for each seat area ٠
- Secure table to around with proper hardware before • use

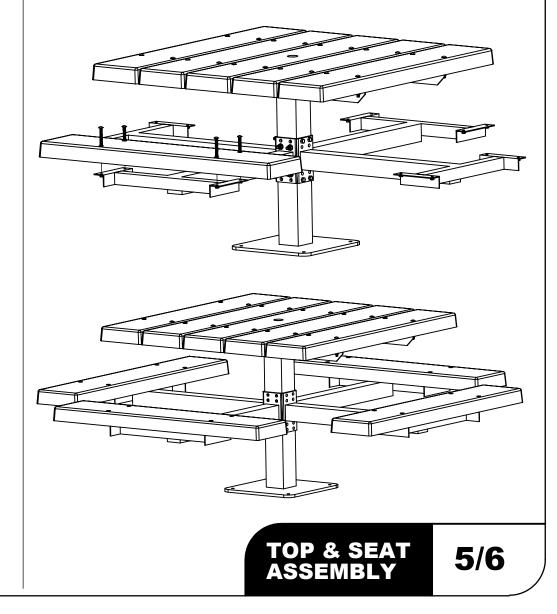

Square Surface Mount Table Specifications BM1215

